OWNER'S MANUAL 2020



250 SX-F 250 XC-F 250 SX-F PRADO

Art. no. 3214129en





Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports vehicle that will continue giving you pleasure for a long time if you maintain it properly.

We wish you good and safe riding at all times!

Enter the serial numbers of your vehicle below.

Vehicle identification number (p. 13)	Dealer's stamp
Engine number (🕮 p. 13)	

The Owner's Manual contained the latest information for this model series at the time of going to print. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained herein are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from figures and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2019 KTM Sportmotorcycle GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

KTM applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard. Issued by: TÜV Management Service

REG.NO. 12 100 6061

KTM Sportmotorcycle GmbH Stallhofnerstraße 3 5230 Mattighofen, Austria

This document is valid for the following models:

250 SX-F EU (F8101T5)

250 SX-F US (F8175T5)

250 XC-F US (F8175T0)

250 SX-F PRADO EU (F8101T6)



TABLE OF CONTENTS

1	MEANS	S OF REPRESENTATION	. 5	7	PREPA	ARING FOR USE	22
	1.1	Symbols used	. 5		7.1	Advice on preparing for first use	22
	1.2	Formats used			7.2	Running in the engine	23
2	CVEEL	Y ADVICE			7.3	Starting power of lithium-ion	
_					7.4	batteries at low temperatures	23
	2.1	Use definition – intended use			7.4	Preparing the vehicle for difficult operating conditions	24
	2.2	Misuse			7.5	Preparing the vehicle for riding on	
	2.3	Safety advice			7.5	dry sand	24
	2.4	Degrees of risk and symbols			7.6	Preparing the vehicle for riding on	
	2.5 2.6	Tampering warning Safe operation				wet sand	25
	2.7	Protective clothing			7.7	Preparing the vehicle for riding on	
	2.8	Work rules				wet and muddy circuits	25
	2.9	Environment			7.8	Preparing vehicle for high	0.0
	2.10	Owner's Manual			7.0	temperatures or slow riding	26
_					7.9	Preparing the vehicle for low temperatures or snow	26
3	IMPOR	TANT NOTES	10				
	3.1	Manufacturer and implied warranty	10	8	RIDING	G INSTRUCTIONS	27
	3.2	Fuel, auxiliary substances			8.1	Checks and maintenance measures	
	3.3	Spare parts, accessories				when preparing for use	
	3.4	Service	10		8.2	Starting the vehicle	
	3.5	Figures	10		8.3	Activating launch control	28
	3.6	Customer service	10		8.4	Activating traction control	29
4	VIEW C	OF VEHICLE	11		8.5	Starting off	29
7	VILVV C	VEITICE	11		8.6	Shifting, riding	30
	4.1	View of vehicle, front left (example)	11		8.7	Applying the brakes	30
	4.2	View of vehicle, rear right			8.8	Stopping, parking	31
		(example)	12		8.9	Transporting	31
5	SERIAI	NUMBERS	13		8.10	Refueling	32
	5.1	Vehicle identification number	13	9	SERVI	CE SCHEDULE	34
	5.2	Type label			9.1	Additional information	31
	5.3	Engine number			9.1	Required work	
	5.4	Fork article number			9.3	Recommended work	
	5.5	Shock absorber article number			9.3	Recommended work	33
_				10	TUNIN	IG THE CHASSIS	37
6	CONTR	OLS	15		10.1	Checking the basic chassis setting	
	6.1	Clutch lever	15			with rider's weight	37
	6.2	Hand brake lever	15		10.2	Air suspension XACT 5548	37
	6.3	Throttle grip	15		10.3	Compression damping of the shock	
	6.4	Switch-off button	15			absorber	38
	6.5	Start button	16		10.4	Adjusting the low-speed	
	6.6	Combination switch	16			compression damping of the shock	
	6.7	Overview of indicator lamps	16			absorber	38
	6.8	Service hour counter	17		10.5	Adjusting the high-speed	
	6.9	Opening fuel tank filler cap	17			compression damping of the shock	20
	6.10	Closing the fuel tank filler cap	18		10.6	absorber	39
	6.11	Cold start button			10.6	Adjusting the rebound damping of the shock absorber	4∩
	6.12	Idle speed adjusting screw	20		10.7	Measuring the dimension of the rear	+0
	6.13	Shift lever			10./	wheel unloaded	40
	6.14	Foot brake lever	21		10.8	Checking the static sag of the shock	٠.٥
	6.15	Plug-in stand (all SX-F models)	21			absorber	41
	6.16	Side stand (XC-F US)			10.9	Checking the riding sag of the shock	
						absorber	42

TABLE OF CONTENTS

	10.10	Adjusting the spring preload of the				Removing the fuel tank 4	
		shock absorber 4			11.34	Installing the fuel tank 4	73
		Adjusting the riding sag 4	43		11.35	Checking for chain dirt	
	10.12	Checking the basic setting of the				accumulation	75
		fork			11.36	Cleaning the chain	75
		Adjusting the fork air pressure	45		11.37	Checking the chain tension	76
	10.14	Adjusting the compression damping			11.38	Adjusting the chain tension	77
		of the fork	46		11.39	Checking the chain, rear sprocket,	
	10.15	Adjusting the rebound damping of				engine sprocket, and chain guide	78
		the fork			11.40	Checking the frame 4	80
		Handlebar position			11.41	Checking the link fork 4	80
	10.17	Adjusting the handlebar position 4	48		11.42	Checking throttle cable routing	80
1	SERVIC	CE WORK ON THE CHASSIS	49		11.43	Checking the rubber grips	81
	OLIVIO		13			Adjusting the basic position of the	
	11.1	Raising the motorcycle with a lift				clutch lever	82
		stand	49		11.45	Checking/correcting the fluid level of	
	11.2	Removing the motorcycle from the				the hydraulic clutch	82
		lift stand			11.46	Changing the hydraulic clutch	
	11.3	Bleeding the fork legs	50			fluid 4	83
	11.4	Cleaning the dust boots of the fork		10		OVOTEM	٥.
		legs		12	BRAKE	SYSTEM	85
	11.5	Removing the fork protector	51		12.1	Checking the free travel of the hand	
	11.6	Installing the fork protector	51			brake lever	85
	11.7	Removing motor guard (PRADO)	51		12.2	Adjusting the basic position of the	
	11.8	Installing the motor guard (PRADO)	52			hand brake lever	85
	11.9	Removing the fork legs 4	52		12.3	Checking the brake discs	85
	11.10	Installing the fork legs 4	53		12.4	Checking the front brake fluid level	86
	11.11	Removing the lower triple clamp 4	54		12.5	Adding front brake fluid 4	87
		Installing the lower triple clamp 4			12.6	Checking the front brake linings	
		Checking the steering head bearing			12.7	Changing the brake linings of the	
		play	58			front brake 4	88
	11.14	Adjusting the steering head bearing			12.8	Checking the free travel of foot brake	
		play 🛂	59			lever	91
	11.15	Lubricating the steering head			12.9	Adjusting the basic position of the	
		bearing 4	60			foot brake lever 4	91
	11.16	Removing the start number plate	60		12.10	Checking the rear brake fluid level	92
	11.17	Installing the start number plate	61			Adding rear brake fluid 4	
		Removing front fender				Checking the brake linings of the	
		Installing front fender				rear brake	94
		Removing the shock absorber 4			12.13	Changing the brake linings of the	
		Installing the shock absorber ◀				rear brake 🔦	94
		Removing the seat		12	\\/\\\	c TIDEC	07
		Mounting the seat		13	WHEEL	S, TIRES	97
		Removing the air filter box cover			13.1	Removing the front wheel 4	97
					13.2	Installing the front wheel 4	
		Installing the air filter box cover			13.3	Removing the rear wheel 4	
		Removing the air filter	67		13.4	Installing the rear wheel 4 1	
	11.27	Cleaning the air filter and air filter	60		13.5	Checking the tire condition	
	11 20	box			13.6	Checking tire pressure 1	
		Installing the air filter	69		13.7	Checking the spoke tension	
	11.29	Preparing air filter box cover for	60				
	11 20	Securing 4		14	ELECT	RICAL SYSTEM 1	04
		Removing the main silencer			14.1	Removing the 12-V battery 4 1	04
		Installing the main silencer	/U		14.1	Installing the 12-V battery \(\)	
	11.32	Changing the glass fiber yarn filling	70		14.2		
		of the main silencer 4	/ U		14.5	Charging the 12-V battery 4 1	US

TABLE OF CONTENTS

14.5 Diagnostics connector 107 22.7.1 All EU models 13		14.4	Changing main fuse			22.7 Fork	
15		14.5	Diagnostics connector	107		22.7.1 All EU models	
15.1 Cooling system	15	COOLIN	NG SYSTEM	108			
15.2 Checking the antifreeze and colant level		15 1	Cooling system	108			
Coolant level				100			
15.3 Checking the coolant 109 15.4 Draining the coolant 109 15.5 Refilling with coolant 110 15.6 Changing the coolant 111 15.6 Changing the coolant 113 15.1 Changing the throttle cable play 113 15.2 Adjusting the characteristic map of the throttle response 115 15.6 Changing the mapping 116 15.5 Adjusting the idle speed 116 15.6 Adjusting the idle speed 116 15.6 Changing the idle speed 116 15.6 Changing the basic position of the shift lever 118 15.8 Adjusting the basic position of the shift lever 118 15.8 Adjusting the basic position of the shift lever 118 15.7 Checking the engine oil level 120 17.1 Changing the fuel screen 119 17.1 Changing the fuel screen 119 17.2 Checking the engine oil level 120 17.3 Changing the engine oil and oil filter, cleaning the oil screen 121 17.4 Adding engine oil 123 121 17.4 Adding engine oil 123 125 13.1 Cleaning the motorcycle 126 127 19.1 Storage 128 127 19.2 Engine tightening torques 134 132 133 134 134 135 136		10.2		108			
15.4 Draining the coolant 109 15.5 Refilling with coolant 110 15.6 Changing the coolant 111 23 SUBSTANCES 14 16.1 Checking throttle cable play 113 16.2 Adjusting the throttle cable play 113 16.3 Adjusting the characteristic map of the throttle response 115 16.4 Changing the characteristic map of the throttle response 116 16.5 Adjusting the characteristic map of the throttle response 116 16.6 Teaching the mapping 116 16.6 Teaching the throttle valve position 117 16.7 Checking the basic position of the shift lever 118 16.8 Adjusting the leasic position of the shift lever 118 17 SERVICE WORK ON THE ENGINE 119 17.2 Changing the engine oil level 120 17.3 Changing the engine oil and oil filter, cleaning the oil screen 119 17.4 Adding engine oil 123 18 CLEANING, CARE 125 18.1 Cleaning the motorcycle 125 19 STORAGE 127 19.1 Storage 128 127 19.2 Putting into operation after storage 128 12		15.3					
15.5 Refilling with coolant 110 15.6 Changing the coolant		15.4					
16 TUNING THE ENGINE		15.5	Refilling with coolant 4	110			
16.1 Checking throttle cable play		15.6	Changing the coolant	111	23	SUBSTANCES	143
16.2 Adjusting the throttle cable play 113 16.3 Adjusting the characteristic map of the throttle response 115 16.4 Changing the mapping 116 16.5 Adjusting the idle speed 117 16.6 Teaching the throttle valve position 117 16.7 Checking the basic position of the shift lever 118 16.8 Adjusting the discreen 118 16.8 Adjusting the basic position of the shift lever 118 17 SERVICE WORK NO THE ENGINE 119 17.1 Changing the engine oil level 120 17.3 Changing the engine oil screen 121 17.4 Adding engine oil 123 18 CLEANING, CARE 125 18.1 Cleaning the motorcycle 125 19 STORAGE 127 19.1 Storage 128 20 TROUBLESHOOTING 129 21 BLINK CODE 131 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine 0il 136 22.3.3 Fuel 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137	16	TUNIN	G THE ENGINE	113	24		
113 16.3 Adjusting the characteristic map of the throttle response 115 16.4 Changing the mapping 116 16.5 Adjusting the idle speed 116 16.6 Teaching the throttle valve position		16.1	Checking throttle cable play	113	25	STANDARDS	147
16.3 Adjusting the characteristic map of the throttle response \		16.2			26	INDEX OF SPECIAL TERMS	148
the throttle response 115 16.4 Changing the mapping 116 16.5 Adjusting the idle speed 116 16.6 Teaching the throttle valve position 117 16.7 Checking the basic position of the shift lever 118 16.8 Adjusting the idle speed 118 16.8 Adjusting the basic position of the shift lever 118 16.8 Adjusting the basic position of the shift lever 118 17 SERVICE WORK ON THE ENGINE 119 17.1 Changing the fuel screen 119 17.2 Checking the engine oil level 120 17.3 Changing the engine oil level 120 17.4 Adding engine oil 123 18 CLEANING, CARE 125 18.1 Cleaning the motorcycle 125 18.1 Cleaning the motorcycle 125 19 STORAGE 127 19.2 Putting into operation after storage 128 20 TROUBLESHOOTING 129 21 BLINK CODE 131 22 TECHNICAL DATA 133 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.3 Fuel 136 22.4 Chassis 136 22.4 Chassis 136 22.5 Electrical system 137		1.0.0	• •	113	27	LIST OF ARREVIATIONS	1/10
16.4 Changing the mapping		16.3		115	۷,		
16.5 Adjusting the idle speed		16 /			28	LIST OF SYMBOLS	150
16.6 Teaching the throttle valve position						28.1 Yellow and orange symbols	150
position				110	INIDI		
16.7 Checking the basic position of the shift lever		10.0		117	INDI	£X	151
16.8 Adjusting the basic position of the shift lever		16.7					
shift lever ■ 118 17 SERVICE WORK ON THE ENGINE 119 17.1 Changing the fuel screen ■ 119 17.2 Checking the engine oil level 120 17.3 Changing the engine oil and oil filter, cleaning the oil screen ■ 121 17.4 Adding engine oil 123 18 CLEANING, CARE 125 18.1 Cleaning the motorcycle 125 19 STORAGE 127 19.1 Storage 127 19.2 Putting into operation after storage 128 20 TROUBLESHOOTING 129 21 BLINK CODE 131 22 TECHNICAL DATA 133 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine 0i 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137			shift lever	118			
17 SERVICE WORK ON THE ENGINE		16.8		110			
17.1 Changing the fuel screen			shift lever 4	118			
17.2 Checking the engine oil level	17	SERVIC	CE WORK ON THE ENGINE	119			
17.3 Changing the engine oil and oil filter, cleaning the oil screen 121 17.4 Adding engine oil		17.1					
filter, cleaning the oil screen				120			
17.4 Adding engine oil 123 18 CLEANING, CARE 125 18.1 Cleaning the motorcycle 125 19 STORAGE 127 19.1 Storage 127 19.2 Putting into operation after storage 128 20 TROUBLESHOOTING 129 21 BLINK CODE 131 22 TECHNICAL DATA 133 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137		17.3		101			
18 CLEANING, CARE 125 18.1 Cleaning the motorcycle 125 19 STORAGE 127 19.1 Storage 127 19.2 Putting into operation after storage 128 20 TROUBLESHOOTING 129 21 BLINK CODE 131 22 TECHNICAL DATA 133 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137		17 /	_				
18.1 Cleaning the motorcycle 125 19 STORAGE 127 19.1 Storage 127 19.2 Putting into operation after storage 128 20 TROUBLESHOOTING 129 21 BLINK CODE 131 22 TECHNICAL DATA 133 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137							
19 STORAGE	18	CLEAN	ING, CARE	125			
19.1 Storage 127 19.2 Putting into operation after storage 128 20 TROUBLESHOOTING 129 21 BLINK CODE 131 22 TECHNICAL DATA 133 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137		18.1	Cleaning the motorcycle	125			
19.2 Putting into operation after storage	19	STORA	GE	127			
19.2 Putting into operation after storage		19.1	Storage	127			
20 TROUBLESHOOTING 129 21 BLINK CODE 131 22 TECHNICAL DATA 133 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137		19.2	Putting into operation after				
21 BLINK CODE 131 22 TECHNICAL DATA 133 22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137			storage	128			
22 TECHNICAL DATA	20	TROUB	BLESHOOTING	129			
22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137	21	BLINK	CODE	131			
22.1 Engine 133 22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137	22	TECHN	IICAI DATA	133			
22.2 Engine tightening torques 134 22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137							
22.3 Capacities 136 22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137			-				
22.3.1 Engine oil 136 22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137							
22.3.2 Coolant 136 22.3.3 Fuel 136 22.4 Chassis 136 22.5 Electrical system 137							
22.3.3 Fuel							
22.4 Chassis 136 22.5 Electrical system 137							
22.5 Electrical system 137							
,							
22.b Tires							
		22.6	Tires	13/			

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop! Your motorcycle will be optimally cared for there by specially trained experts using the auxiliary tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Indicates a voltage measurement.



Indicates a current measurement.



Indicates the end of an activity, including potential rework.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name Indicates a proprietary name.

Name® Indicates a protected name.

Brand™ Indicates a brand available on the open market.

Underlined terms Refer to technical details of the vehicle or indicate technical terms, which

are explained in the glossary.

2.1 Use definition – intended use

(all SX-F models)

This vehicle has been designed and built to withstand the normal stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Info

Only operate this vehicle in closed-off areas remote from public road traffic.

(XC-F US)

This vehicle has been designed and built to withstand the normal stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Info

Only operate this vehicle in closed-off areas remote from public road traffic.

This vehicle is designed for use in offroad endurance competition, and not primarily for use in motocross.

2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Degrees of risk and symbols



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Note

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of servicing, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencers, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.6 Safe operation



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

The vehicle should only be used by trained persons.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

2.7 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, KTM recommends that you only operate the vehicle while wearing protective clothing.

2.8 Work rules

Unless specified otherwise, the ignition must be turned off during all work (models with ignition lock, models with remote key) or the engine must be at a standstill (models without ignition lock or remote key).

Special tools are necessary for certain tasks. The tools are not a component of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, seals, sealing rings, O-rings, pins, and lock washers).

In the case of certain screws, a screw adhesive (e.g. **Loctite®**) is required. Observe the manufacturer's instructions.

If thread locker (e.g., **Precote®**) has already been applied to a new part, do not apply any additional thread locker. After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After completing a repair or service work, check the operating safety of the vehicle.

2.9 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to advise you.

2.10 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer.

The Owner's Manual is an important component of the vehicle and must be handed over to the new owner if the vehicle is sold.

The Owner's Manual is also available for download from your authorized KTM dealer and on the KTM website. International KTM Website: http://www.ktm.com

9

3.1 Manufacturer and implied warranty

The work prescribed in the service schedule must only be carried out in an authorized KTM workshop and confirmed in the **KTM Dealer.net**, as otherwise all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer warranty.

3.2 Fuel, auxiliary substances



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use fuels and auxiliary substances in accordance with the Owner's Manual and specification.

3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss.

Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized KTM dealer will be glad to advise you.

The current KTM PowerParts for your vehicle can be found on the KTM website.

International KTM Website: http://www.ktm.com

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.6 Customer service

Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.

International KTM Website: http://www.ktm.com


4.1 View of vehicle, front left (example)




- 1 Hand brake lever (p. 15)
- 2 Clutch lever (p. 15)
- 3 Fuel tank filler cap
- 4 Air filter box cover
- 6 Plug-in stand (

 p. 21) (all SX-F models)
- 6 Cold start button (p. 19)
- 7 Engine number (p. 13)
- 8 Shift lever (p. 20)

4.2 View of vehicle, rear right (example)

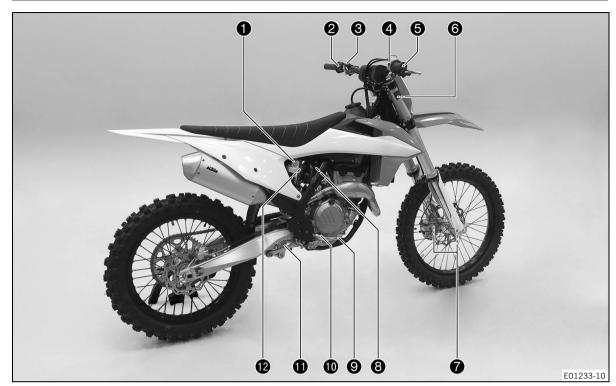


- Shock absorber compression adjustment
- 2 Combination switch (p. 16)
- 3 Switch-off button (p. 15)
- 4 Start button (p. 16)
- **5** Throttle grip (p. 15)
- 6 Vehicle identification number (p. 13)
- **6** Type label (p. 13)
- Fork article number (p. 13)
- 8 Idle speed adjusting screw (p. 20)
- Foot brake lever (
 p. 21)
- **10** Engine oil level viewer
- Shock absorber rebound adjustment
- Shock absorber article number (p. 14)

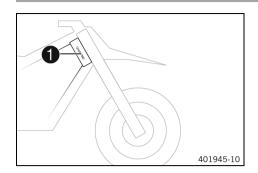


The vehicle identification number **1** is stamped on the right side of the steering head.

5.2 Type label

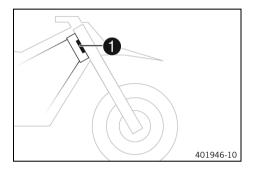


The type label 1 is fixed to the front of the steering head.

5.3 Engine number

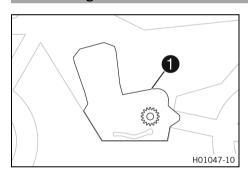


Engine number **1** is located on the left side of the engine over the engine sprocket.


5.4 Fork article number

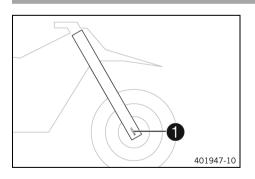

The fork article number $\ensuremath{\mathbf{1}}$ is stamped on the inside of the axle clamp.

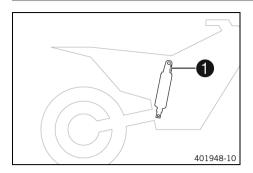


Shock absorber article number 1 is stamped on the top of the shock absorber above the adjusting ring towards the engine side.

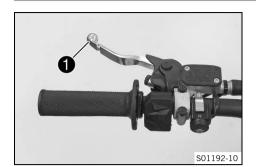


The clutch lever **1** is fitted on the left side of the handlebar. The clutch is hydraulically operated and self-adjusting.

6.2 Hand brake lever

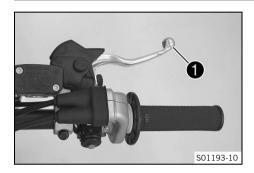


Hand brake lever 1 is fitted on the right side of the handlebar. The front brake is engaged using the hand brake lever.

6.3 Throttle grip

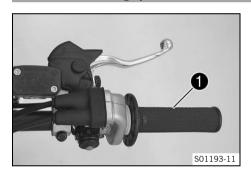

The throttle grip 1 is fitted on the right side of the handlebar.

6.4 Switch-off button

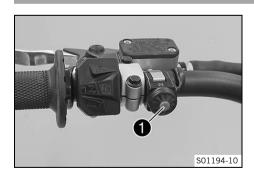

Switch-off button **1** is fitted on the left side of the handlebar. **Possible states**

- The switch-off button

 is in the basic position In this position, the ignition circuit is closed and the engine can be started.
- The switch-off button ⋈ is pressed In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start.

6.5 Start button




Start button 1 is fitted on the right side of the handlebar.

Possible states

- The start button ③ is in the basic position
- The start button (3) is pressed In this position, the starter motor is actuated.

6.6 Combination switch

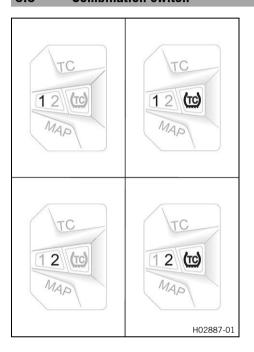

The combination switch is fitted on the left side of the handlebar.


Possible states

1	STANDARD – STANDARD mapping is activated when LED 1 lights up.				
1TC	STANDARD with TC – STANDARD mapping with traction control is activated when LED 1 and TC light up				
2	ADVANCED – ADVANCED mapping is activated, when LED 2 lights up.				
2TC	ADVANCED with TC – ADVANCED mapping with traction control is activated when LED 2 and TC light up.				

The engine characteristic can be changed using button $\ensuremath{\mathsf{MAP}}$ on the combination switch.

The <u>launch control</u> and the traction control can also be activated using the combination switch.

6.7 Overview of indicator lamps

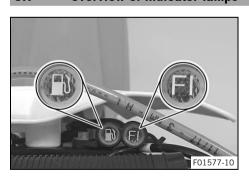

Possible states



Malfunction indicator lamp lights up/flashes orange – The <u>OBD</u> has detected a malfunction in the vehicle electronics.



Malfunction indicator lamp flashes orange rapidly – Launch control is activated.

(XC-F US)



Fuel level warning lamp lights up orange – The fuel level has reached the reserve mark.

6.8 Service hour counter



The service hour counter 1 is fitted in front of the handlebar. It shows the total number of service hours of the engine. The service hour counter begins counting when the engine is started and stops when the engine is switched off.



Info

The value indicated by the service hour counter cannot be cleared or adjusted.

6.9 Opening fuel tank filler cap



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



Note


Environmental hazard Improper handling of fuel is a danger to the environment.

Do not allow fuel to enter the groundwater, the soil, or the sewage system.

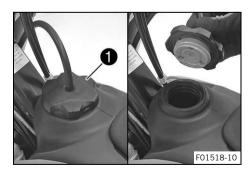

(all SX-F models)

Turn fuel tank filler cap counterclockwise and lift it off

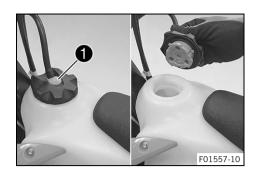


(XC-F US)

Press release button ①, turn the fuel tank filler cap counterclockwise, and lift it off.



6.10 Closing the fuel tank filler cap

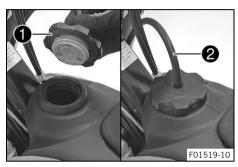


(all SX-F models)

 Mount fuel tank filler cap and turn it clockwise until the fuel tank is tightly closed.



Info

Route fuel tank breather hose 2 without kinks.

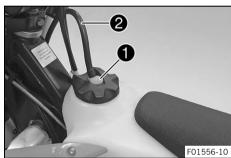

(XC-F US)




Info

Route fuel tank breather hose **2** without kinks.




6.11 Cold start button

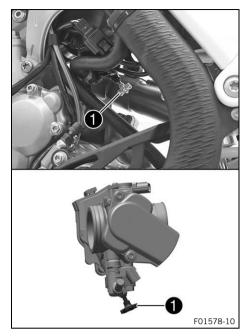

(all SX-F models)

The cold start button **1** is fitted to the bottom of the throttle valve body.

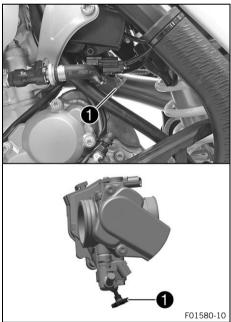

(XC-F US)

The cold start button **1** is fitted to the bottom of the throttle valve body.

The electronic fuel injection system extends the injection time if the engine is cold and the ambient temperature is low. To help the engine burn the increased fuel quantity, it must be supplied with additional oxygen by pushing the cold start button.

After briefly opening up the throttle and then releasing the throttle grip again, or turning the throttle grip towards the front, the cold start button returns to its original position.




Info

Check whether the cold start button has returned to its basic position.

Possible states

- The cold start button is activated The cold start button is pushed in all the way.
- The cold start button is deactivated The cold start button is in its basic position.

6.12 Idle speed adjusting screw

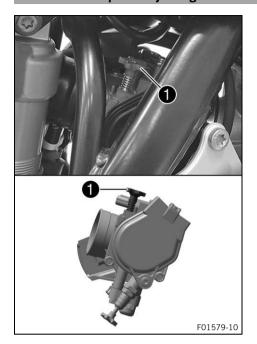

The idle setting of the throttle valve body substantially influences the vehicle's starting behavior, a stable idle speed, and the vehicle's response when the throttle is opened.


An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.

The idle speed is adjusted using the idle speed adjusting screw **1**.


Increase the idle speed by turning the idle speed adjusting screw clockwise.

Decrease the idle speed by turning the idle speed adjusting screw counterclockwise.

6.13 Shift lever

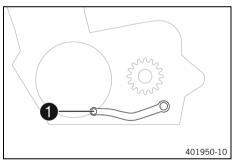


Shift lever 1 is mounted on the left side of the engine.

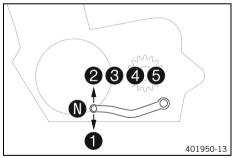

(all SX-F models)


The gear positions can be seen in the photograph. The neutral or idle position is between the first and second gears.

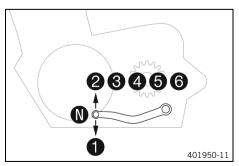

(XC-F US)


The gear positions can be seen in the photograph. The neutral or idle position is between the first and second gears.

6.14 Foot brake lever

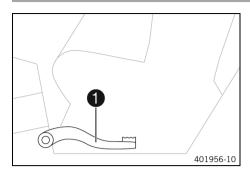

Foot brake lever **1** is located in front of the right footrest. The foot brake lever is used to activate the rear brake.

6.15 Plug-in stand (all SX-F models)

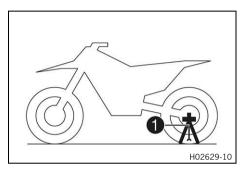

The support for plug-in stand 1 is the left side of the wheel spin-

The plug-in stand is used to park the motorcycle.


The plug-in stand is used as a fork locker when transporting the motorcycle.




Info

Remove the plug-in stand before riding. The tool can be attached to the plug-in stand holders.

6.16 Side stand (XC-F US)

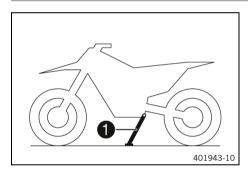

The side stand 1 is located on the left of the vehicle.

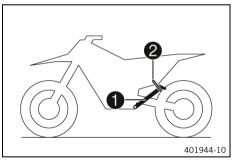

The side stand is used for parking the motorcycle.



Info

When you are riding, side stand 1 must be folded up and secured with rubber strap 2.

7.1 Advice on preparing for first use



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents An unadapted riding style impairs the handling characteristic.

- Adapt your riding speed to the road conditions and your riding ability.



Warning

Danger of accidents The vehicle is not designed to carry passengers.

Do not ride with a passenger.



Warning

Danger of accidents The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

- Take your foot off the foot brake lever when you are not braking.



Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

- Do not exceed the maximum permissible overall weight or the axle loads.



Warning

Risk of misappropriation People who act without authorization endanger themselves and others.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.



Info

When using the motorcycle, remember that others may be disturbed by excessive noise.

- Ensure that the pre-sales inspection work has been carried out by an authorized KTM workshop.
- ✓ You will receive a delivery certificate when the vehicle is handed over.
- Read the entire Owner's Manual before riding for the first time.
- Get to know the controls.
- Adjust the basic position of the clutch lever. (
 p. 82)
- Adjust the basic position of the hand brake lever. (p. 85)

- Adjust the basic position of the foot brake lever. ◄ (□ p. 91)
- Adjust the basic position of the shift lever. ◄ (♀ p. 118)
- Get used to the handling characteristic of the motorcycle on suitable terrain before undertaking a more challenging ride.



Info

This vehicle is not approved for use on public roads.

When off road, it is recommended that you are accompanied by another person on another vehicle so that you can help each other.

- Also, ride as slowly as possible and in a standing position to get a better feel for the motorcycle.
- Do not undertake any off-road trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.

(all SX-F models)

Do not carry the luggage.

(XC-F US)

If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure
even weight distribution between the front and rear wheels.



Info

Motorcycles react sensitively to any changes of weight distribution.

Do not exceed the maximum permissible weight and maximum permissible axle loads.
 Guideline

Maximum permissible overall weight	335 kg (739 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)


7.2 Running in the engine

During the running-in phase, do not exceed the specified engine speed and engine performance.
 Guideline

Maximum engine speed		
During the first operating hour	7,000 rpm	
Maximum engine performance		
During the first 3 operating hours	≤ 75 %	

- Avoid fully opening the throttle!

7.3 Starting power of lithium-ion batteries at low temperatures

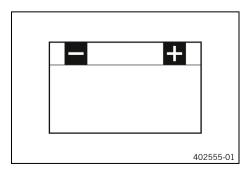

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over $15\ ^{\circ}\text{C}$ (60 $^{\circ}\text{F}$). At low temperatures, however, the starting power of lithium-ion batteries drops to below that of lead batteries

Multiple starting attempts may be needed. Press the start button for 5 seconds, and wait 30 seconds between attempts. The pauses are necessary so that the heat created can distribute through the lithium-ion battery and the 12-V battery is not damaged.

23

If the charged lithium-ion battery is unable to actuate the electric starter when temperatures are below 15 °C (60 °F), the battery is not faulty, but needs to be warmed up internally to increase its starting power (current output).

The starting power increases as the battery warms up.

7.4 Preparing the vehicle for difficult operating conditions



Info

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can lead to considerably more rapid wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

Clean the air filter and air filter box. 4 (
 p. 68)



Info

Check the air filter approx. every 30 minutes.

- Prepare air filter box cover for securing. ◀ (♀ p. 69)
- Check the electrical connector for humidity and corrosion and to ensure it is firmly seated.
 - » If humidity, corrosion, or damage is found:
 - Clean and dry the connector, or change it if necessary.

Difficult operating conditions are:

- Rides on dry sand. (
 p. 24)
- Rides on wet sand. (p. 25)
- Rides at high temperatures or slow riding. (p. 26)

7.5 Preparing the vehicle for riding on dry sand



Mount the air filter dust cover.

Air filter dust cover (79006920000)



Info

Observe the fitting instructions for KTM PowerParts.



- Mount the air filter sand cover.

Air filter sand cover (79006922000)



Info

Observe the fitting instructions for $\mbox{KTM PowerParts}.$

24



Clean the chain.

Chain cleaner (p. 145)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray (p. 146)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

Condition

Regular use in sand

Change the piston every 20 operating hours.

7.6 Preparing the vehicle for riding on wet sand



Mount the air filter rain cover.

Air filter rain cover (79006921000)



Observe the fitting instructions for KTM PowerParts.



Clean the chain.

Chain cleaner (🕮 p. 145)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray (🕮 p. 146)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

Condition

Regular use in sand

Change the piston every 20 operating hours.

7.7 Preparing the vehicle for riding on wet and muddy circuits



Mount the air filter rain cover.

Air filter rain cover (79006921000)



Info

Observe the fitting instructions for KTM PowerParts.



- Mount the steel sprocket.
- Clean the motorcycle. (
 p. 125)
- Straighten the bent radiator fins carefully.

7.8 Preparing vehicle for high temperatures or slow riding



- Adjust the secondary drive to the road conditions.



Info

The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary ratio.

- Clean the chain.

Chain cleaner (🕮 p. 145)

- Clean the radiator fins.
- Straighten bent radiator fins carefully.

7.9 Preparing the vehicle for low temperatures or snow



- Mount the air filter rain cover.

Air filter rain cover (79006921000)



Info


Observe the fitting instructions for $\mbox{KTM PowerParts}.$

8.1 Checks and maintenance measures when preparing for use



Info

Before every trip, check the condition of the vehicle and ensure that it is safe to operate. The vehicle must be in perfect technical condition when it is being operated.

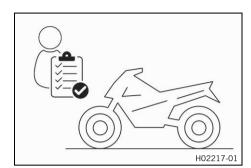

- Check the front brake fluid level. (p. 86)

- Check the brake linings of the rear brake. (p. 94)
- Check that the brake system is functioning properly.
- Check the coolant level. (p. 109)
- Check the chain, rear sprocket, engine sprocket, and chain guide. (p. 78)
- Check the tire condition. (p. 101)
- Check tire pressure. (p. 102)
- Check the spoke tension. (p. 102)



Info

The spoke tension must be checked regularly as incorrect spoke tension will strongly impair riding safety.

- Clean the dust boots of the fork legs. (p. 50)
- Bleed the fork legs. (
 p. 50)
- Check the air filter.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps regularly for tightness.
- Check the fuel level.

8.2 Starting the vehicle



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.


Note

Engine damage High revving speed with a cold engine negatively impacts the lifespan of the engine.

Always run the engine warm at a low speed.

(all SX-F models)

- Remove plug-in stand 🕕.

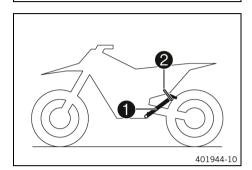


(XC-F US)

- Take the motorcycle off side stand **1** and secure the side stand with rubber strap **2**.
- Shift the transmission into neutral.

Condition

Ambient temperature: < 20 °C (< 68 °F)

- Push the cold start button in all the way.

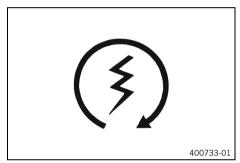

Press start button ③.



Info

Press the start button for a maximum of 5 seconds. Wait for 30 seconds before a further attempt at starting.

At temperatures below 15 °C (60 °F), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power. During the starting process, the malfunction indicator lamp lights up.

•

8.3 Activating launch control




Info

The launch control helps the rider to generate optimum motorcycle acceleration at the beginning of a race. The maximum speed of the engine with the throttle valve fully opened (full throttle) is reduced. After the start, it is gradually increased up to the maximum engine speed. The clutch must be operated exactly as it would be without launch control activated.

Condition

The motorcycle is stationary.
The engine is running at idle speed.

The transmission is in neutral.

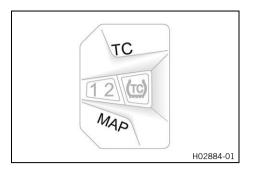

Press and hold the MAP and TC buttons simultaneously.

✓ The malfunction indicator lamp flashes orange rapidly.



Info

The <u>launch control</u> is deactivated automatically for a few seconds after the vehicle has started.

The launch control is also deactivated in the following cases (malfunction indicator lamp no longer flashes): if the throttle valve is closed more than 1/3 of the way after full throttle, and/or if there is no start within 3 minutes

For safety reasons, the engine must be switched off for at least 10 seconds before the launch control can be activated again, regardless of whether the vehicle has been started or not.

If the engine has already been running for some time, the engine must first be restarted before the launch control can be activated.

8.4 Activating traction control




Info

The traction control reduces excessive slip on the rear wheel in favor of more control and propulsion, particularly in wet conditions.

When traction control is switched off, the rear wheel may spin more during high acceleration and on surfaces with low grip.

Traction control can be switched on or off during the ride.

The setting most recently selected is activated again when restarting.

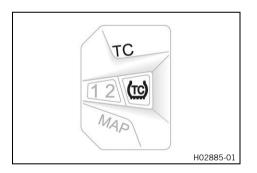

Press button **TC** to switch the traction control on or off.

Engine speed	≤ 4,000 rpm

The TC LED lights up when the traction control is activated.

8.5 Starting off

 Pull the clutch lever, engage 1st gear, release the clutch lever slowly and simultaneously open the throttle carefully.

29

8.6 Shifting, riding



Warning

Danger of accidents If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



Info

If unusual noises occur while riding, stop immediately (taking care not to endanger yourself or other road users in the process), switch off the engine and contact an authorized KTM workshop. First gear is used for starting off and for steep inclines.

- Shift into a higher gear when conditions allow (incline, road situation, etc.). To do so, release the throttle
 while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the
 throttle.
- If the cold start button was pushed while starting, open the throttle briefly and release the throttle grip or turn the throttle grip forward.
 - ✓ The cold start button goes to the basic position.
- After reaching maximum speed by fully opening the throttle grip, turn the throttle back so it is ¾ open. This
 will barely reduce the speed, but fuel consumption will be considerably lower.
- Only open the throttle as much as the engine can handle abrupt throttle grip opening increases fuel consumption.
- To shift down, apply the brakes and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.
 Guideline

≥ 1 min

- Avoid frequent or lengthy slipping of the clutch. This causes the engine oil, engine and cooling system to heat up.
- Ride at a low engine speed instead of at a high engine speed with a slipping clutch.

8.7 Applying the brakes



Warning

Danger of accidents Excessively forceful application of the brakes blocks the wheels.

Adjust application of the brakes to the respective riding situation and riding surface conditions.



Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.
- On sandy, wet, or slippery surfaces, use mostly the rear brake.
- Always finish braking before you go into a bend. Shift down to a lower gear appropriate to your speed.

30

•

 Use the braking effect of the engine on long downhill stretches. Shift back one or two gears, but do not overrev the engine when doing so. This means that significantly less braking is required and the brake system does not overheat.

8.8 Stopping, parking



Warning

Risk of misappropriation People who act without authorization endanger themselves and others.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.
- Apply the brakes on the motorcycle.
- Shift the transmission to the neutral position.
- Park the motorcycle on firm ground.

4

8.9 Transporting

Note


Danger of damage The parked vehicle can roll away or fall over.


- Park the vehicle on a firm and level surface.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

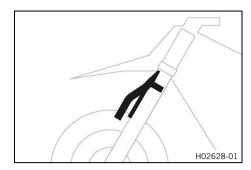

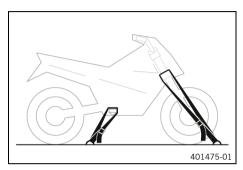

(all SX-F models)

- Switch off the engine.
- Mount plug-in stand on the fork legs.

Plug-in stand (79029094000)



Info

The plug-in stand is included.

Make sure the brake line runs in front of the plug-in stand and does not become wedged.

 Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.



Info

Only tighten the tension belts to the point that the plug-in stand is in contact with the fender and tires

Pay attention to the alignment of the plug-in stand to the fender.

(XC-F US)

- Switch off the engine.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

8.10 Refueling



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.

Note

Material damage Inadequate fuel quality causes the fuel filter to quickly become clogged.

In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.


 Refuel only with clean fuel that meets the specified standards. (Your authorized KTM workshop will be glad to help.)



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

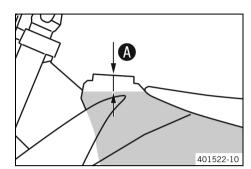

- Switch off the engine.
- Open fuel tank filler cap. (
 p. 17)
- Fill the fuel tank with fuel up to level A.
 Guideline

Dimension (A)	35 mm (1.38 in)				
Total fuel tank capacity, approx. (all SX-F models)					
Super unleaded (ROZ 95/RON 95/PON 91) (p. 144)	7 I (1.8 US gal)				
Total fuel tank capacity, appro	x. (XC-F US)				
Super unleaded (ROZ 95/RON 95/PON 91) (p. 144)	8.5 I (2.25 US gal)				

- Close the fuel tank filler cap. (p. 18)

•

9.1 Additional information

Any further work that results from the compulsory work or from the recommended work must be ordered separately and invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions. Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule can always be found on KTM Dealer.net. Your authorized KTM dealer will be happy to advise you.

9.2 Required work

			aft	er ev	ery r	ace
Every 40 operating hours Every 30 operating hours						
Every 10 operati		ours				
After 1 operating l	hour					
Read out fault memory using the KTM diagnostics tool. 🔏	0	•	•	•	•	•
Check and charge the 12-V battery. ◀		•	•	•	•	•
Check the front brake linings. (🕮 p. 88)		•	•	•	•	•
Check the brake linings of the rear brake. (🕮 p. 94)		•	•	•	•	•
Check the brake discs. (p. 85)		•	•	•	•	•
Check the brake lines for damage and leakage.		•	•	•	•	•
Check the rear brake fluid level. (🕮 p. 92)		•	•	•	•	•
Check the free travel of the foot brake lever. (p. 91)		•	•	•	•	•
Check the frame. ♣ (ᆗ p. 80)		•	•	•	•	•
Check the link fork.		•	•	•	•	•
Check the fork bearing for play.			•		•	
Check the heim joint for play.		•	•	•	•	•
Check the shock absorber linkage. 🔏		•	•	•	•	•
Check the tire condition. (p. 101)	0	•	•	•	•	•
Check tire pressure. (p. 102)	0	•	•	•	•	•
Check the wheel bearing for play.		•	•	•	•	•
Check the wheel hubs. ◀		•	•	•	•	•
Check the rim run-out. ◀	0	•	•	•	•	•
Check the spoke tension. (p. 102)	0	•	•	•	•	•
Check the chain, rear sprocket, engine sprocket, and chain guide. (🕮 p. 78)		•	•	•	•	•
Check the chain tension. (🕮 p. 76)	0	•	•	•	•	•
Grease all moving parts (e.g., hand lever, chain,) and check for smooth opera-		•	•	•	•	•
tion. 🌂						
Check/correct the fluid level of the hydraulic clutch. (🕮 p. 82)		•	•	•	•	•
Check the front brake fluid level. (p. 86)		•	•	•	•	•
Check the free travel of the hand brake lever. (🕮 p. 85)		•	•	•	•	•
Check the steering head bearing play. (🕮 p. 58)	0	•	•	•	•	•
Check the valve clearance.	0			•		
Check the clutch. ⁴			•		•	
Change the cover seal and radial shaft seal rings of the water pump. 🔏				•		
Change the engine oil and oil filter, clean the oil screen. ◂ (Հ p. 121)	0	•	•	•	•	•

- One-time interval
- Periodic interval

9.3 Recommended work

E	very 1	00 op	erati	ng ho	ours
Ever	y 50 oj	erati	ing h	ours	
After 20	operat	ing h	ours		
After 10 opera	ating h	ours			
every 12 m	onths				
Change the front brake fluid.	•				
Change the rear brake fluid.	•				
Change the hydraulic clutch fluid. ◀ (興 p. 83)	•				
Lubricate the steering head bearing. ◀ (興 p. 60)	•				
Service the fork.		0			
Perform the shock absorber service.			0		
Change the fuel filter. 🌂					•
Perform minor engine service including removing and installing engine. (Change spark plug and spark plug connector. Change piston, check and measure cylinder; check cylinder head. Check camshaft and cam lever. Check timing assembly. Change intake flange.)				•	•

Eve	ry 100 op	erating h	ours
Every 5	50 operati	ng hours	
After 20 op	erating h	ours	
After 10 operati	ng hours		
every 12 more	nths		
Perform major engine service including removing and installing the engine. (Change valves, valve springs, valve spring seats, and valve spring retainers. Change the connecting rod, conrod bearing and crank pin. Check the transmission and shift mechanism. Check the oil pressure control valve. Change the suction pump. Check the force pump and lubrication system. Change the timing chain. Change all engine bearings. Change the freewheel.)			•


- o One-time interval
- Periodic interval

10.1 Checking the basic chassis setting with rider's weight

i

Info

When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

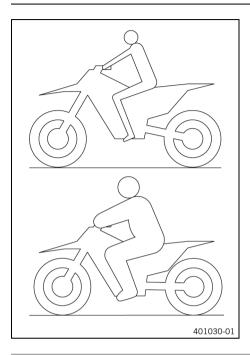

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, link fork and frame, the basic settings of the suspension components must match the rider's weight.
- As delivered, KTM offroad motorcycles are adjusted for an average rider's weight (with full protective clothing).
 Guideline

Standard rider weight	75 85 kg (165
	187 lb.)

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Small weight differences can be compensated by adjusting the spring pretension of the shock absorber, but in the case of large weight differences, the springs must be replaced.

10.2 Air suspension XACT 5548



Air suspension **WP XACT 5548** is used in the fork.

In this system, suspension is located in the left fork leg and damping in the right fork leg.

As fork springs are no longer required, a significant weight advantage is achieved when compared to conventional forks. The response on slightly uneven surfaces is significantly improved. In normal driving mode, suspension is provided exclusively by an air cushion. A steel spring is located in the left fork leg as an end stop.



Info

If the fork is frequently overloaded, then the air pressure in the fork must be increased to avoid damage to the fork and frame.

The air pressure in the fork can be quickly adjusted to the rider's weight, surface conditions and the rider's preference using a fork airpump. The fork does not have to be dismantled. The time consuming mounting of harder or softer fork springs is not required. If the air chamber loses air due to a damaged seal, the fork will still not sag. In this case the air is retained in the fork. The suspension travel is maintained as far as possible. The damping becomes harder and the riding comfort reduces.

As with a conventional fork, the damping can be adjusted in rebound and compression stages.

The rebound adjuster is located at the lower end of the right fork leg.

The compression adjuster is located at the upper end of the right fork leg.

10.3 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed compression adjuster has an effect, for example, when landing after a jump: the rear wheel suspension compresses quickly.

The low-speed compression adjuster has an effect, for example, when riding over long ground swells: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is gradual. Thus, modifications in the high-speed range affect the compression damping in the low-speed range and vice versa.

10.4 Adjusting the low-speed compression damping of the shock absorber



Caution


Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)



Info

The effect of the low-speed compression adjuster can be seen in slow to normal compression of the shock

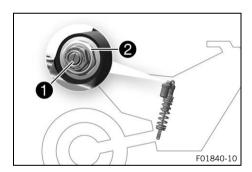

Turn adjusting screw 1 clockwise with a screwdriver as far as the last perceptible click.



Info

Do not loosen fitting 2!



Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

Lowspeed compression damping (All EU models)		
Comfort	17 clicks	
Standard	15 clicks	
Sport	13 clicks	
Lowspeed compression damping (SX-F US)		
Comfort	17 clicks	
Standard	15 clicks	
Sport	13 clicks	
Lowspeed compression damping (XC-F US)		
Comfort	17 clicks	
Standard	15 clicks	
Sport	13 clicks	



Info

Turn clockwise to increase the damping; turn counterclockwise to reduce the damping.

10.5 Adjusting the high-speed compression damping of the shock absorber



Caution


Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)



Info

The effect of the high-speed compression adjuster can be seen in fast compression of the shock absorber.

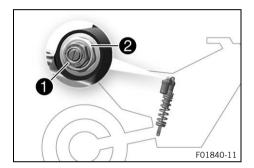

Turn adjusting screw all the way clockwise with a socket wrench.



Info

Do not loosen fitting 2!

 Turn counterclockwise by the number of turns corresponding to the shock absorber type.

Guideline

Highspeed compression damping (All EU models)		
Comfort	2 turns	
Standard	1.5 turns	
Sport	1 turn	
Highspeed compression damping (SX-F US)		
Comfort	2.5 turns	
Standard	2 turns	
Sport	1.5 turns	
Highspeed compression damping (XC-F US)		
Comfort	2.5 turns	
Standard	2 turns	
Sport	1.5 turns	



Info

Turn clockwise to increase the damping; turn counterclockwise to reduce the damping.


10.6 Adjusting the rebound damping of the shock absorber

A

Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)

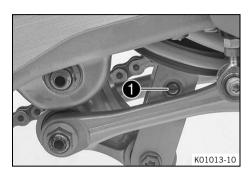

- Turn adjusting screw 1 clockwise up to the last perceptible click
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

Rebound damping (All EU models)		
Comfort	17 clicks	
Standard	15 clicks	
Sport	13 clicks	
Rebound damping (SX-F US)		
Comfort	17 clicks	
Standard	15 clicks	
Sport	13 clicks	
Rebound damping (XC-F US)		
Comfort	17 clicks	
Standard	15 clicks	
Sport	13 clicks	




Info

Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.

10.7 Measuring the dimension of the rear wheel unloaded

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)

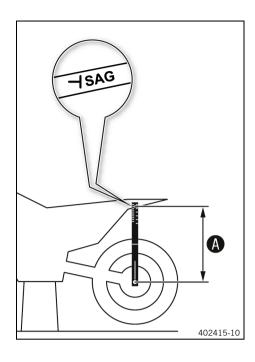

Main work

 Position the sag gage in the rear axle and measure the distance to marking SAG on the rear fender.


Sag gauge (00029090000)	
Sag gage pin (00029990010)	

- Note the value as dimension $oldsymbol{\mathbb{A}}$.

Finishing work

Remove the motorcycle from the lift stand. (
 p. 49)

10.8 Checking the static sag of the shock absorber

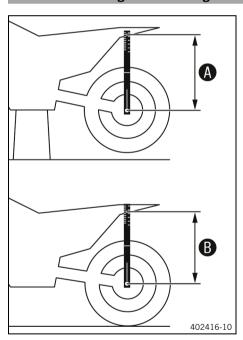

- Hold the motorcycle upright with aid of an assistant.
- Measure the distance again between the rear axle and marking **SAG** on the rear fender using the sag gage.
- Note the value as dimension **B**.



Info


The static sag is the difference between measurements $\bf A$ and $\bf B$.

Check the static sag.

Static sag (All EU models)	35 mm (1.38 in)
Static sag (SX-F US)	35 mm (1.38 in)
Static sag (XC-F US)	35 mm (1.38 in)

- » If the static sag is less or more than the specified value:
 - Adjust the spring preload of the shock absorber. ⁴
 (□ p. 42)

10.9 Checking the riding sag of the shock absorber

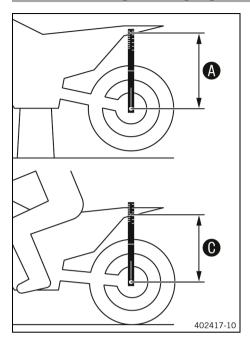

- With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal sitting position (feet on footrests) and bounces up and down a few times.
 - ✓ The rear wheel suspension levels out.
- Another person again measures the distance between the rear axle and marking SAG on the rear fender using the sag gage.
- Note the value as dimension **6**.



Info

The riding sag is the difference between measurements $\bf A$ and $\bf C$.

Check riding sag.

Riding sag (All EU models)	105 mm (4.13 in)	
Riding sag (SX-F US)	105 mm (4.13 in)	
Riding sag (XC-F US)	105 mm (4.13 in)	

- » If the riding sag differs from the specified measurement:
 - Adjust the riding sag. ◀ (🗐 p. 43)

10.10 Adjusting the spring preload of the shock absorber 🔌



Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)



Info

Note the current adjustment before changing the spring preload —e.g. measure the spring length.

Preparatory work

- Raise the motorcycle with a lift stand. (
 p. 49)
- Remove the shock absorber. ◀ (🕮 p. 62)
- After removing the shock absorber, clean it thoroughly.

Main work

- Loosen screw 1.
- Turn adjusting ring 2 until the spring is no longer under tension.

Hook wrench (90129051000)

- Measure the total spring length while the spring is not under tension
- Tighten the spring by turning adjusting ring 2 to specified dimension A.

Guideline

Spring preload (All EU models)	8 mm (0.31 in)
Spring preload (SX-F US)	9 mm (0.35 in)
Spring preload (XC-F US)	6 mm (0.24 in)



Info

Depending on the static sag and/or the riding sag, it may be necessary to increase or decrease the spring preload.

Tighten screw 1.

Guideline

Screw, shock	M5	5 Nm (3.7 lbf ft)
absorber adjusting		
ring		

Finishing work

- Install the shock absorber. ◄ (□ p. 63)
- Check the free travel of the foot brake lever. (
 p. 91)


10.11 Adjusting the riding sag 🔌

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)
- After removing the shock absorber, clean it thoroughly.

Main work

Choose and mount a suitable spring.

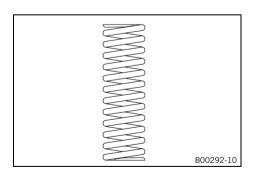

Guideline

Spring rate (All EU models)	
Weight of rider: 65 75 kg (143 165 lb.)	39 N/mm (223 lb/in)
Weight of rider: 75 85 kg (165 187 lb.)	42 N/mm (240 lb/in)
Weight of rider: 85 95 kg (187 209 lb.)	45 N/mm (257 lb/in)
Spring rate (SX-F US)	
Weight of rider: 65 75 kg (143 165 lb.)	39 N/mm (223 lb/in)
Weight of rider: 75 85 kg (165 187 lb.)	42 N/mm (240 lb/in)
Weight of rider: 85 95 kg (187 209 lb.)	45 N/mm (257 lb/in)
Spring rate (XC-F US)	
Weight of rider: 65 75 kg (143 165 lb.)	39 N/mm (223 lb/in)
Weight of rider: 75 85 kg (165 187 lb.)	42 N/mm (240 lb/in)
Weight of rider: 85 95 kg (187 209 lb.)	45 N/mm (257 lb/in)



Info

The spring rate is shown on the outside of the spring.

Finishing work

- Install the shock absorber. ♣ (🕮 p. 63)


- Check the riding sag of the shock absorber. (
 p. 42)
- Remove the motorcycle from the lift stand. (
 p. 49)

10.12 Checking the basic setting of the fork



Info

For various reasons, no exact riding sag can be determined for the fork.

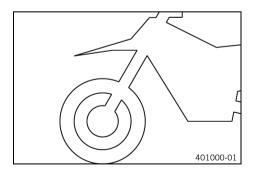

- Smaller differences in the rider's weight can be compensated for by the fork air pressure.
- However, if the fork frequently bottoms out (hard end stop on compression), the fork air pressure must be increased, within the specified values, to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.



Warning

Danger of accident Modifications to the suspension setting may seriously alter the handling characteristic.

Extreme modifications to the suspension setting may cause a serious deterioration in the handling characteristic and overload components.

- Only make adjustments within the recommended range.
- Ride slowly to start with after making adjustments to get the feel of the new handling characteristic.



Info

Check or adjust the air pressure under the same conditions at the earliest 5 minutes after switching off the engine.

The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.



Preparatory work

Main work

- Remove protection cap 1.
- Push together fork airpump 2 fully.

Fork airpump (79412966100)



Info

The fork airpump is included as part of the motorcycle's accessory pack.

- Connect the fork airpump to the left fork leg.
 - ✓ The fork airpump indicator switches on automatically.
 - ✓ A little air escapes from the fork leg when connecting.



Info

This is due to the volume of the hose and not due to a defect in the fork airpump or the fork.

Read the accompanying **KTM PowerParts** instructions.

- Adjust the air pressure as specified.

Guideline

Air pressure (All EU models)	10.4 bar (151 psi)
Air pressure (SX-F US)	10.3 bar (149 psi)
Air pressure (XC-F US)	9.8 bar (142 psi)
Gradual changing of the air pressure in steps of	0.2 bar (3 psi)
Minimum air pressure	7 bar (102 psi)
Maximum air pressure	12 bar (174 psi)



Info

Never adjust the air pressure to a value outside the stated range.

- Disconnect the fork airpump from the left fork leg.
 - ✓ When disconnecting, excess pressure will escape from the hose - the fork leg itself does not lose any air.
 - ✓ The fork airpump indicator switches off automatically after 80 seconds.
- Mount the protection cap.



Only mount the protection cap by hand.

Finishing work

Remove the motorcycle from the lift stand. (p. 49)

10.14 Adjusting the compression damping of the fork



Info

The hydraulic compression damping determines the fork suspension behavior.



Turn adjuster 1 clockwise all the way.



Info

Adjuster is located at the upper end of the right fork leg.

Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Compression damping (All EU models)	
17 clicks	
12 clicks	
7 clicks	
JS)	
17 clicks	
12 clicks	
7 clicks	
JS)	
17 clicks	
12 clicks	
7 clicks	



Info


Turn clockwise to increase damping; turn counterclockwise to reduce damping when the shock absorber contracts.

10.15 Adjusting the rebound damping of the fork



Info

The hydraulic rebound damping determines the fork suspension behavior.

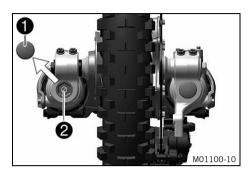

- Remove protection cap 1.
- Turn adjusting screw 2 clockwise all the way.



Info

Adjusting screw **2** is located at the lower end of the right fork leg.

 Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Rebound damping (All EU models)		
Comfort	17 clicks	
Standard	12 clicks	
Sport	7 clicks	
Rebound damping (SX-F US)		
Comfort	23 clicks	
Standard	18 clicks	
Sport	13 clicks	
Rebound damping (XC-F US)		
Comfort	17 clicks	
Standard	12 clicks	
Sport	7 clicks	




Info

Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.

Mount protection cap 1.



10.16 Handlebar position

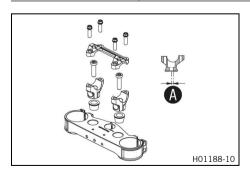

The holes on the handlebar supports are placed at a distance of $oldsymbol{\mathbb{A}}$ from the center.

Hole distance A	3.5 mm (0.138 in)

The handlebar can be mounted in 2 different positions. In this way, the handlebar can be mounted in the most comfortable position for the rider.

10.17 Adjusting the handlebar position 🔌




Warning

Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

Change the handlebar if the handlebar is damaged or bent.

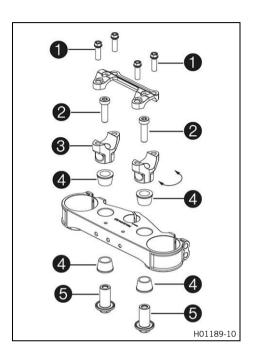

Preparatory work

- Remove the handlebar cushion.

Main work

Remove screws

 Remove the handlebar clamp. Remove the handlebar and lay it to one side.



Info

Cover the components to protect them against damage. Do not kink the cables and lines.

- Remove screws 2. Take off handlebar supports 3.
- Position rubber bushings 4 and push through nuts 6 from below
- Place the handlebar supports in the required position.



Info

The handlebar supports are longer and higher on one side.

Position the left and right handlebar supports evenly.

Mount and tighten screws 2.

Guideline

Screw, handle-	M10	40 Nm (29.5 lbf ft)
bar support		Loctite®243™

Position the handlebar.



Info

Make sure the cables and wiring are positioned correctly.

- Position the handlebar clamp.
- Mount screws but do not tighten yet.
- First bolt the handlebar clamp with screws onto the longer, higher side of the handlebar supports so that both parts touch.
- Tighten screws 1 evenly.

Guideline

Screw, handlebar	M8	20 Nm (14.8 lbf ft)
clamp		

Finishing work

Mount the handlebar cushion.

_

11.1 Raising the motorcycle with a lift stand


Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

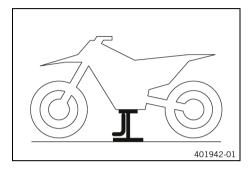

(All SX-F standard models)

 Remove the plug-in stand and lift up the motorcycle by the frame underneath the engine.

Lift stand (78129955100)

✓ Neither wheel is in contact with the ground.

(PRADO)

 Remove the plug-in stand and lift up the motorcycle by the motor guard underneath the engine.

Lift stand (78129955100)

Neither wheel is in contact with the ground.

(XC-F US)

 Fold in the side stand and raise the motorcycle at the frame underneath the engine.

Lift stand (78129955100)

- ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.

11.2 Removing the motorcycle from the lift stand


Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

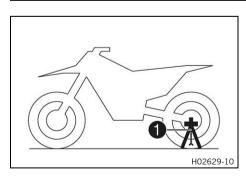

(all SX-F models)


- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, insert plug-in stand into the left side of the wheel spindle.

Plug-in stand (79029094000)



Info

The plug-in stand is included. Remove the plug-in stand before riding.

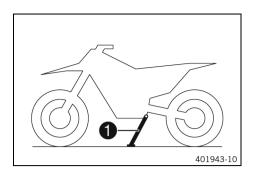

(XC-F US)


- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, press side stand 1 to the ground with your foot and lean the motorcycle on it.



Info

When you are riding, the side stand must be folded up and secured with the rubber strap.

11.3 Bleeding the fork legs

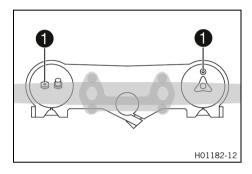

Preparatory work

Main work

- Release bleeder screws 1.
 - ✓ Any excess pressure escapes from the interior of the fork.
- Tighten the bleeder screws.

Finishing work

Remove the motorcycle from the lift stand. (
 p. 49)

11.4 Cleaning the dust boots of the fork legs

Preparatory work

- Raise the motorcycle with a lift stand. (
 p. 49)
- Remove the fork protector. (
 p. 51)

Main work

Push dust boots 1 of both fork legs downward.



The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.
- Clean and oil the dust boots and inner fork tubes of both fork legs.


Universal oil spray (🕮 p. 146)

- Press the dust boots back into their installation position.
- Remove excess oil.

Finishing work


- Install the fork protector. (
 p. 51)
- Remove the motorcycle from the lift stand. (p. 49)

11.5 Removing the fork protector

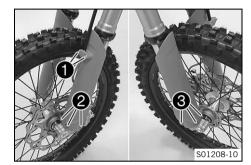

- Remove screws 1 and take off the clamp.
- Remove screws 2 and take off the left fork protector.
- Remove screws **3** and take off the right fork protector.

11.6 Installing the fork protector

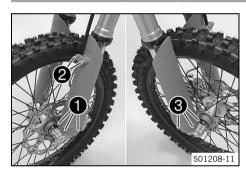

Position the fork protector on the left fork leg. Mount and tighten screws 1.

Guideline


Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

- Position the brake line and clamp. Mount and tighten screws 2.
- Position the fork protector on the right fork leg. Mount and tighten screws 3.


Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

11.7 Removing motor guard (PRADO)

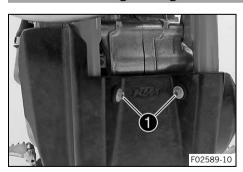


Remove screws 1.

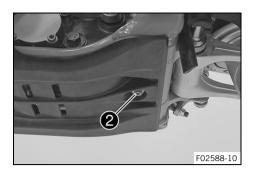


- Remove screw 2. Take off the motor guard.

11.8 Installing the motor guard (PRADO)

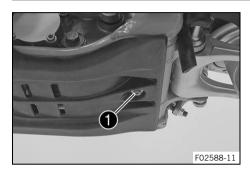

- Position the motor guard on the frame.
 - Mount and tighten screw 1.
 Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

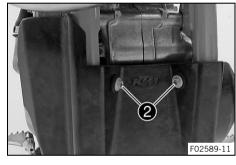

Mount and tighten screws 2.
 Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

11.9 Removing the fork legs 🔦

Preparatory work

- Remove the front wheel. ◄ (♣ p. 97)


Main work


- Remove screws 1 and take off the clamp.
- Remove screws 2 and take off the brake caliper.
- Allow the brake caliper and the brake line to hang loosely to the side.



Info


Do not actuate the hand brake lever when the front wheel is removed.

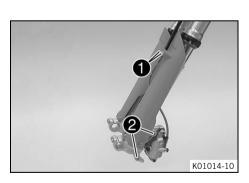

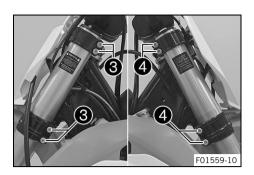

(SX-F EU/US, XC-F US)


- Loosen screws 3. Remove the left fork leg.
- Loosen screws 4. Remove the right fork leg.

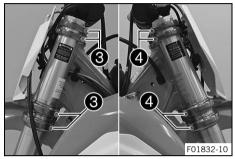

(PRADO)

- Loosen screws 3. Remove the left fork leg.
- Loosen screws 4. Remove the right fork leg.

11.10 Installing the fork legs 🔌

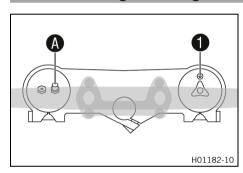


Main work

- Position the fork legs.
 - ✓ Air bleeder screw of the right fork leg is positioned to the front.
 - ✓ Valve **A** of the left fork leg faces the front.



Info

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp. The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

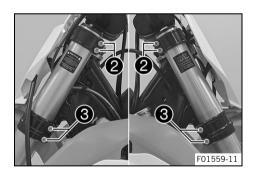

(SX-F EU/US, XC-F US)

Tighten screws 2.


Guideline


Screw, top triple	M8	17 Nm
clamp		(12.5 lbf ft)

- Tighten screws **3**.

Guideline

Screw, bottom	M8	12 Nm (8.9 lbf ft)
triple clamp		

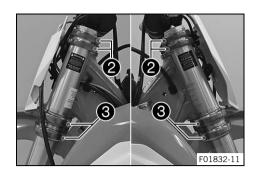

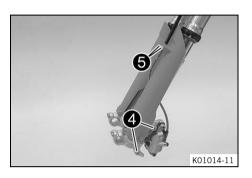

(PRADO)

Tighten screws 2.
 Guideline

Screw, top triple	M8	17 Nm
clamp		(12.5 lbf ft)

Tighten screws **3**. Guideline

Screw, bottom	M8	12 Nm (8.9 lbf ft)
triple clamp		

Position the brake caliper. Mount and tighten screws **4**. Guideline

Screw, front	M8	25 Nm (18.4 lbf ft)
brake caliper		Loctite®243™

Position the brake line and the clamp. Mount and tighten screws 6.

Finishing work

Install the front wheel. 4 (
 p. 98)

11.11 Removing the lower triple clamp &

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)
- Remove the front wheel. ◄ (♣ p. 97)
- Remove the fork legs. ◀ (IP p. 52)
- Remove the start number plate. (p. 60)
- Remove front fender. (p. 61)
- Remove the handlebar cushion.

Main work (SX-F EU/US, XC-F US)


- Open cable holder
 on the left and detach the wiring harness.
- Remove screw 2.
- Remove screw 3.
- Take off the upper triple clamp with the handlebar and set aside.




Info

Cover the components to protect them against damage.

Do not kink the cables and lines.

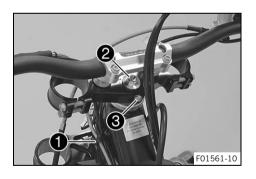

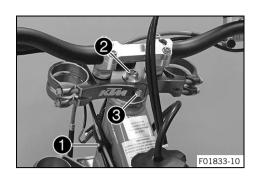

(PRADO)

- Open cable holder **1** on the left and detach the wiring
 - Remove screw 2.
- Remove screw 3.
- Take off the upper triple clamp with the handlebar and place to one side.



Info

Cover the components to protect them against dam-


Do not kink the cables and lines.



- Remove O-ring 4.
- Remove protective ring **6**.
- Remove the lower triple clamp with the steering stem.
- Remove the upper steering head bearing.



11.12 Installing the lower triple clamp &

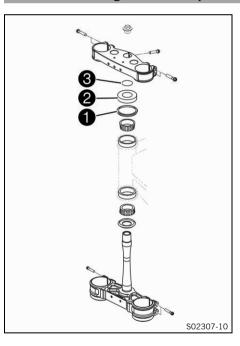


Main work


Clean the bearing and sealing elements, check for damage, and grease.

High viscosity grease (p. 145)

 - Insert the lower triple clamp with the steering stem. Mount upper steering head bearing.
- Check that the O-ring at the top
 is correctly positioned.
- Slide on protective ring 2 and 0-ring 3.



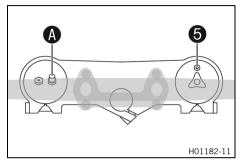



- Position the upper triple clamp with the handlebar.
- Mount screw 4, but do not tighten yet.

- Position the fork legs.
 - ✓ Air bleeder screw **5** of the right fork leg is positioned to the front.
 - ✓ Valve ♠ of the left fork leg faces the front.



 
Info


Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

- Tighten screws **6**.

Guideline



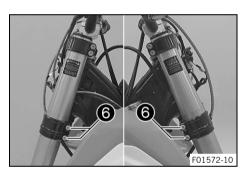

- Tighten screw **4**. Guideline


Screw, top steering	M20x1.5	12 Nm (8.9 lbf ft)
head		








Mount and tighten screw 7.
 Guideline


Screw, top	M8	20 Nm (14.8 lbf ft)
steering stem		Loctite®243™

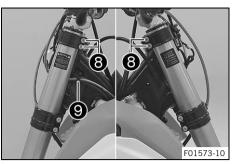

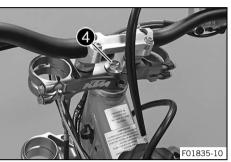

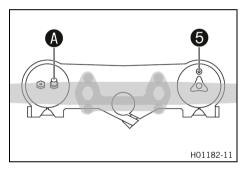

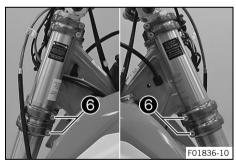

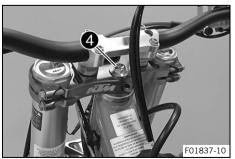

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws **8**. Guideline

Screw, top triple	M8	17 Nm
clamp		(12.5 lbf ft)

Secure the wiring harness with cable holder **9** on the

(PRADO)

- Position the upper triple clamp with the handlebar.
- Mount screw 4, but do not tighten yet.

- Position the fork legs.
 - ✓ Air bleeder screw **5** of the right fork leg is positioned to the front.
 - ✓ Valve ♠ of the left fork leg faces the front.



Info

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

Tighten screws **6**.

Guideline


Screw, bottom	M8	12 Nm (8.9 lbf ft)
triple clamp		

Tighten screw 4.


Guideline

Screw, top steering	M20x1.5	12 Nm (8.9 lbf ft)
head		



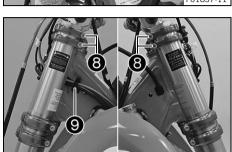

F01838-10

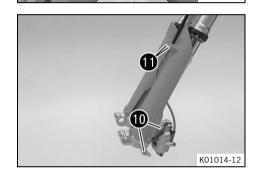

Mount and tighten screw **?**.
 Guideline

Screw, top	M8	20 Nm (14.8 lbf ft)
steering stem		Loctite®243™

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws **3**. Guideline

Screw, top triple	M8	17 Nm
clamp		(12.5 lbf ft)

- Secure the wiring harness with cable holder **9** on the left.
- Position the brake caliper. Mount and tighten screws **10**. Guideline

Screw, front	M8	25 Nm (18.4 lbf ft)
brake caliper		Loctite®243™

 Position the brake line and the clamp. Mount and tighten screws 1.

Finishing work

- Install front fender. (
 p. 62)
- Mount the handlebar cushion.

- Check that the wiring harness, throttle cables, and brake and clutch lines can move freely and are routed correctly.
- Check the steering head bearing play. (p. 58)
- Remove the motorcycle from the lift stand. (p. 49)

11.13 Checking the steering head bearing play



Warning


Danger of accidents Incorrect steering head bearing play impairs the handling characteristic and damages components.

 Correct incorrect steering head bearing play immediately. (Your authorized KTM workshop will be glad to help.)



Info

If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged over time.

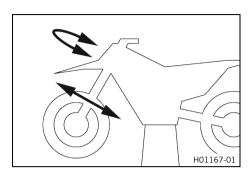

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)

Main work

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

- » If there is detectable play:
 - Adjust the steering head bearing play. ◀ (ՀՀ) p. 59)
- Move the handlebar to and fro over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

- » If detent positions are detected:
 - Adjust the steering head bearing play. ◀ (ՀՀ) p. 59)
 - Check the steering head bearing and adjust if necessary.

Finishing work

Remove the motorcycle from the lift stand. (
 p. 49)

11.14 Adjusting the steering head bearing play 4

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)
- Remove the handlebar cushion.

Main work

(SX-F EU/US, XC-F US)

- Loosen screws 1.
- Remove screw 2.
- Loosen and retighten screw 3.

Guideline

Screw, top steering	M20x1.5	12 Nm (8.9 lbf ft)
head		

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Mount and tighten screw 2.


Guideline


Screw, top	M8	20 Nm (14.8 lbf ft)
steering stem		Loctite®243™

Tighten screws 1.

Guideline

Screw, top triple	M8	17 Nm
clamp		(12.5 lbf ft)

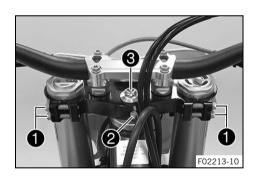

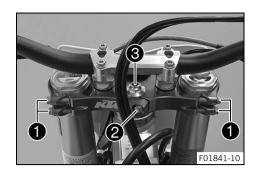

(PRADO)

- Loosen screws 1.
- Remove screw 2.
- Loosen and retighten screw 3.

Guideline

Screw, top steering	M20x1.5	12 Nm (8.9 lbf ft)
head		

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Mount and tighten screw 2.

Guideline

Screw, top	M8	20 Nm (14.8 lbf ft)
steering stem		Loctite®243™

Tighten screws 1.

Guideline


Screw, top triple	M8	17 Nm
clamp		(12.5 lbf ft)

- Check the steering head bearing play. (p. 58)

Finishing work

- Mount the handlebar cushion.

11.15 Lubricating the steering head bearing 4

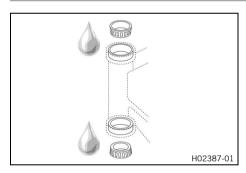




Info


The steering head bearing is cleaned and lubricated in the course of removal and installation of the lower triple clamp.

11.16 Removing the start number plate

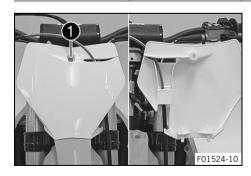


- Remove screw 1.
- Unhook the start number plate from the brake line and remove it.

11.17 Installing the start number plate

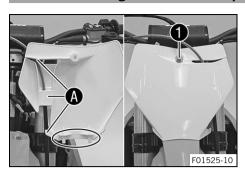

- Position the start number plate. Mount and tighten screw 1.
 The holding lugs engage in the fender.

11.18 Removing front fender

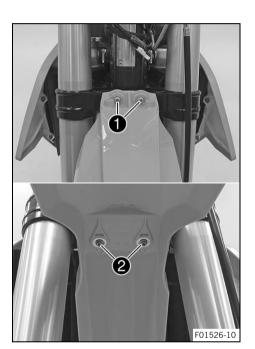


Preparatory work

- Remove the start number plate. (p. 60)

Main work

Remove screws 1 and 2. Take off the front fender.

11.19 Installing front fender

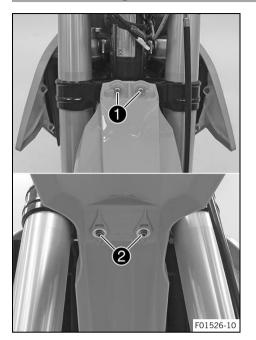

Main work

Position front fender. Mount and tighten screws 1 and 2.
 Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		


Finishing work

11.20 Removing the shock absorber 4

Preparatory work

Main work

- Remove the cable ties.
- Remove screws 1 with the washers.
- Remove screw 2.
- Take off the left frame protector.
- Push the right frame protector to the front and take off at the bottom.

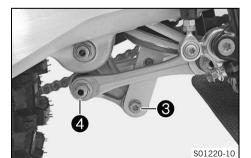


- Remove screw 3.
- Remove fitting **4**.

i

Info

Raise the swingarm slightly to be able to remove the screws more easily.

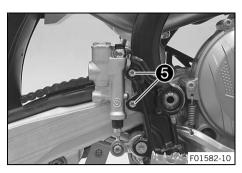

- Remove screws **5**.
- Pull off foot brake cylinder from the push rod.




- Remove the connecting link of the chain.
- Take off the chain.




Info

Cover the components to protect them against damage.

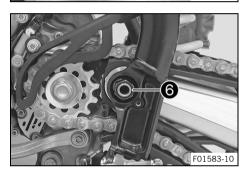


- Remove nut **6** and the swingarm pivot.
- Push the link fork back and secure it against falling over.

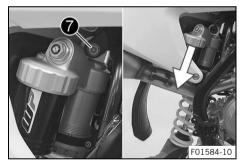

- Hold the shock absorber and remove screw 7.
- Remove the shock absorber carefully at the bottom.


11.21 Installing the shock absorber 🔌

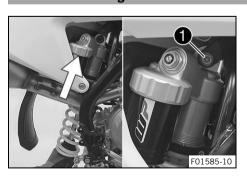



Main work


- Carefully position the shock absorber into the vehicle from the
- Mount and tighten screw 1. Guideline

Screw, top	M10	60 Nm (44.3 lbf ft)
shock absorber		Loctite®2701™

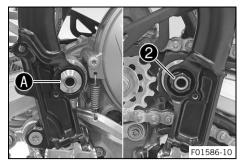

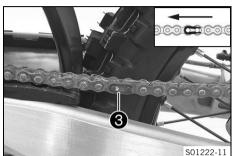

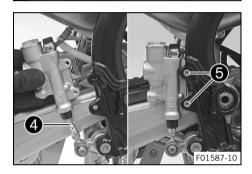

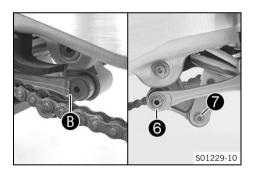

Position the link fork and mount the swingarm pivot.



Info

Pay attention to flat area **A**.



Mount and tighten nut 2.

Guideline

Nut, fork pivot	M16x1.5	100 Nm
		(73.8 lbf ft)

- Mount the chain.
- Connect the chain with connecting link 3.

Guideline

The closed side of the chain joint lock must face in the direction of travel.

- Position the foot brake cylinder.
 - ✓ Push rod 4 engages in the foot brake cylinder.



Ensure that the dust boot is correctly seated.

Mount and tighten screws **5**.

Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

- Position the angle lever and linkage lever.
- Mount and tighten fitting **6**.

Guideline

Nut, linkage lever on	M14x1.5	60 Nm (44.3 lbf ft)
angle lever		



Pay attention to flat area **B**.



Mount and tighten screw 7.


Guideline

Screw, bottom	M10	60 Nm (44.3 lbf ft)
shock absorber		Loctite®2701™



Info

Raise the swingarm slightly to be able to mount the screw more easily.

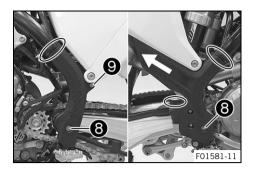

- Position the left frame protector.
- Insert the right frame protector from below and push it to the rear.
- Mount and tighten screws 8 with the washers.
 Guideline

Screw, frame protec-	M5	3 Nm (2.2 lbf ft)
tor		

- Mount and tighten screw **9**.

Guideline

Screw, frame protec-	M5	3 Nm (2.2 lbf ft)
tor		

Mount the new cable ties.

Finishing work

- Check the free travel of the foot brake lever. (p. 91)
- Remove the motorcycle from the lift stand. (
 p. 49)


11.22 Removing the seat




Caution

Danger of burns The voltage regulator gets very hot when the vehicle is driven.

- Allow the voltage regulator to cool down before performing any work.

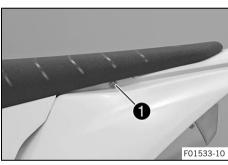


Remove screw 1.

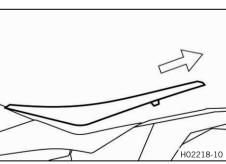


- Raise the rear of the seat, pull the seat back, and lift it off.

11.23 Mounting the seat

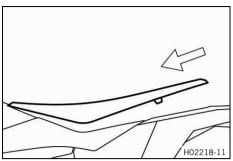

 Mount the front of the seat on the collar bushing of the fuel tank, lower the seat at the rear, and push the seat forward.

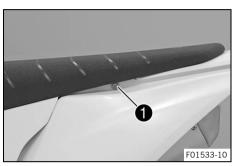

Mount and tighten screw 1.
 Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		


•

11.24 Removing the air filter box cover

Condition


The air filter box cover is secured.

- Remove the seat. (\$\mathbb{Q}\$ p. 65)
- Remove screw 1.

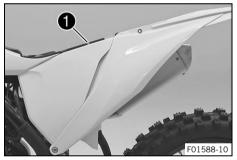



- Pull off the air filter box cover in area (A) sideways and take off toward the front.

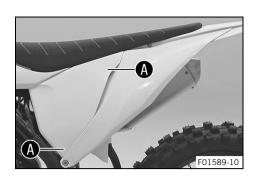


Condition

The air filter box cover is not secured.

Pull off the air filter box cover in area sideways and take off toward the front.


11.25 Installing the air filter box cover

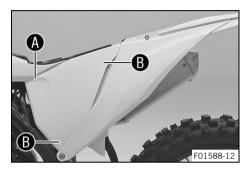

Condition

The air filter box cover is secured.


Insert the air filter box cover in area and clip it into area .

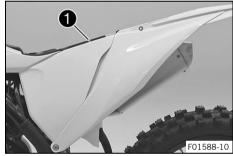

Mount and tighten screw ①.
 Guideline

Screw, air filter box	EJOT PT®	3 Nm (2.2 lbf ft)
cover	K60x20-Z	

Mount the seat. (p. 66)

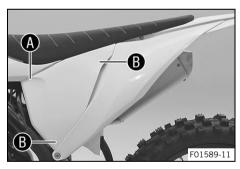

Condition

The air filter box cover is not secured.

Insert the air filter box cover in area and clip it into area area

11.26 Removing the air filter 🔌

Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt will enter the engine without an air filter.

- Never start to use the vehicle without an air filter.



Note

Environmental hazard Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Preparatory work

Main work

- Detach retaining tab 1.
- Remove air filter with air filter support.
- Remove air filter from air filter support.

11.27 Cleaning the air filter and air filter box 🔾



Note

Environmental hazard Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Do not clean the air filter with fuel or petroleum since these substances attack the foam.



Preparatory work

- Remove the air filter. ◀ (🕮 p. 67)

Main work

 Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Air filter cleaner (p. 145)



Info

Only press the air filter to dry it, never wring it out.

- Oil the dry air filter with a high-grade air filter oil.


Oil for foam air filter (p. 145)

- Clean the air filter box.
- Clean the intake flange and check it for damage and tightness.

Finishing work

- Install the air filter. ◀ (🕮 p. 69)
- Install the air filter box cover. (
 p. 67)

11.28 Installing the air filter 4

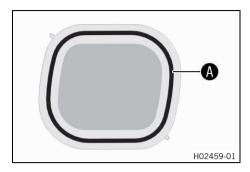

Main work

- Mount the clean air filter on the air filter support.
- Grease the air filter in area $oldsymbol{\mathbb{A}}$.

Long-life grease (p. 145)



- Insert air filter and position retaining pin lacktriangle in bushing lacktriangle.
 - ✓ The air filter is correctly positioned.
- Insert retaining tab 2.
 - ✓ Retaining pin **3** is secured by retaining tab **2**.




Info

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.

Finishing work

11.29 Preparing air filter box cover for securing 4

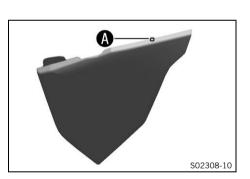

Preparatory work

Main work

Drill a hole at marking A.
 Guideline

Diameter 6 mm (0.24 in)

Finishing work


11.30 Removing the main silencer



Warning

Danger of burns The exhaust system gets very hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.

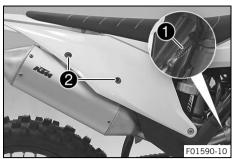


Detach spring 1.

Spring hook (50305017000C1)

Remove screws 2 with the washers and take off the main silencer.

11.31 Installing the main silencer

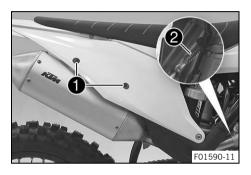

- Position the main silencer.
- Mount screws 1 with the washers, but do not tighten yet.
- Attach spring 2.

Spring hook (50305017000C1)

Tighten screws 1.

Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

11.32 Changing the glass fiber yarn filling of the main silencer 4



Warning

Danger of burns The exhaust system gets very hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.




Info

Over time, the fibers of the glass fiber yarn escape and the damper "burns" out. Not only is the noise level higher, but the performance characteristics change.

Preparatory work

Remove the main silencer. (p. 69)

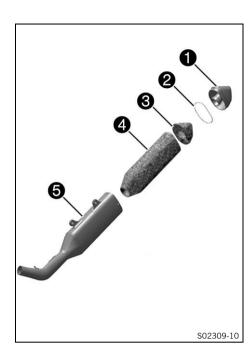

Main work

- Remove all the screws on the main silencer.
- Take off silencer cap $\mathbf{1}$ and 0-ring $\mathbf{2}$.
- Pull glass fiber yarn filling **3** out of the silencer cap.
- Pull glass fiber yarn filling 4 from the inner tube.
- Clean the parts that need to be reinstalled and check for damage.
- Mount new glass fiber yarn filling 4 on the inner tube.
- Position new glass fiber yarn filling 3 in the silencer cap.
- Insert O-ring and silencer cap into outer tube **5**.
- Mount and tighten all of the screws.

Guideline

Screws on main	M5	7 Nm (5.2 lbf ft)
silencer		

Finishing work

Install the main silencer. (
 p. 70)

11.33 Removing the fuel tank &



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning


Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.


Preparatory work


- Remove the seat. (p. 65)


11 SERVICE WORK ON THE CHASSIS

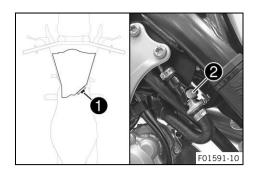

3 F01593-10

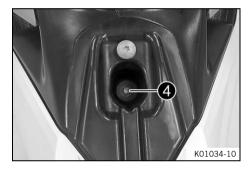

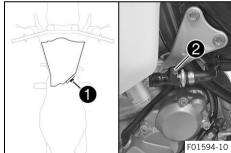

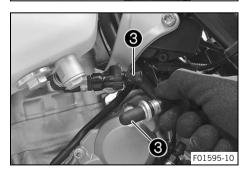

Main work (all SX-F models)

- Unplug connector of the fuel pump.
- Clean quick release coupling 2 thoroughly with compressed air.



Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Disconnect the quick release coupling.



Info

Remaining fuel may flow out of the fuel hose.

Mount wash cap set 3.

Wash cap set (81212016100)

- Pull the fuel tank breather hose off the fuel tank lid.
- Remove screw 4 with the rubber bushing.

(XC-F US)

- Unplug connector of the fuel pump.
- Clean quick release coupling 2 thoroughly with compressed air.



nfo

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

 
Disconnect the quick release coupling.



Info

Remaining fuel may flow out of the fuel hose.


Mount wash cap set 3.




Pull the fuel tank breather hose off the fuel tank lid.



- Remove screw 4 with the rubber bushing.

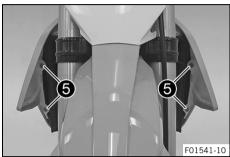

Remove screws 6 with the collar bushings.

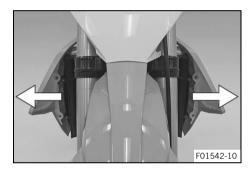

 Pull both spoilers laterally off the radiator and lift off the fuel tank

11.34 Installing the fuel tank 4



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.


- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.




Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.

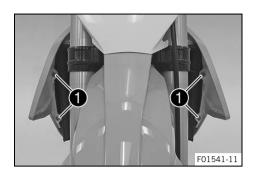

K01034-11

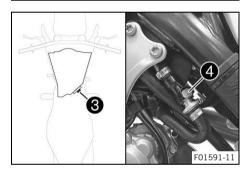



Main work

- Check throttle cable routing. (p. 80)
- Position the fuel tank and fit the two spoilers laterally to the
- Make sure that no cables or throttle cables are trapped or damaged.
- Attach the fuel tank breather hose to the fuel tank lid.
- Mount and tighten screws 1 with the collar bushings. Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

(all SX-F models)

Mount and tighten screw 2 with the rubber bushing.

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

- Plug in connector **3** for the fuel pump.
- Remove the wash cap set. Clean the quick release coupling thoroughly with compressed air.



Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection

Lubricate the O-ring and join quick release coupling 4.






Info

Route the cable and fuel line at a safe distance from the exhaust system.

(XC-F US)

Mount and tighten screw 2 with the rubber bushing. Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

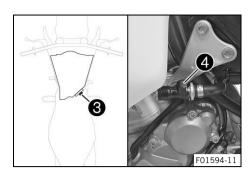

- Plug in connector **3** for the fuel pump.
- Remove the wash cap set. Clean the quick release coupling thoroughly with compressed air.



Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

Lubricate the O-ring and join quick release coupling 4.






Info

Route the cable and fuel line at a safe distance from the exhaust system.

Finishing work

Mount the seat. (p. 66)

Checking for chain dirt accumulation 11.35

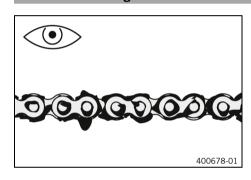

- Check the chain for coarse dirt accumulation.
 - If the chain is very dirty:
 - Clean the chain. (
 p. 75)

11.36 Cleaning the chain



Warning

Danger of accidents Lubricants on the tires reduces the road grip.

Remove lubricants from the tires using a suitable cleaning agent.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Note

Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

The service life of the chain depends largely on its maintenance.

Preparatory work

Raise the motorcycle with a lift stand. (p. 49)

11 SERVICE WORK ON THE CHASSIS

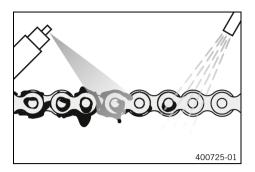

Main work

- Rinse off loose dirt with a soft jet of water.
- Remove old grease residue with chain cleaner.

Chain cleaner (p. 145)

After drying, apply chain spray.

Off-road chain spray (
p. 145)

Finishing work

- Remove the motorcycle from the lift stand. (p. 49)

11.37 Checking the chain tension




Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

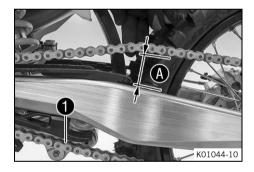

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)

Main work

- Pull the chain at the end of the chain sliding piece upward to measure chain tension **A**.



Info

Lower chain section 1 must be taut.

Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension	55 58 mm (2.17
	2.28 in)

- » If the chain tension does not meet the specification:
 - Adjust the chain tension. (
 p. 77)

Finishing work

Remove the motorcycle from the lift stand. (
 p. 49)

11.38 Adjusting the chain tension



Warning


Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

F00167-10

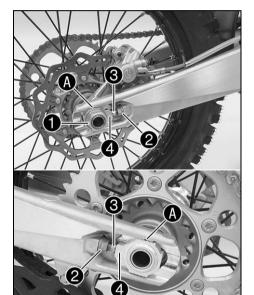

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)
- Check the chain tension. (
 p. 76)

Main work

- Loosen nut 1.
- Loosen nuts **2**.
- Adjust the chain tension by turning adjusting screws 3 left and right.

Guideline

Chain tension	55 58 mm (2.17 2.28 in)
Turn adjusting screws 3 on the left and right so that the markings on the left and right chain adjusters are in the	
same position relative to reference marks (A). The rear	

- Tighten nuts **2**.
- Make sure that chain adjusters 4 are fitted correctly on adjusting screws 3.
- Tighten nut 1.

Guideline

Nut, rear wheel spin-	M25x1.5	80 Nm (59 lbf ft)
dle		



Info


The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length.


Chain adjusters 4 can be turned by 180°.

Finishing work

– Remove the motorcycle from the lift stand. (\bigcirc p. 49)

11.39 Checking the chain, rear sprocket, engine sprocket, and chain guide

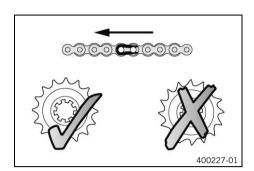

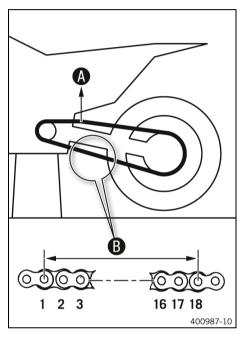

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)

Main work

- Shift the transmission into neutral.
- Check the chain, rear sprocket and engine sprocket for wear.
 - » If the chain, rear sprocket or engine sprocket is worn:
 - Change the drivetrain kit.



Info

The engine sprocket, rear sprocket and chain should always be replaced together.

 Pull on the top section of the chain with the specified weight A.

Guideline

Weight, chain wear measure-	10 15 kg (22 33 lb.)
ment	



Info

Chain wear is not always even, so you should repeat this measurement at different chain positions.


Maximum distance B from	272 mm (10.71 in)
18 chain rollers at the	
longest chain section	

- » If distance **B** is greater than the specified measurement:
 - Change the drivetrain kit. 🐴



Info

When a new chain is mounted, the rear sprocket and engine sprocket should also be changed. New chains wear out faster on an old, worn rear sprocket or engine sprocket.

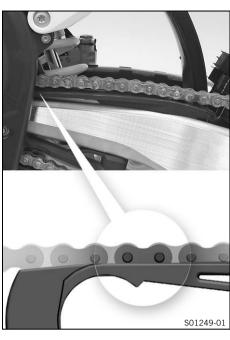


- Check the chain sliding guard for wear.
 - » If the lower edge of the chain pins is in line with, or below, the chain sliding guard:
 - Change the chain sliding guard.
- Check that the chain sliding guard is firmly seated.
 - » If the chain sliding guard is loose:
 - Tighten the screws on the chain sliding guard.

Screw, chain	M6	6 Nm (4.4 lbf ft)
sliding guard		Loctite®243™



- Check the chain sliding piece for wear.
 - » If the lower edge of the chain pins is in line with or below the chain sliding piece:
 - Change the chain sliding piece. 🔌
- Check that the chain sliding piece is firmly seated.
 - » If the chain sliding piece is loose:
 - Tighten the screw on the chain sliding piece.
 Guideline

Screw, chain slid-	M8	15 Nm
ing piece		(11.1 lbf ft)

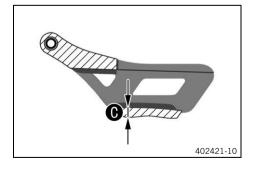


Check the chain guide with a slide gauge for dimension ①.



- If the measured value is less than the specification:
 - Change the chain guide. 🔦

11 SERVICE WORK ON THE CHASSIS

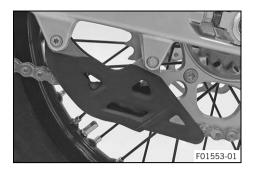

- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the screws on the chain guide.
 Guideline

Remaining screws,	M6	10 Nm
chassis		(7.4 lbf ft)

Finishing work

- Remove the motorcycle from the lift stand. (p. 49)

11.40 Checking the frame 4



- Check the frame for cracks and deformation.
 - If the frame exhibits cracks or deformation due to a mechanical impact:
 - Change the frame.



Info

Always replace a frame that has been damaged due to a mechanical impact. Repair of the frame is not authorized by KTM.

11.41 Checking the link fork 🔌



- Check the link fork for damage, cracking, and deformation.
 - » If the link fork exhibits damage, cracking, or deformation:
 - Change the link fork.



Info

Always replace a damaged link fork. Repairing the link fork is not authorized by KTM.


11.42 Checking throttle cable routing

Preparatory work

- Remove the fuel tank. ⁴ (♠ p. 71)

•

80

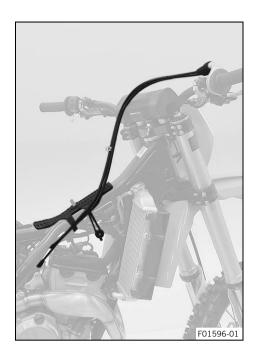

Main work

Check throttle cable routing.


Both throttle cables must be routed, side by side, on the back of the handlebars and above the fuel tank bracket, to the throttle valve body. Both throttle cables must be secured behind the rubber strap of the fuel tank support.

- » If the throttle cable routing is not as specified:
 - Correct the throttle cable routing.

Finishing work

- Mount the seat. (
 p. 66)

11.43 Checking the rubber grips

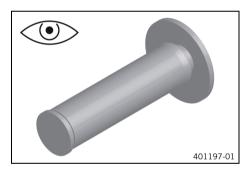

 Check the rubber grips on the handlebar for damage, wear, and looseness.



Info


The rubber grips are vulcanized onto a sleeve on the left and onto the handle tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar. The rubber grip can only be replaced with the sleeve or the throttle tube.

- » If a rubber grip is damaged or worn:
 - Change the rubber grip.
- Check that screw 1 is firmly seated.

Guideline




Diamond **(A)** must be positioned visibly as shown in the figure.

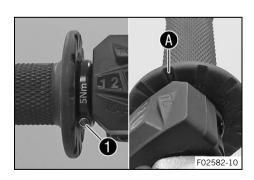

81

11.44 Adjusting the basic position of the clutch lever

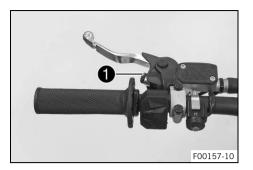

- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw 1.



Info

Turn the adjusting screw counterclockwise to decrease the distance between the clutch lever and the handlebar.

Turn the adjusting screw clockwise to increase the distance between the clutch lever and the handlebar. The range of adjustment is limited.

Only turn the adjusting screw by hand, and do not use force.

Do not make any adjustments while riding.

4

11.45 Checking/correcting the fluid level of the hydraulic clutch



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.




Info

The fluid level rises with increasing wear of the clutch facing discs.

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and clutch lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

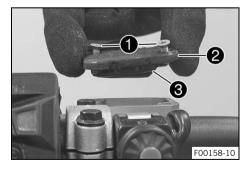

- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Remove cover 2 with membrane 3.
- Check the fluid level.

Fluid level below container rim 4 mm (0.16 in)

- » If the fluid level does not meet specifications:
 - Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 4 / DOT 5.1 (p. 143)

Position the cover with the membrane. Mount and tighten the screws.



Info

Clean up overflowed or spilled brake fluid immediately with water.

11.46 Changing the hydraulic clutch fluid 🔌



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Note

Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

The fluid level rises with increasing wear of the clutch facing discs.


Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and clutch lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

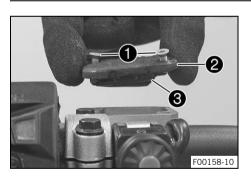

- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover **2** with membrane **3**.

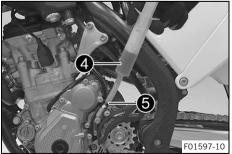

(all SX-F models)

Fill bleeding syringe 4 with the appropriate hydraulic fluid.

Syringe (50329050000)

Brake fluid DOT 4 / DOT 5.1 (p. 143)

- On the clutch slave cylinder, remove the protection cap and mount bleeding syringe 4 with an appropriate hose piece on bleeder screw 6.
- Only loosen bleeder screw 6 on the clutch slave cylinder to the point where filling is possible.




Info

Immediately clean up any brake fluid that has overflowed or spilled with water.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

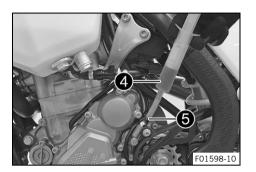

(XC-F US)

Fill bleeding syringe 4 with the appropriate hydraulic fluid.

Syringe (50329050000)

Brake fluid DOT 4 / DOT 5.1 (p. 143)

- On the clutch slave cylinder, remove the protection cap and mount bleeding syringe 4 with an appropriate hose piece on bleeder screw 5.
- Only loosen bleeder screw 6 on the clutch slave cylinder to the point where filling is possible.




Info

Immediately clean up any brake fluid that has overflowed or spilled with water.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

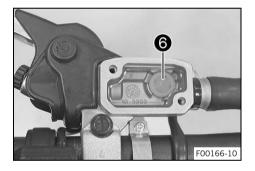

- Now inject the liquid into the system until it emerges from drill hole 6 of the master cylinder without bubbles.
- Now and then, extract the fluid from the master cylinder reservoir to prevent overflow.
- Tighten the bleeder screw and remove the bleeding syringe with the hose. Mount the protection cap.
- Correct the fluid level of the hydraulic clutch.
 Guideline

Fluid level below container	4 mm (0.16 in)
rim	

 Position the cover with the membrane. Mount and tighten the screws.

4

12.1 Checking the free travel of the hand brake lever




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the hand brake lever, pressure builds up on the front brake circuit.

Set the free travel on the hand brake lever in accordance with the specification.

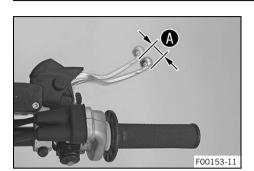

Push the hand brake lever forward and check free travel **A**.



Free travel of hand brake	≥ 3 mm (≥ 0.12 in)
lever	

- If the free travel does not match the specification:
 - Adjust the basic position of the hand brake lever. (🕮 p. 85)

Adjusting the basic position of the hand brake lever 12.2

Preparatory work

Adjust the basic position of the hand brake lever to your hand size by turning adjusting screw 1.



Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the han-

Turn the adjusting screw counterclockwise to decrease the distance between the hand brake lever and the handlebar.

The range of adjustment is limited.

Only turn the adjusting screw by hand, and do not use

Do not make any adjustments while riding.

12.3 Checking the brake discs




Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

F00153-10

Make sure that worn-out brake discs are replaced immediately. (Your authorized KTM workshop will be glad to help.)

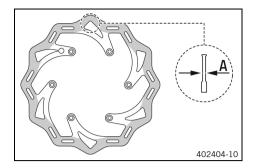

- Check the front and rear brake disc thickness at multiple points for the dimension **A**.



Info

Wear reduces the thickness of the brake disc around the contact surface of the brake linings.

Brake discs - wear limit	
front	2.5 mm (0.098 in)
rear	3.5 mm (0.138 in)

- » If the brake disc thickness is less than the specification:
 - Change the front brake disc.
 - Change the rear brake disc.
- Check the front and rear brake discs for damage, cracking, and deformation.
 - If the brake disc exhibits damage, cracking, or deformation:
 - Change the front brake disc.
 - Change the rear brake disc.

12.4 Checking the front brake fluid level



Warning

Danger of accidents
An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.


 Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



- Check the front brake linings. (p. 88)

Main work

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in level viewer 1.
 - » If the brake fluid level has dropped below the marking A:
 - Add front brake fluid. ⁴ (♠ p. 87)

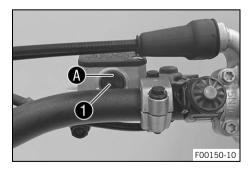

12.5 Adding front brake fluid 🔦



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Note

Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.


Only use clean brake fluid from a sealed container.

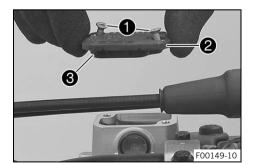

Preparatory work

Check the front brake linings. (p. 88)

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover **2** with membrane **3**.

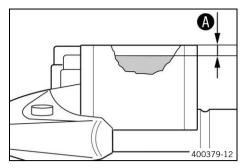


Add brake fluid to level A.

Guideline

5 mm (0.2 in) Level A (brake fluid level below reservoir rim)

Brake fluid DOT 4 / DOT 5.1 (p. 143)

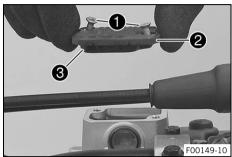

Position cover **2** with membrane **3**. Mount and tighten screws 1.



Info

Clean up overflowed or spilled brake fluid immediately


12.6 **Checking the front brake linings**



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)

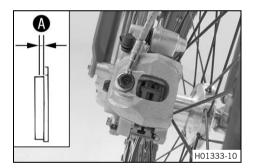

Check the brake linings for minimum thickness **A**.

Minimum thickness A ≥ 1 mm (≥ 0.04 in)

- If the minimum thickness is less than specified:
 - Change the brake linings of the front brake. 4 (🕮 p. 88)
- Check the brake linings for damage and cracking.
 - If damage or wear is encountered:
 - Change the brake linings of the front brake. (🕮 p. 88)

12.7 Changing the brake linings of the front brake &



Warning

Danger of accidents Incorrect servicing will cause the brake system to fail.

Ensure that service work and repairs are performed professionally. (Your authorized KTM workshop will be glad to help.)

Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

 Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Note

Environmental hazard Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info


Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

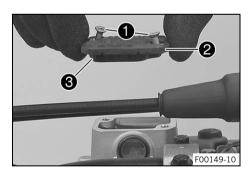

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover **2** with membrane **3**.

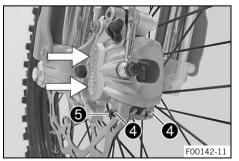



 Manually press the brake caliper toward the brake disc to push back the brake pistons. Ensure that brake fluid does not flow out of the brake fluid reservoir, if necessary extract excess.



Info

 Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

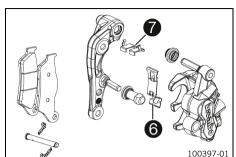



Insert the new brake linings, insert pin 6, and mount cotter

Remove cotter pins **4**, pull out pin **5**, and remove the

Clean the brake caliper and the brake caliper bracket.





pins 4.

Info

Always change the brake linings in pairs.

- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.
- Add brake fluid up to level A.
 Guideline




Brake fluid DOT 4 / DOT 5.1 (p. 143)

- Position cover **2** with membrane **3**.
- Mount and tighten screws 1.



Info

Immediately clean up any brake fluid that has overflowed or spilled with water.

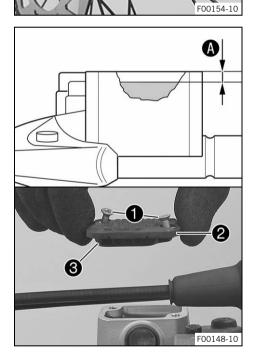

12.8 Checking the free travel of foot brake lever




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

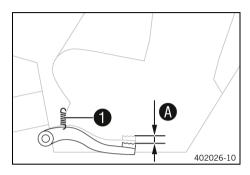

- Disconnect spring 1.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel (A).

Guideline

Free travel at foot brake lever 3 ... 5 mm (0.12 ... 0.2 in)

- » If the free travel does not meet specifications:
 - Adjust the basic position of the foot brake lever. ♣
 (♠ p. 91)
- Reconnect spring 1.

12.9 Adjusting the basic position of the foot brake lever 🔌




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake

Set the free travel on the foot brake lever in accordance with the specification.

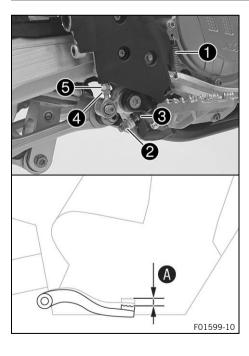

- Detach spring 1.
- Loosen nut **4** and, with push rod **5**, turn it back until you have maximum free travel.
- To adjust the basic position of the foot brake lever to individual requirements, loosen nut 2 and turn screw 3 accordingly.



Info

The range of adjustment is limited.

Turn push rod 5 accordingly until you have free travel A. If necessary, adjust the basic position of the foot brake lever.
 Guideline

Free travel at foot brake lever 3 ... 5 mm (0.12 ... 0.2 in)

Hold push rod 6 and tighten nut 4.
 Guideline

Remaining nuts,	M6	10 Nm (7.4 lbf ft)
chassis	İ	

Hold screw 3 and tighten nut 2.

Guideline

Nut, foot brake lever	M8	20 Nm (14.8 lbf ft)
stop		

Attach spring 1.

12.10 Checking the rear brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.


 Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

Preparatory work

- Check the brake linings of the rear brake. (p. 94)



- Stand the vehicle upright.
- Check the brake fluid level in level viewer 1.
 - » If the brake fluid has dropped below marking **A**:
 - Add rear brake fluid. 🔌 (🕮 p. 92)

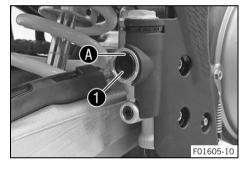

12.11 Adding rear brake fluid 🔌



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

 Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Note

Environmental hazard Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.



Preparatory work

- Check the brake linings of the rear brake. (p. 94)

Main work

- Stand the vehicle upright.
- Remove screw cap 1 with membrane 2 and the O-ring.
- Add brake fluid to level (A).

Brake fluid DOT 4 / DOT 5.1 (p. 143)

 Mount and tighten the screw cap with the membrane and Oring.





Info

Clean up overflowed or spilled brake fluid immediately with water.

4


12.12 Checking the brake linings of the rear brake



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)

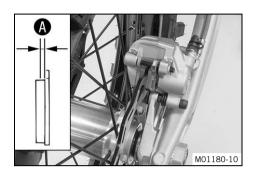

Check the brake linings for minimum thickness **A**.



Minimum thickness (A)

≥ 1 mm (≥ 0.04 in)

- If the minimum thickness is less than specified:
 - Change the brake lingings of the rear brake. 4 (🕮 p. 94)
- Check the brake linings for damage and cracking.
 - If damage or wear is encountered:
 - Change the brake lingings of the rear brake. 🔌 (III p. 94)

12.13 Changing the brake linings of the rear brake &



Warning

Danger of accidents Incorrect servicing will cause the brake system to fail.

 Ensure that service work and repairs are performed professionally. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Note

Environmental hazard Hazardous substances cause environmental damage.


 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint. Only use clean brake fluid from a sealed container.

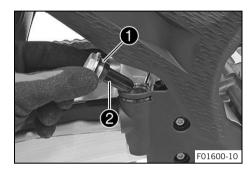

- Position the vehicle upright.
- Remove screw cap 1 with membrane 2 and the O-ring.

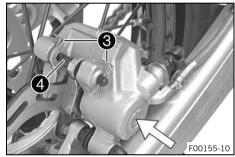

 Manually press the brake caliper toward the brake disc to push back the brake piston. Ensure that brake fluid does not flow out of the brake fluid reservoir, if necessary extract excess.



Info


Make sure that you do not press the brake caliper against the spokes when pushing back the brake piston.

 
- Remove cotter pins 3, pull out pin 4, and remove the brake linings.
- Clean the brake caliper and the brake caliper bracket.
- Check that spring plate 6 in the brake caliper and sliding plate 6 in the brake caliper bracket are seated properly.




Info

The arrow on the spring plate points in the direction of rotation of the brake disc.

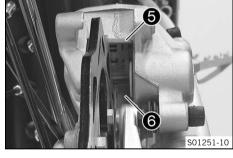



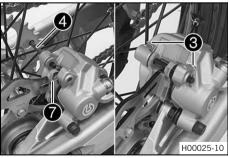


Info

Always change the brake linings in pairs.

Make sure that decoupling plate is mounted on the piston side brake lining.

 Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

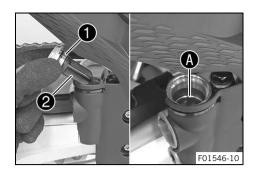

Add brake fluid to level A.

Brake fluid DOT 4 / DOT 5.1 (p. 143)

Mount and tighten screw cap 1 with membrane 2 and the O-ring.


i

Info

Immediately clean up any brake fluid that has over-flowed or spilled with water.

4

13.1 Removing the front wheel 🔦

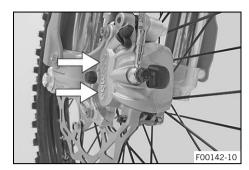

Preparatory work

Raise the motorcycle with a lift stand. (p. 49)


Manually press the brake caliper toward the brake disc to push back the brake pistons.



Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

- Loosen screw 1 by several rotations.
- Loosen screws 2.
- Press on screw 1 to push the wheel spindle out of the axle clamp.
- Remove screw 1.

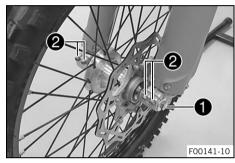



Warning

Danger of accidents Damaged brake discs reduce the braking effect.


- Always lay the wheel down in such a way that the brake disc is not damaged.
- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.



F00140-10


Info

Do not actuate the hand brake lever when the front wheel is removed.

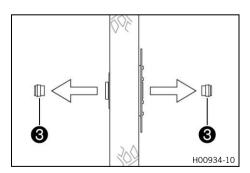

(SX-F EU/US, XC-F US)

Remove spacers 3.

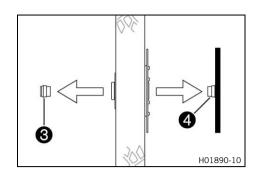

(PRADO)

- Remove spacer 3 and brake disc guard 4.


13.2 Installing the front wheel 4



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

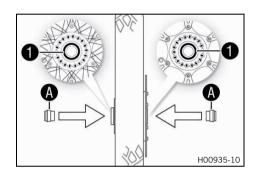

(SX-F EU/US, XC-F US)

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change front wheel bearing.
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.

- Insert the spacers.
- Clean and grease the wheel spindle.


- Position the front wheel and insert the wheel spindle.
 - $\ensuremath{\checkmark}$ The brake linings are correctly positioned.





- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change front wheel bearing.
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.

- Insert the spacer and brake disc guard.
- Clean and grease the wheel spindle.

- Position the front wheel and insert the wheel spindle.
 - ✓ The brake linings are correctly positioned.

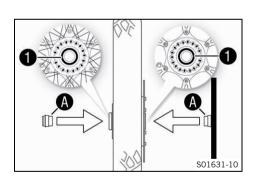

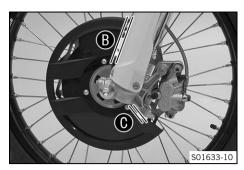

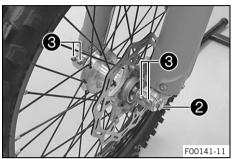

- Mount and tighten screw **2**.

Guideline

Screw, front wheel	M20x1.5	35 Nm (25.8 lbf ft)
spindle		

- Operate the hand brake lever several times until the brake linings are seated correctly against the brake disc.
- Remove the motorcycle from the lift stand. (p. 49)
- Operate the front brake and compress the fork a few times firmly.
 - ✓ The fork legs straighten.
- Tighten screws 3.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	---------------------

13.3 Removing the rear wheel 🔌

Preparatory work

- Raise the motorcycle with a lift stand. (p. 49)

Main work

 Manually press the brake caliper toward the brake disc to push back the brake piston.



Info


Make sure that you do not press the brake caliper against the spokes when pushing back the brake piston.

- Remove nut 1.
- Take off chain adjuster 2. Pull out wheel spindle 3 far enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.



Info

Cover the components to protect them against damage.

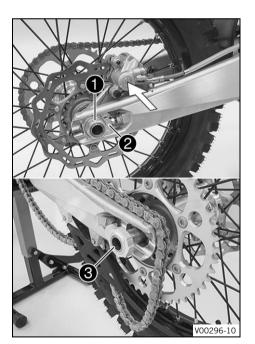

Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Hold the rear wheel and remove the wheel spindle. Take the rear wheel out of the link fork.

 


Info

Do not operate the foot brake lever when the rear wheel is removed.



- Remove spacers 4.






Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

H03002-10

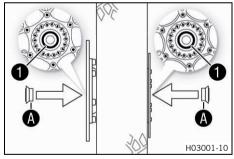

V00297-10

Main wor

- Check the wheel bearing for damage and wear.
 - If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing.
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.


Long-life grease (p. 145)

- Insert the spacers.
- Clean and grease the wheel spindle.

Long-life grease (p. 145)

- Position rear wheel and insert wheel spindle 2.
 - ✓ The brake linings are correctly positioned.
- Mount the chain.



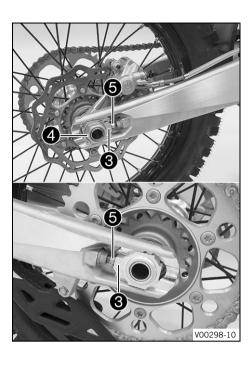

- Position chain adjuster 3. Mount nut 4, but do not tighten it yet.
- Make sure that chain adjusters 3 are fitted correctly on adjusting screws 5.
- Tighten nut 4.

Guideline

Nut, rear wheel spin-	M25x1.5	80 Nm (59 lbf ft)
dle		



Info

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length.

Chain adjusters 3 can be turned by 180°.

Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

Finishing work

- Remove the motorcycle from the lift stand. (p. 49)

13.5 Checking the tire condition



nfo

Only mount tires approved and/or recommended by KTM.

Other tires could have a negative effect on handling characteristics.

400602-10

The type, condition, and pressure of the tires all have a major impact on the handling characteristic of the motorcycle.

The tires mounted on the front and rear wheels must have a similar profile.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

Preparatory work

Main work

- Check the front and rear tires for cuts, embedded objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires. 🔌



- Check the tire age.



Info

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.

KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear

- » If the tires are more than 5 years old:
 - Change the tires.


Finishing work

13.6 Checking tire pressure



Info

Low tire pressure leads to abnormal wear and overheating of the tire. Correct tire pressure ensures optimal riding comfort and maximum tire service life.

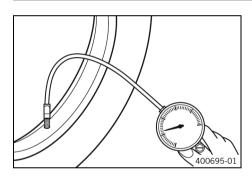

- Remove protection cap.
- Check tire pressure when the tires are cold.

Offroad tire pressure	
front	1.0 bar (15 psi)
rear	1.0 bar (15 psi)

- » If the tire pressure does not meet specifications:
 - Correct tire pressure.
- Mount the protection cap.

13.7 Checking the spoke tension



Warning

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and result in secondary damage.

The spokes break due to being overloaded if they are too tightly tensioned. If the tension in the spokes is too low, then lateral and radial run-out will form in the wheel. Other spokes will become looser as a result

- Check spoke tension regularly, and in particular on a new vehicle. (Your authorized KTM workshop will be glad to help.)

_

Strike each spoke briefly using a screwdriver blade.

i

Info

The frequency of the sound depends on the spoke length and spoke diameter.

If spokes of the same length and diameter vibrate with a different tone, this is an indication that the spoke tensions differ.

You should hear a high note.

- » If the spoke tension differs:
 - Correct the spoke tension.
- Check the spoke torque.

Guideline

Spoke nipple, front wheel	M4.5	6 Nm (4.4 lbf ft)
Spoke nipple, rear wheel	M4.5	6 Nm (4.4 lbf ft)

Torque wrench kit (58429094000)

4

14.1 Removing the 12-V battery 4



Caution

Danger of burns The voltage regulator gets very hot when the vehicle is driven.

- Allow the voltage regulator to cool down before performing any work.



Note

Environmental hazard 12 V batteries contain environmentally hazardous materials.


- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.

Preparatory work


- Remove the seat. (🕮 p. 65)

Main work

- Hang the voltage regulator to the side.
- Disconnect negative cable from the 12-V battery.
- Pull back positive terminal cover 2 and disconnect the positive cable from the 12-V battery.
- Remove screw 3.
- Pull holding bracket 4 forward and remove the 12-V battery upwards.

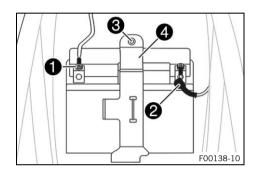

14.2 Installing the 12-V battery 🔌

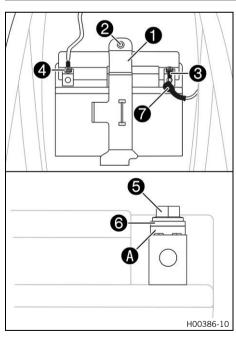

Main work

- Insert the 12 V battery into the battery compartment with the terminals facing forward and secure with holding bracket ①.

12-V battery (HJTZ5S-FP-C) (p. 137)

Mount and tighten screw 2.

Guideline

Remaining screws,	M6	10 Nm (7.4 lbf ft)
chassis		

Connect positive cable 3 to the 12-V battery.

Guideline

Screw, battery termi-	M5	2.5 Nm
nal		(1.84 lbf ft)

Connect negative cable 4 to the 12-V battery.

Guideline

Screw, battery termi-	M5	2.5 Nm
nal		(1.84 lbf ft)

Contact disks **A** must be mounted under screws **5** and cable sockets **6** with the claws toward the battery terminal.

- Slide positive terminal cover over the positive terminal.
- Position the voltage regulator.

104

14.3 Charging the 12-V battery 🔦



Warning

Risk of injury 12 V batteries contain harmful substances.

- Keep 12 V batteries out of the reach of children.
- Keep sparks and open flames away from 12 V batteries.
- Only charge 12 V batteries in well-ventilated rooms.
- Maintain a minimum clearance from inflammable materials when charging 12 V batteries.

Minimum clearance

1 m (3 ft)

- Do not charge deeply discharged 12 V batteries if the charge is already below the minimum voltage.
 Minimum voltage before the start of the charge 9 V
- Dispose of 12 V batteries with less than the minimum voltage correctly.



Note

Environmental hazard 12 V batteries contain environmentally hazardous materials.

- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.



Info

Even if there is no load on the 12-V battery, it discharges each day.

The charging level and the method of charging are very important for the service life of the 12-V battery. Rapid recharging with a high charging current shortens the service life of the battery.

If the charging current, charging voltage, or charging time is exceeded, the 12 V battery will be destroyed. If the 12-V battery is depleted by repeated starting, the 12-V battery must be charged immediately. If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery.

The 12-V battery is maintenance-free.

Preparatory work


- Remove the seat. (p. 65)
- Remove the 12-V battery. ◀ (의 p. 104)



- Check the battery voltage.
 - » Battery voltage: < 9 V
 - Do not charge the 12 V battery.
 - Replace the 12 V battery and dispose of the old 12 V battery properly.
 - » If the specifications have been met:

Battery voltage: ≥ 9 V

 Connect a battery charger to the 12-V battery. Switch on the battery charger.

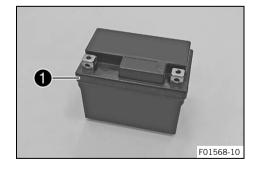

Guideline

The charging current, charging voltage, and charging time must not be exceeded.		
Maximum charging voltage	14.4 V	
Maximum charging cur- rent	3.0 A	
Maximum charging time	24 h	
Recharge the 12-V bat- tery regularly when the motorcycle is not being used	6 months	

(EU) battery charger (79629974000)

Alternative 1

(US) battery charger (79629974500)

These battery chargers test whether the 12 V battery retains its voltage. It is also impossible to overcharge the 12 V battery with these battery chargers. The charging time may be longer at low temperatures.

These battery chargers are only suitable for lithium iron phosphate batteries. Read the accompanying KTM PowerParts instructions.



Info

Never remove cover 1.



Switch off the battery charger after charging and disconnect it from the 12-V battery.

Finishing work

- Install the 12-V battery. 🍑 (🕮 p. 104)
- Mount the seat. (p. 66)

14.4 **Changing main fuse**



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.



Caution

Danger of burns The voltage regulator gets very hot when the vehicle is driven.

- Allow the voltage regulator to cool down before performing any work.



Info

The main fuse protects all power consumers of the vehicle. It is located in the starter relay housing under the seat.

Preparatory work

- Remove the seat. (p. 65)

Main work

Pull starter relay 1 from the holder.



- Take off protection caps 2.
- Remove faulty main fuse 3.



Info

A faulty fuse has a burned-out fuse wire **A**. A spare fuse **4** is located in the starter relay.

- Insert a new main fuse.

Fuse (58011109110) (🕮 p. 137)

- Check that the electrical system is functioning properly.



Tip

Insert a spare fuse so that it is available if needed.


- Mount the protection caps.
- Mount the starter relay onto the holder and route the cable.

Finishing work

S02304-10


- Mount the seat. (p. 66)

14.5 Diagnostics connector

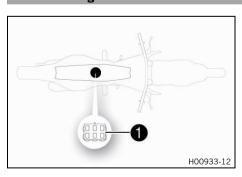

Diagnostics connector 1 is located under the seat.

15.1 Cooling system

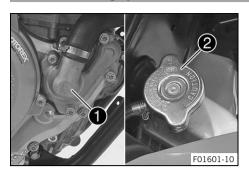

Water pump 1 in the engine circulates the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ②. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C (248 °F)

Cooling is effected by the air stream.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

15.2 Checking the antifreeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.


- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

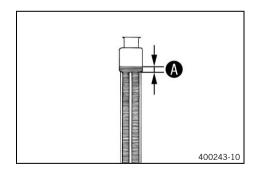

Condition

The engine is cold.

- Stand the motorcycle upright on a horizontal surface.
- Remove the radiator cap.
- Check the antifreeze in the coolant.

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.
- Check the coolant level in the radiator.

Coolant level A above the	10 mm (0.39 in)
radiator fins	

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (@ p. 143)

- Mount the radiator cap.

•

15.3 Checking the coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.


- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses
 or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

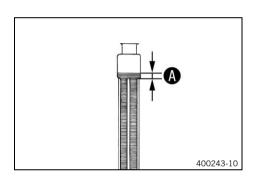

Condition

The engine is cold.

- Stand the motorcycle upright on a horizontal surface.
- Remove the radiator cap.
- Check the coolant level in the radiator.

Coolant level (A) above the	10 mm (0.39 in)
radiator fins	

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (p. 143)

Mount the radiator cap.

4

15.4 Draining the coolant 🔦



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

Preparatory work (PRADO)

Main work

- Position the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw 1. Take off radiator cap 2.
- Completely drain the coolant.
- Mount and tighten screw with a new seal ring.
 Guideline

Screw, water pump	M6	10 Nm (7.4 lbf ft)
cover		


15.5 Refilling with coolant 🔦



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

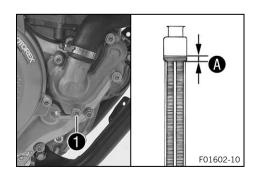

Main work

- Make sure that screw is tightened.
- Position the motorcycle upright.
- Pour coolant in up to measurement (A) above the radiator fins.
 Guideline

Distance A above the ator fins	radi-	10 mm	(0.39 in)
Coolant	0.95	(1 qt.)	Coolant (p. 143)

- Mount the radiator cap.
- Go for a short test ride.
- Check the coolant level. (
 p. 109)

•

Finishing work (PRADO)

15.6 Changing the coolant



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.


Preparatory work (PRADO)

- Remove motor guard. (p. 51)

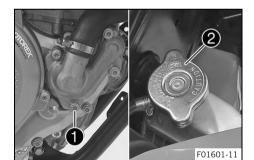

(I KADO)

- Main work
- Position the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw 1. Take off radiator cap 2.
- Completely drain the coolant.

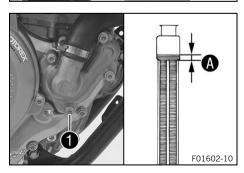

Mount and tighten screw with a new seal ring.
 Guideline

Screw, water pump	M6	10 Nm (7.4 lbf ft)
cover		

Pour coolant in up to measurement A above the radiator fins.
 Guideline

Distance A above the ator fins	radi-	10 mm	(0.39 in)
Coolant	0.95	(1 qt.)	Coolant (p. 143)

- Mount the radiator cap.


- Go for a short test ride.
- Check the coolant level. (p. 109)

Finishing work (PRADO)

- Install the motor guard. (🕮 p. 52)

_

16.1 Checking throttle cable play

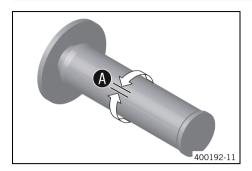

- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle grip back and forth slightly and determine the play in throttle cable (A).

Throttle cable play

3 ... 5 mm (0.12 ... 0.2 in)

- » If the throttle cable play does not meet specifications:
- Push the cold start button in all the way.

When the throttle grip is turned forward, the cold start button returns to its original position.

- » If the cold start button does not return to its original position:



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and let it run at idle speed. Move the handlebar to and fro over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
 - Adjust the throttle cable play. ◀ (IP p. 113)

16.2 Adjusting the throttle cable play 4




Info


If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.


Preparatory work

- Remove the seat. (
 p. 65)
- Remove the fuel tank. 🔌 (🕮 p. 71)
- Check throttle cable routing. (p. 80)

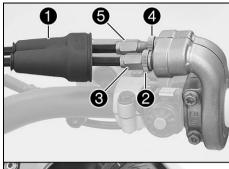



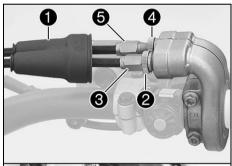

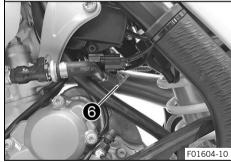

Main work

(all SX-F models)

- Move the handlebar to the straight-ahead position.
- Push back sleeve 1.
- Loosen nut **2**.
- Turn adjusting screw 3 in as far as possible.
- Loosen nut 4.
- Push cold start button 6 all the way to the stop.
- Turn adjusting screw 5 so that the cold start button moves to the basic position when the throttle grip is turned to the front.
- Tighten nut 4.
- Turn barrel adjuster **3** so that there is play in the throttle cable at the throttle grip.

Guideline

Throttle cable play	3 5 mm (0.12
	0.2 in)

- Tighten nut **2**.
- Slide on sleeve 1.
- Check the throttle grip for smooth operation.

(XC-F US)

- Move the handlebar to the straight-ahead position.
- Push back sleeve 1.
- Loosen nut **2**.
- Turn adjusting screw 3 in as far as possible.
- Loosen nut 4.
- Push cold start button 6 all the way to the stop.
- Turn adjusting screw 5 so that the cold start button moves to the basic position when the throttle grip is turned to the front.
- Tighten nut **4**.
- Turn barrel adjuster **3** so that there is play in the throttle cable at the throttle grip.

Guideline

Throttle cable play	3 5 mm (0.12
	0.2 in)

- Tighten nut 2.
- Slide on sleeve 1.
- Check the throttle grip for smooth operation.

Finishing work

•


16.3 Adjusting the characteristic map of the throttle response 4



Info


On the throttle grip, the characteristic map of the throttle response is changed by changing the guide plate.

A guide plate with a different characteristic map is supplied.

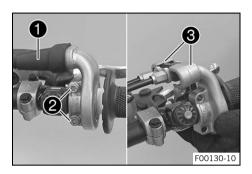

Main work

- Push back sleeve 1.
- Remove screws **2** and half-shells **3**.
- Detach the throttle cables and take off the grip tube.

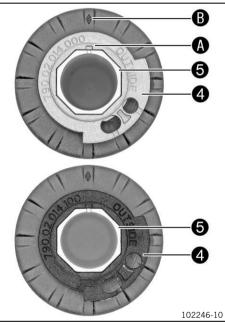

- Remove guide plate **4** from handle tube **5**.
- Position the required guide plate on the grip tube.
 Guideline

The label **OUTSIDE** must be visible. Marking **A** must be positioned at marking **B**.

Black guide plate (79002014100)

Alternative 1

Grey guide plate (79002014000)



Info

The gray guide plate opens the throttle valve more slowly.

The black guide plate opens the throttle valve more quickly.

The black guide plate is already mounted when the vehicle is delivered.



- Clean the outside of the handlebar and the inside of the grip tube. Mount the grip tube on the handlebar.
- Attach the throttle cables to the guide plate and route correctly.
- Position half-shells 3, mount and tighten screws 2.
 Guideline

Screw, throttle grip M6 5 Nm (3.7 lbf ft)

 Slide on sleeve 1 and check the throttle grip for ease of movement.

Finishing work

Check the throttle cable play. (
 p. 113)

115

16.4 Changing the mapping




Info

The desired engine characteristic can be activated via the **MAP** button on the combination switch.

The setting most recently selected is activated again when restarting.

The traction control can also be activated in each mapping using the **TC** button.

The mapping can also be changed during the ride.

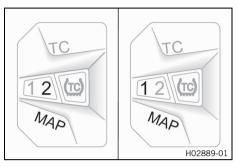


Activating STANDARD mapping:

- Press button MAP until LED 1 lights up.

Guideline

Engine speed < 4,000 rpm

✓ STANDARD – balanced response

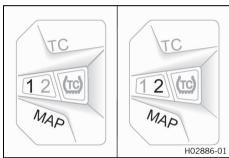

Activating ADVANCED mapping:

Press button MAP until LED 2 lights up.

Guideline

Engine speed < 4,000 rpm

✓ ADVANCED – direct response


16.5 Adjusting the idle speed 🔦



Warning

Danger of accidents The engine may go out spontaneously if the idle speed is set too low.

- Set the idle speed to the specified value. (Your authorized KTM workshop will be glad to help.)

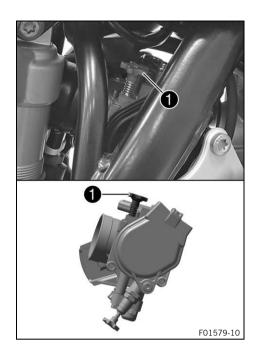

- Run the engine until warm.
 - ✓ The cold start button is deactivated The cold start button is in its basic position. (

 p. 19)



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Set the idle speed by turning idle speed adjusting screw ①.

 Guideline

Idle speed	2,250 2,350 rpm

Tachometer (45129075000)



Info


Turning counterclockwise lowers the idle speed. Turning clockwise raises the idle speed.

16.6 Teaching the throttle valve position



nfo

If the control unit detects that the throttle valve position at idle speed needs to be retaught, then the malfunction indicator lamp flashes 2x per second.

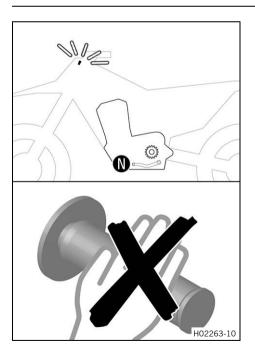



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Allow the vehicle to run at idle speed.
 - ✓ The malfunction indicator lamp stops flashing once teaching is completed.



Info


If the engine becomes too hot, perform a cool-down ride at medium revs.

Then do not switch off the engine after this, but leave it running at idle speed until teaching is completed.

16.7 Checking the basic position of the shift lever

Info

When driving, the shift lever must not touch the rider's boot when in the basic position. When the shift lever keeps touching the boot, the transmission will be subject to an excessive load.

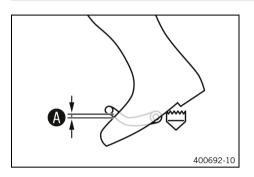


Sit on the vehicle in the riding position and determine distance A between the upper edge of your boot and the shift lever.


Distance between shift lever	10 20 mm (0.39
and upper edge of boot	0.79 in)

- If the distance does not meet specifications:
 - Adjust the basic position of the shift lever. (p. 118)

16.8 Adjusting the basic position of the shift lever &

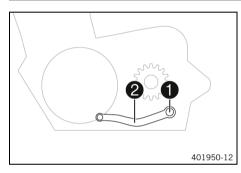

Remove screw 1 with the washers and take off shift lever 2.

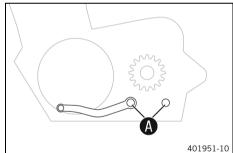

- Clean gear teeth **A** of the shift lever and shift shaft.
- Mount the shift lever on the shift shaft in the required position and engage gearing.



Info

The range of adjustment is limited. The shift lever must not come into contact with any other vehicle components during the shift procedure.

Locate and tighten screw **1** with the washers. Guideline

Screw, shift	M6	14 Nm (10.3 lbf ft)
lever		Loctite®243™

17.1 Changing the fuel screen 🔦



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

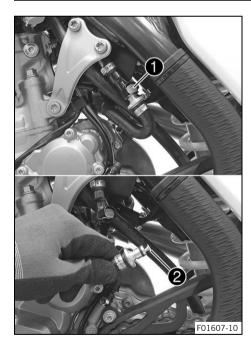

(all SX-F models)

Clean quick release coupling 1 thoroughly with compressed air.



Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection

- Disconnect the quick release coupling.



Info

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen **2** out of the connecting piece.
- Insert the new fuel screen all the way into the connecting piece.
- Lubricate the O-ring and join the quick release coupling.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and check the response.

(XC-F US)

Clean quick release coupling thoroughly with compressed air.



Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Disconnect the quick release coupling.



Info

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen 2 out of the connecting piece.
- Insert the new fuel screen all the way into the connecting piece.
- Lubricate the O-ring and join the quick release coupling.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and check the response.

•

17.2 Checking the engine oil level




Info

The engine oil level can be checked when the engine is cold or warm.

Preparatory work

- Stand the motorcycle upright on a horizontal surface.

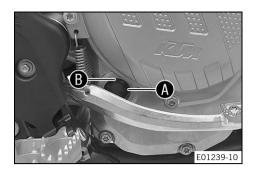

Condition

The engine is cold.

- Check the engine oil level.

The engine oil reaches the middle of level viewer **A**



- If the engine oil does not reach the middle of the level viewer:
 - Add engine oil. (p. 123)

Condition

The engine is at operating temperature.

Check the engine oil level.



Info

After switching off the engine, wait one minute before checking the level.

The engine oil level is between the middle of the level viewer **A** and the upper edge of the level viewer **B**.

- If the engine oil does not reach the middle of level viewer A:
 - Add engine oil. (
 p. 123)

17.3 Changing the engine oil and oil filter, cleaning the oil screen 🔌



Warning

Danger of scalding Engine and gear oil get very hot when the motorcycle is ridden.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Note

Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Drain the engine oil while the engine is at operating temperature.

 
E01240-10

Preparatory work

Park the motorcycle on a level surface.

(PRADO)


- Position an appropriate container under the engine.
- Remove oil drain plug **1** with the magnet and seal ring.




Do not remove screws **2**.




17 SERVICE WORK ON THE ENGINE

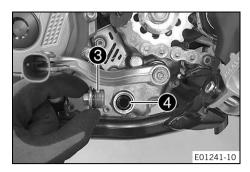

- Remove screw plug 3 with oil screen 4 and the O-rings.
- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.

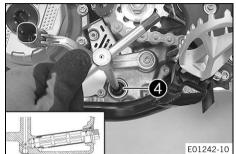

- Position oil screen 4 with the O-rings on a pin wrench.
- Position the pin wrench through the drill hole of the screw plug in the opposite section of the engine case.
- Push the oil screen all the way into the engine case.

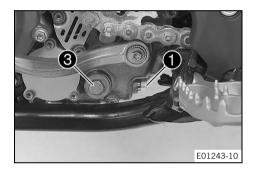

Mount and tighten screw plug 3 with the O-ring.
 Guideline


Screw plug, oil	M20x1.5	15 Nm (11.1 lbf ft)
screen		

 Mount and tighten oil drain plug with the magnet and a new seal ring.


Guideline


Oil drain plug with	M12x1.5	20 Nm (14.8 lbf ft)
magnet		

5 5 E01244-10 Remove screws 6. Remove the oil filter cover with the O-ring.

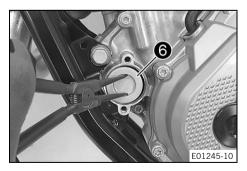

- Pull oil filter 6 out of the oil filter housing.
 - Lock ring plier (51012011000)
- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.

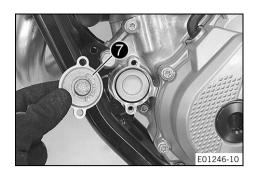

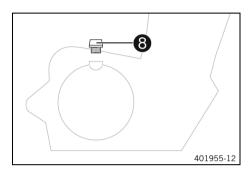

- Lay the motorcycle on its side and fill the oil filter housing to about ½ full with engine oil.
- Fill the oil filter with engine oil and position the oil filter in the housing.
- Oil the O-ring of the oil filter cover and mount it together with oil filter cover 7.
- Mount and tighten the screws.

Guideline

Screw, oil filter cover	M6	10 Nm (7.4 lbf ft)

- Stand the motorcycle upright.
- Remove filler plug **8** with the O-ring, and fill up with engine oil.

Engine oil	1.0 l (1.1 qt.)	
		(SAE 10W/50)
		(🕮 p. 143)



Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

- Mount and tighten the filler plug together with the O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and check for tightness.

Finishing work (PRADO)

- Install the motor guard. (♠ p. 52)
- Check the engine oil level. (p. 120)


17.4 Adding engine oil



Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

17 SERVICE WORK ON THE ENGINE

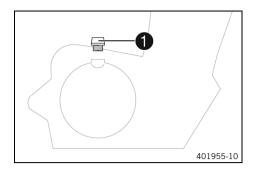

- Remove filler plug 1 with the O-ring.
- Add the same engine oil used when the last oil change was carried out.

Engine oil (SAE 10W/50) (p. 143)



Info

For optimal performance of the engine oil, do not mix different types of engine oil.

We recommended changing the engine oil when necessary.

- Mount and tighten the filler plug together with the O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and check that it is oil-tight.

•

18.1 Cleaning the motorcycle

Note

Material damage Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component. Minimum clearance 60 cm (23.6 in)



Note


Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

If you clean the motorcycle regularly, its value and appearance will be maintained over a long period. Avoid direct sunshine on the motorcycle during cleaning.

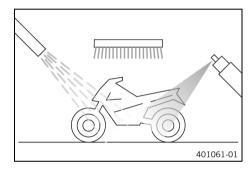

- Close off the exhaust system to keep water from entering.
- First remove coarse dirt particles with a gentle spray of water.
- Spray very dirty areas with a normal motorcycle cleaner and then clean with a paintbrush.

Motorcycle cleaner (p. 145)



Info

Use warm water containing normal motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the closure of the exhaust system.



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.
- After cleaning, ride a short distance until the engine reaches operating temperature.



The heat produced causes water at inaccessible locations in the engine and on the brake system to evapo-

Push back the protection caps of the handlebar controls to allow any water that has penetrated to evaporate.

- After the motorcycle has cooled off, lubricate all moving parts and bearings.
- Clean the chain. (p. 75)
- Treat bare metal parts (except for brake discs and the exhaust system) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber ($\ensuremath{\mathbb{Q}}$ p. 145)

 Treat all plastic parts and powder-coated parts with a mild cleaning and care agent.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (p. 146)

4

19.1 Storage



Warning

Danger of poisoning Fuel is poisonous and a health hazard.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



Info

If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

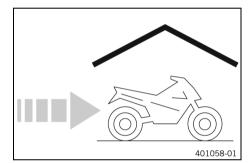

 When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (p. 145)

- Clean the motorcycle. (
 p. 125)
- Change the engine oil and oil filter, clean the oil screen. ⁴
 (□ p. 121)
- Check the antifreeze and coolant level. (p. 108)
- Remove the 12-V battery. ♣ (

 p. 104)
- Charge the 12-V battery. → (□ p. 105)
 Guideline

dardonno	
Ideal charging and storage	10 20 °C (50 68 °F)
temperature of the lithium-	
ion battery	

 Store the vehicle in a dry location that is not subject to large fluctuations in temperature.



Info

KTM recommends jacking up the motorcycle.


- Cover the vehicle with a tarp or similar cover that is permeable to air.

Info

Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion. Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

•

19.2 Putting into operation after storage

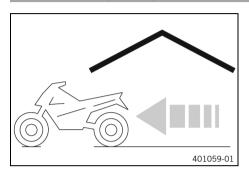

- Install the 12-V battery. ◀ (♣ p. 104)
- Perform checks and maintenance measures when preparing for use. (IP p. 27)
- Take a test ride.

4

Faults	Possible cause	Act	ion
The engine does not turn when	Operating error	-	Carry out start procedure. (p. 27)
the start button is pressed	12-V battery discharged	_	Charge the 12-V battery. ♣ (p. 105)
		_	Check the charging voltage.
		_	Check the open-circuit current.
		_	Check the stator winding of the alter-
			nator. 🔏
	Main fuse blown	_	Change the main fuse. (🕮 p. 106)
	Faulty starter relay	_	Check the starter relay. 4
	Faulty starter motor	-	Check the starter motor.
Engine turns but does not start	Quick release coupling not joined	-	Join quick release coupling.
	Fuel screen in the quick release coupling is clogged	_	Change the fuel screen. ◄ (🕮 p. 119)
	Idle speed is not set correctly	_	Adjust the idle speed. ♣ (p. 116)
	Spark plug oily or wet	_	Clean and dry the spark plug, or change it if necessary.
	Plug gap of spark plug too wide	_	Adjust plug gap.
			Guideline
			Spark plug electrode gap 0.8 mm (0.031 in)
	Short-circuit cable in wiring	_	Check the wiring harness. (visual
	harness frayed, switch-off but-		check)
	ton faulty	_	Check the electrical system.
	Malfunction in the electronic fuel injection	_	Read out fault memory using the KTM diagnostics tool.
Engine does not speed up	Malfunction in the electronic fuel injection	_	Read out fault memory using the KTM diagnostics tool.
Engine has too little power	Air filter is very dirty	-	Clean the air filter and air filter box. ◀ (興 p. 68)
	Fuel filter is very dirty	_	Change the fuel filter.
	Malfunction in the electronic	_	Read out fault memory using the KTM
	fuel injection		diagnostics tool. 🔏
	Exhaust system leaks,	-	Check exhaust system for damage.
	deformed or too little glass	_	Change the glass fiber yarn filling of
	fiber yarn filling in main silencer		the main silencer. 🔌 🕮 p. 70)
	Valve clearance too little	_	Adjust the valve clearance.
Engine dies during the trip	Lack of fuel	_	Refuel. (p. 32)
Engine overheats	Too little coolant in cooling sys-	_	Check the cooling system for leakage.
Linguis avernous	tem	_	Check the coolant level. (p. 109)
	Too little air stream	_	Switch off the engine when standing.
	Radiator fins very dirty	_	Clean the radiator fins.
	Foam formation in cooling sys-	_	Drain the coolant. ♣ (♠ p. 109)
	tem	_	Refill with coolant. (© p. 110)
	Bent radiator hose	_	Change the radiator hose.
		1	

Faults	Possible cause	Action
Malfunction indicator lamp lights up or flashes	Malfunction in the electronic fuel injection	Check the wiring for damage and the electrical plug-in connections for corrosion and damage.
		 Read out fault memory using the KTM diagnostics tool. <
High oil consumption	Engine vent hose bent	 Route the vent hose without bends or change it if necessary.
	Engine oil level too high	- Check the engine oil level. (🕮 p. 120)
	Engine oil too thin (low viscosity)	- Change the engine oil and oil filter, clean the oil screen. ❖ (ᆗ p. 121)
	Piston or cylinder worn	Measure the piston/cylinder mounting clearance.
12-V battery discharged	12 V battery is not charging	 Check the charging voltage.
		 Check the stator winding of the alternator.
	Unwanted power consumer	 Check the open-circuit current.

Blink code for malfunction indicator lamp	(FI)
mulcator famp	02a Malfunction indicator lamp flashes 2x per second
Error level condition	Teaching of throttle valve position required
Blink code for malfunction indicator lamp	FI
	02 Malfunction indicator lamp flashes 2x short
Error level condition	Crankshaft speed sensor – circuit fault
Blink code for malfunction indicator lamp	06 Malfunction indicator lamp flashes 6x short
Error level condition	Throttle valve position sensor circuit A – circuit fault
	Throttle valve position sensor circuit A – input signal too high
Blink code for malfunction indicator lamp	(FI)
	09 Malfunction indicator lamp flashes 9x short
Error level condition	Induction manifold pressure sensor – circuit fault
	Induction manifold pressure sensor – input signal too low
Blink code for malfunction indicator lamp	(F)
Error level condition	12 Malfunction indicator lamp flashes 1x long, 2x short
Ellor level collultion	Coolant temperature sensor – circuit fault Coolant temperature sensor – input signal too low
	occident temperature sensor impat signal too low
Blink code for malfunction indicator lamp	13 Malfunction indicator lamp flashes 1x long, 3x short
Error level condition	Intake air temperature sensor – circuit fault
	Intake air temperature sensor – input signal too low
Blink code for malfunction	
indicator lamp	(FI)
	15 Malfunction indicator lamp flashes 1x long, 5x short
Error level condition	Tilt sensor (A/D type) – input signal too low
	Tilt sensor (A/D type) – input signal too high
Blink code for malfunction indicator lamp	FI
	21 Malfunction indicator lamp flashes 2x long, 1x short
Error level condition	Battery voltage – input voltage too high
Blink code for malfunction indicator lamp	(F)
Error lovel condition	22 Malfunction indicator lamp flashes 2x long, 2x short
Error level condition	Gear position sensor – circuit fault
	Gear position sensor – input signal too high Gear position sensor – malfunction
	deal position sensor – manufiction

21 BLINK CODE

Blink code for malfunction indicator lamp	(FI)
	33 Malfunction indicator lamp flashes 3x long, 3x short
Error level condition	Injection valve cylinder 1 – circuit fault
Blink code for malfunction indicator lamp	F
	37 Malfunction indicator lamp flashes 3x long, 7x short
Error level condition	Ignition coil – circuit fault
Blink code for malfunction indicator lamp	41 Malfunction indicator lamp flashes 4x long, 1x short
Error level condition	Fuel pump controller – short circuit to ground/open circuit
	Open/short circuit to plus
Blink code for malfunction indicator lamp	65 Malfunction indicator lamp flashes 6x long, 5x short
Error level condition	EEPROM – malfunction
Blink code for malfunction indicator lamp	FI
	Malfunction indicator lamp flashes continuously
Error level condition	THREF – malfunction

22.1 Engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	249.91 cm ³ (15.2505 cu in)
Stroke	52.3 mm (2.059 in)
Bore	78 mm (3.07 in)
Compression ratio	14.4:1
Idle speed	2,250 2,350 rpm
Control	DOHC, four valves controlled via cam lever, drive via
Control	timing chain
Valve diameter, intake	32.5 mm (1.28 in)
Valve diameter, exhaust	26.5 mm (1.043 in)
Valve clearance	2010 11111 (210 10 11)
Intake at: 20 °C (68 °F)	0.08 0.15 mm (0.0031 0.0059 in)
Exhaust at: 20 °C (68 °F)	0.12 0.19 mm (0.0047 0.0075 in)
Crankshaft bearing	2 cylinder bearings
Conrod bearing	Slide bearing
Piston pin bearing	Bearing bush
Pistons	Forged light alloy
Piston rings	1 compression ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication with 2 trochoidal
Eligine lubrication	pumps
Primary transmission	24:73
Clutch	Multidisc clutch in oil bath/hydraulically activated
Gearbox (all SX-F models)	5 gear transmission, claw shifted
Gearbox (XC-F US)	6 gear transmission, claw shifted
Transmission ratio (all SX-F models)	
First gear	13:32
Second gear	16:32
Third gear	17:28
Fourth gear	19:26
Fifth gear	21:25
Transmission ratio (XC-F US)	I
First gear	13:32
Second gear	16:30
Third gear	16:24
Fourth gear	23:28
Fifth gear	23:23
Sixth gear	26:20
Alternator	12 V, 70 W
Ignition	Contactless controlled fully electronic ignition with
	digital ignition adjustment
Spark plug	NGK LMAR9AI-8
Spark plug electrode gap	0.8 mm (0.031 in)
Cooling	Water cooling, permanent circulation of coolant by water pump

Starting aid	Starter motor
--------------	---------------

22.2 Engine tightening torques

Nozzle, crank chamber ventilation	M4	2 Nm (1.5 lbf ft)	
		Loctite [®]	243™
Oil nozzle for alternator cooling	M4	2 Nm (1.5 lbf ft) Loctite®	243™
Oil nozzle for balancer shaft lubrication	M4	2 Nm (1.5 lbf ft)	243TM
Oil nozzle for clutch lubrication	M4	2 Nm (1.5 lbf ft)	
On nozzie for clutch lubrication	1014	Loctite®	243™
Oil nozzle for conrod bearing lubrication	M4	2 Nm (1.5 lbf ft) Loctite®	9243™
Oil nozzle for main bearing lubrica-	M4	2 Nm (1.5 lbf ft)	
tion	IVI4	Loctite®	⁹ 243™
Screw, oil nozzle for piston cooling	M4	2.5 Nm (1.84 lbf ft)	0.4.2.TM
Lastina assess for baseing	ME	Loctite®	243''''
Locking screw for bearing	M5	6 Nm (4.4 lbf ft) Loctite®	⁹ 243™
Oil channel screw plug in alterna-	M5	2 Nm (1.5 lbf ft)	
tor cover		Loctite [®]	243™
Oil nozzle for cam lever lubrication	M5	3 Nm (2.2 lbf ft) Loctite®	² 43™
Oil nozzle, piston cooling	M5	2 Nm (1.5 lbf ft)	ЭДЗТМ
Screw, bearing bolt, oil pump idler	M5	6 Nm (4.4 lbf ft)	
gear	Wis	Loctite®	243тм
Screw, clutch spring retainer	M5	6 Nm (4.4 lbf ft)	
Screw, crankshaft speed sensor	M5	6 Nm (4.4 lbf ft)	
		Loctite [®]	243™
Screw, gear position sensor	M5	5 Nm (3.7 lbf ft) Loctite®	³ 243™
Screw, locking lever	M5	6 Nm (4.4 lbf ft)	
, 3		Loctite®	243тм
Screw, oil pump cover	M5	6 Nm (4.4 lbf ft)) 243тм
Screw, stator	M5	6 Nm (4.4 lbf ft)	
ociew, statei	Wil	Loctite®	⁹ 243™
Nut, cylinder head	M6	10 Nm (7.4 lbf ft)	
N. I	l MC	Lubricated with eng	ine oil
Nut, water pump impeller	M6	6 Nm (4.4 lbf ft) Loctite®	³ 243™
Screw, alternator cover	M6	10 Nm (7.4 lbf ft)	
Screw, clutch cover	M6	10 Nm (7.4 lbf ft)	
Screw, clutch slave cylinder	M6	10 Nm (7.4 lbf ft)	
Screw, engine case	M6	10 Nm (7.4 lbf ft)	
Screw, exhaust flange	M6	10 Nm (7.4 lbf ft)	ЭЛЭТМ
		roctite _e	243'''

Screw, guide rail	M6	10 Nm (7.4 lbf ft)
	IVIO	Loctite®243™
Screw, oil filter cover	M6	10 Nm (7.4 lbf ft)
Screw, shift drum locating	M6	10 Nm (7.4 lbf ft)
		Loctite®243™
Screw, shift lever	M6	14 Nm (10.3 lbf ft)
		Loctite®243™
Screw, starter motor	M6	10 Nm (7.4 lbf ft)
Screw, timing chain failure protec-	M6	10 Nm (7.4 lbf ft)
tion		Loctite®243™
Screw, valve cover	M6	8 Nm (5.9 lbf ft)
Screw, water pump cover	M6	10 Nm (7.4 lbf ft)
Stud, cylinder head	M6	10 Nm (7.4 lbf ft)
Screw, camshaft bearing bridge	M7x1	Tightening sequence:
		Tighten diagonally.
		1st tightening stage
		5 Nm (3.7 lbf ft) 2nd tightening stage
		14 Nm (10.3 lbf ft)
		Lubricated with engine oil
Crankshaft clamp screw plug	M8	10 Nm (7.4 lbf ft)
Screw, tensioning rail	M8	15 Nm (11.1 lbf ft)
ociew, tensioning run	INIO	Loctite®243™
Screw, engine sprocket	M10	60 Nm (44.3 lbf ft)
geren, engine epiteiner	25	Loctite®243™
Plug, oil channel	M10x1	15 Nm (11.1 lbf ft)
		Loctite®243™
Screw plug, cam lever axis	M10x1	10 Nm (7.4 lbf ft)
Screw, rotor	M10x1	70 Nm (51.6 lbf ft)
		Collar and thread oiled / cone
		degreased
Screw, unlocking of timing chain	M10x1	8 Nm (5.9 lbf ft)
tensioner		
Spark plug	M10x1	12 Nm (8.9 lbf ft)
Coolant temperature sensor	M10x1.25	12 Nm (8.9 lbf ft)
Nut, cylinder head	M10x1.25	Tightening sequence:
		Tighten diagonally.
		1st tightening stage
		10 Nm (7.4 lbf ft)
		2nd tightening stage 30 Nm (22.1 lbf ft)
		3rd tightening stage
		180°
Stud, cylinder head	M10x1.25	20 Nm (14.8 lbf ft)
		Loctite®243 TM
Oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)
Screw plug, oil pressure control	M12x1.5	20 Nm (14.8 lbf ft)
valve		, ,
Oil drain plug	M14x1.5	15 Nm (11.1 lbf ft)
	1	1
Nut, inner clutch hub	M18x1.5	100 Nm (73.8 lbf ft)
Nut, inner clutch hub	M18x1.5	100 Nm (73.8 lbf ft) Loctite®243™

Nut, primary gear wheel	M18LHx1.5	120 Nm (88.5 lbf ft)
		Loctite®243™
Screw plug, oil screen	M20x1.5	15 Nm (11.1 lbf ft)
Plug, timing chain tensioner	M24x1.5	40 Nm (29.5 lbf ft)
Screw, alternator cover	M24x1.5	18 Nm (13.3 lbf ft)
Fixing nut for main bearing inner	M27x1	60 Nm (44.3 lbf ft)
ring		Loctite®243™

22.3 Capacities

22.3.1 Engine oil

Engine oil	1.0 l (1.1 qt.)	Engine oil (SAE 10W/50)
		(🕮 p. 143)

22.3.2 **Coolant**

Coolant	0.95 l (1 qt.)	Coolant (p. 143)

22.3.3 Fuel

Total fuel tank capacity, approx. (all SX-F models)		
Super unleaded (ROZ 95/RON 95/PON 91) (☐ p. 144) 7 I (1.8 US gal)		
Total fuel tank capacity, approx. (XC-F US)		
Super unleaded (ROZ 95/RON 95/PON 91) (□ p. 144) 8.5 I (2.25 US gal)		

Fuel reserve, approx. (XC-F US) 1.5 (1.6 qt.)	
---	--

22.4 Chassis

Frame	Central tube frame made of chrome molybdenum steel tubing	
Fork	WP XACT 5548	
Suspension travel		
front	310 mm (12.2 in)	
rear	300 mm (11.81 in)	
Fork offset	22 mm (0.87 in)	
Shock absorber	WP XACT 5750	
Brake system	Disc brakes, floating brake calipers	
Brake discs - diameter		
front	260 mm (10.24 in)	
rear	220 mm (8.66 in)	
Brake discs - wear limit		
front	2.5 mm (0.098 in)	
rear	3.5 mm (0.138 in)	
Offroad tire pressure		
front	1.0 bar (15 psi)	
rear	1.0 bar (15 psi)	
Secondary ratio (all SX-F models)	14:51	
Secondary ratio (XC-F US)	13:51	

Chain	5/8 x 1/4"
Available rear sprockets	48, 50, 51, 52
Steering head angle	63.9°
Wheelbase	1,485 ± 10 mm (58.46 ± 0.39 in)
Seat height, unloaded	950 mm (37.4 in)
Ground clearance, unloaded	370 mm (14.57 in)
Weight without fuel, approx. (All SX-F standard mod-	99 kg (218 lb.)
els)	
Weight without fuel, approx. (PRADO)	99.8 kg (220 lb.)
Weight without fuel, approx. (XC-F US)	100 kg (220 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)
Maximum permissible overall weight	335 kg (739 lb.)

22.5 Electrical system

12-V battery	HJTZ5S-FP-C	Lithium-ion battery Battery voltage: 12 V Nominal capacity: 2.0 Ah Maintenance-free
Fuse	58011109110	10 A
Malfunction indicator lamp	LED	
Remaining indicator lamps (XC-F US)	W2.3W / socket W2x4.6d	12 V 2.3 W

22.6 Tires

Validity	Front tire	Rear tire
(all SX-F models)	80/100 - 21 51M TT Dunlop GEOMAX MX3SF	110/90 - 19 62M TT Dunlop GEOMAX MX3S
(XC-F US)	80/100 - 21 51M TT Dunlop GEOMAX AT81F	110/100 - 18 64M TT Dunlop GEOMAX AT81

The tires specified represent one of the possible series production tires. Additional information is available in the Service section under: http://www.ktm.com

22.7 Fork

22.7.1 All EU models

Fork article number	34.18.8T.05	
Fork	WP XACT 5548	
Compression damping		
Comfort	17 clicks	
Standard	12 clicks	
Sport	7 clicks	
Rebound damping		
Comfort	17 clicks	
Standard	12 clicks	

Sport	7 clicks
Air pressure	10.4 bar (151 psi)
Fork length	950 mm (37.4 in)

Oil capacity external mechanism right	220 ± 20 ml (7.44 ± 0.68 fl. oz.)	Fork oil (SAE 4) (48601166S1) (🕮 p. 144)
Oil capacity external mechanism left	220 ± 20 ml (7.44 ± 0.68 fl. oz.)	Fork oil (SAE 4) (48601166S1) (🕮 p. 144)
Oil capacity, right cartridge	380 ml (12.85 fl. oz.)	Fork oil (SAE 4) (48601166S1) (🕮 p. 144)
Grease capacity, left cartridge	5 g (0.18 oz)	Special grease (00062010053) (🕮 p. 146)

22.7.2 SX-F US

Fork article number	34.18.8T.55	
Fork	WP XACT 5548	
Compression damping		
Comfort	17 clicks	
Standard	12 clicks	
Sport	7 clicks	
Rebound damping	·	
Comfort	23 clicks	
Standard	18 clicks	
Sport	13 clicks	
Air pressure	10.3 bar (149 psi)	
Fork length	950 mm (37.4 in)	

Oil capacity external mechanism right	200 ± 40 ml (6.76 ± 1.35 fl. oz.)	Fork oil (SAE 4) (48601166S1) (p. 144)
Oil capacity external mechanism left	200 ± ½ ml (6.76 ± 1.35 fl. oz.)	Fork oil (SAE 4) (48601166S1) (p. 144)
Oil capacity, right cartridge	380 ml (12.85 fl. oz.)	Fork oil (SAE 4) (48601166S1) (p. 144)
Grease capacity, left cartridge	5 g (0.18 oz)	Special grease (00062010053) (@ p. 146)

22.7.3 XC-F US

Fork article number	34.18.8T.75	
Fork	WP XACT 5548	
Compression damping		
Comfort	17 clicks	
Standard	12 clicks	
Sport	7 clicks	
Rebound damping		
Comfort	17 clicks	
Standard	12 clicks	
Sport	7 clicks	

Air pressure	9.8 bar (142 psi)
Fork length	950 mm (37.4 in)

Oil capacity external mechanism right	200 ± 40 ml (6.76 ± 1.35 fl. oz.)	Fork oil (SAE 4) (48601166S1) (🕮 p. 144)
Oil capacity external mechanism left	200 ± 40 ml (6.76 ± 1.35 fl. oz.)	Fork oil (SAE 4) (48601166S1) (🕮 p. 144)
Oil capacity, right cartridge	380 ml (12.85 fl. oz.)	Fork oil (SAE 4) (48601166S1) (🕮 p. 144)
Grease capacity, left cartridge	5 g (0.18 oz)	Special grease (00062010053) (p. 146)

22.8 Shock absorber

22.8.1 All EU models

18.18.7T.05		
WP XACT 5750		
17 clicks		
15 clicks		
13 clicks		
2 turns		
1.5 turns		
1 turn		
17 clicks		
15 clicks		
13 clicks		
8 mm (0.31 in)		
Spring rate		
39 N/mm (223 lb/in)		
42 N/mm (240 lb/in)		
45 N/mm (257 lb/in)		
260 mm (10.24 in)		
10 bar (145 psi)		
35 mm (1.38 in)		
105 mm (4.13 in)		
477 mm (18.78 in)		

Shock absorber oil	Shock absorber fluid (SAE 2.5)
	(50180751S1) (🕮 p. 144)

22.8.2 SX-F US

Shock absorber article number	18.18.7T.55
Shock absorber	WP XACT 5750
Lowspeed compression damping	

Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Highspeed compression damping	
Comfort	2.5 turns
Standard	2 turns
Sport	1.5 turns
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Spring preload	9 mm (0.35 in)
Spring rate	
Weight of rider: 65 75 kg (143 165 lb.)	39 N/mm (223 lb/in)
Weight of rider: 75 85 kg (165 187 lb.)	42 N/mm (240 lb/in)
Weight of rider: 85 95 kg (187 209 lb.)	45 N/mm (257 lb/in)
Spring length	260 mm (10.24 in)
Gas pressure	10 bar (145 psi)
Static sag	35 mm (1.38 in)
Riding sag	105 mm (4.13 in)
Fitted length	477 mm (18.78 in)

Shock absorber oil	Shock absorber fluid (SAE 2.5)
	(50180751S1) (🕮 p. 144)

22.8.3 XC-F US

Shock absorber article number	18.18.7T.73	
Shock absorber	WP XACT 5750	
Lowspeed compression damping		
Comfort	17 clicks	
Standard	15 clicks	
Sport	13 clicks	
Highspeed compression damping		
Comfort	2.5 turns	
Standard	2 turns	
Sport	1.5 turns	
Rebound damping		
Comfort	17 clicks	
Standard	15 clicks	
Sport	13 clicks	
Spring preload	6 mm (0.24 in)	
Spring rate		
Weight of rider: 65 75 kg (143 165 lb.)	39 N/mm (223 lb/in)	
Weight of rider: 75 85 kg (165 187 lb.)	42 N/mm (240 lb/in)	
Weight of rider: 85 95 kg (187 209 lb.)	45 N/mm (257 lb/in)	
Spring length	260 mm (10.24 in)	

Gas pressure	10 bar (145 psi)
Static sag	35 mm (1.38 in)
Riding sag	105 mm (4.13 in)
Fitted length	477 mm (18.78 in)

Shock absorber oil	Shock absorber fluid (SAE 2.5)
	(50180751S1) (🕮 p. 144)

22.9 Chassis tightening torques

Screw, air filter box cover	EJOT PT® K60x20-Z	3 Nm (2.2 lbf ft)
Screw, combination switch	EJOT PT® K50x18 T20	2 Nm (1.5 lbf ft)
Screw, intake air temperature sensor	EJOT DELTA PT® 45x12-Z	0.7 Nm (0.52 lbf ft)
Fitting, start button	M3	0.4 Nm (0.3 lbf ft)
Fitting, switch-off button	M3	0.4 Nm (0.3 lbf ft)
Fitting, inlet sleeve to throttle valve body	M4	5 Nm (3.7 lbf ft)
Screw, fixed grip	M4	5 Nm (3.7 lbf ft) Loctite®243™
Screw, service hour counter	M4	0.8 Nm (0.59 lbf ft)
Spoke nipple, front wheel	M4.5	6 Nm (4.4 lbf ft)
Spoke nipple, rear wheel	M4.5	6 Nm (4.4 lbf ft)
Remaining nuts, chassis	M5	5 Nm (3.7 lbf ft)
Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)
Screw, battery terminal	M5	2.5 Nm (1.84 lbf ft)
Screw, frame protector	M5	3 Nm (2.2 lbf ft)
Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)
Nut, cable on starter motor	M6	4 Nm (3 lbf ft)
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Screw, ball joint of push rod on foot brake cylinder	M6	10 Nm (7.4 lbf ft) Loctite®243™
Screw, chain sliding guard	M6	6 Nm (4.4 lbf ft) Loctite®243™
Screw, front brake disc	M6	14 Nm (10.3 lbf ft) Loctite®243™
Screw, indicator lamp bracket	M6	5 Nm (3.7 lbf ft)
Screw, rear brake disc	M6	14 Nm (10.3 lbf ft) Loctite®243™
Screw, throttle grip	M6	5 Nm (3.7 lbf ft)
Fuel connection on fuel tank	M8	15 Nm (11.1 lbf ft)
Nut, foot brake lever stop	M8	20 Nm (14.8 lbf ft)
Nut, rear sprocket screw	M8	35 Nm (25.8 lbf ft) Loctite®2701™
Nut, rim lock	M8	12 Nm (8.9 lbf ft)
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)

Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)
Screw, engine brace on engine	M8x20	25 Nm (18.4 lbf ft)
		Loctite®243™
Screw, engine brace on frame	M8x15	25 Nm (18.4 lbf ft)
	110	Loctite®2701™
Screw, fork stub	M8	15 Nm (11.1 lbf ft)
Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
Screw, manifold on cylinder head	M8	15 Nm (11.1 lbf ft)
brace	IVIO	15 Mill (11.1 lbl lt)
Screw, side stand attachment	M8	33 Nm (24.3 lbf ft)
(XC-F US)		Loctite®2701™
Screw, subframe bottom	M8	30 Nm (22.1 lbf ft)
		Loctite®2701™
Screw, subframe top	M8	35 Nm (25.8 lbf ft)
	MO	Loctite®2701™
Screw, top steering stem	M8	20 Nm (14.8 lbf ft) Loctite®243™
Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
Engine carrying screw	M10	60 Nm (44.3 lbf ft)
Remaining nuts, chassis	M10	45 Nm (33.2 lbf ft)
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)
Screw, bottom shock absorber	M10	60 Nm (44.3 lbf ft)
ociew, bottom snock absorber	WITO	Loctite®2701™
Screw, handlebar support	M10	40 Nm (29.5 lbf ft)
		Loctite®243™
Screw, top shock absorber	M10	60 Nm (44.3 lbf ft)
		Loctite®2701™
Nut, fuel pump	M12	15 Nm (11.1 lbf ft)
Nut, angle lever to link fork	M14x1.5	60 Nm (44.3 lbf ft)
Nut, frame on linkage lever	M14x1.5	60 Nm (44.3 lbf ft)
Nut, linkage lever on angle lever	M14x1.5	60 Nm (44.3 lbf ft)
Nut, fork pivot	M16x1.5	100 Nm (73.8 lbf ft)
Screw, front wheel spindle	M20x1.5	35 Nm (25.8 lbf ft)
Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
Screw-in fitting, cooling system	M24x1.5	15 Nm (11.1 lbf ft)
	1105.1.5	Loctite®243™
Nut, rear wheel spindle	M25x1.5	80 Nm (59 lbf ft)

Brake fluid DOT 4 / DOT 5.1

Standard/classification

DOT

Guideline

 Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier

Castrol

REACT PERFORMANCE DOT 4

MOTOREX®

- Brake Fluid DOT 5.1

Coolant

Guideline

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

Antifreeze protection to at least	-25 °C (-13 °F)

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

Recommended supplier MOTOREX®

- COOLANT M3.0

Engine oil (SAE 10W/50)

Standard/classification

- JASO T903 MA2 (
 p. 147)
- SAE (🕮 p. 147) (SAE 10W/50)

Guideline

 Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Fully synthetic engine oil

Recommended supplier MOTOREX®

- Cross Power 4T

Fork oil (SAE 4) (48601166S1)

Standard/classification

– SAE (🕮 p. 147) (SAE 4)

Guideline

 Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Shock absorber fluid (SAE 2.5) (50180751S1)

Standard/classification

SAE (□ p. 147) (SAE 2.5)

Guideline

 Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Super unleaded (ROZ 95/RON 95/PON 91)

Standard/classification

- DIN EN 228 (ROZ 95/RON 95/PON 91)

Guideline

- Only use unleaded super fuel that matches or is equivalent to the specified fuel grade.
- Fuel with an ethanol content of up to 10 % (E10 fuel) is safe to use.



Info

Do **not** use fuel containing methanol (e. g. M15, M85, M100) or more than 10 % ethanol (e. g. E15, E25, E85, E100).

Air filter cleaner

Recommended supplier MOTOREX®

- Racing Bio Dirt Remover

Chain cleaner

Recommended supplier MOTOREX®

- Chain Clean

Fuel additive

Recommended supplier MOTOREX®

Fuel Stabilizer

High viscosity grease

Recommended supplier ${\rm SKF}^{\rm @}$

- LGHB 2

Long-life grease

Recommended supplier MOTOREX®

- Bike Grease 2000

Motorcycle cleaner

Recommended supplier MOTOREX®

Moto Clean

Off-road chain spray

Recommended supplier MOTOREX®

Chainlube Offroad

Oil for foam air filter

Recommended supplier MOTOREX®

- Racing Bio Liquid Power

Preserving materials for paints, metal and rubber

Recommended supplier MOTOREX®

- Moto Protect

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier MOTOREX®

- Quick Cleaner

Special grease (00062010053)

Recommended supplier Klüber Lubrication® - KLÜBERFOOD NH1 34-401

Universal oil spray

Recommended supplier MOTOREX®

Joker 440 Synthetic

JASO T903 MA2

Different technical development directions required a separate specification for motorcycles – the **JASO T903 MA2** standard.

Earlier, engine oils from the automobile industry were used for motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and clutch are lubricated with the same oil.

The JASO T903 MA2 standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

-	Launch control	Vehicles electronics functions for achieving the best possible acceleration from a standing position
OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

28.1 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

FI	Malfunction indicator lamp lights up/flashes orange – The OBD has detected a malfunction in the vehicle electronics.
FI	Malfunction indicator lamp flashes orange rapidly – Launch control is activated.
	Fuel level warning lamp lights up orange – The fuel level has reached the reserve mark.

	Chain guide
1	checking 78
12-V battery	Chain tension
installing	adjusting 77
recharging	checking 76
removing	Characteristic map of the throttle response
starting power	adjusting 115
A	Clutch
Accessories	fluid level, checking/correcting 82
Air filter	fluid, changing
cleaning	Clutch lever
installing	basic position, adjusting
removing 67	Cold start button
Air filter box	Compression damping
cleaning	fork, adjusting
Air filter box cover	Coolant
installing	antifreeze and coolant level, checking 108
preparing for securing	draining
removing	level, checking
Air suspension XACT 5548	refilling
Antifreeze	Cooling system
checking 108	Customer service
Auxiliary substances	D
В	Diagnostics connector
Basic chassis setting	Difficult operating conditions 24
rider's weight, checking with	dry sand
Blink code	high temperatures
	low temperature
Brake discs checking	muddy surfaces 25
Brake fluid	slow speed
front brake, adding 87	snow
rear brake, adding	wet surfaces
Brake fluid level	
front brake, checking	E
rear brake, checking	Engine
Brake linings	running in 23
front brake, checking	Engine number
of front brake, changing	Engine oil
of the rear brake, changing94	adding 123
rear brake, checking	changing 121
C	Engine oil level
	checking
Capacity <pre>coolant</pre>	Engine sprocket
engine oil	checking 78
fuel	Environment
Chain	F
checking	Figures
cleaning	11gui 00
-	

Foot brake lever	Indicator lamps
basic position, adjusting	overview 16
free travel, checking	Intended use
Fork article number	
Fork legs	Laureh control
air pressure, adjusting 45	Launch control
basic setting, checking	activating
bleeding 50	Link fork
compression damping, adjusting 46	checking 80
dust boots, cleaning	Lower triple clamp
installing	installing
rebound damping, adjusting 47	removing
removing	Low-speed compression damping
Fork protector	shock absorber, adjusting
installing	M
removing	IVI
Frame	Main fuse
checking	changing
•	Main silencer
Front fender	glass fiber yarn filling, changing 70
installing	installing
removing	removing
Front wheel	Manufacturer warranty
installing	•
removing 97	Mapping 116
Fuel screen	changing
changing 119	Misuse
Fuel tank	Motor guard
installing	installing
removing	removing
Fuel tank filler cap	Motorcycle
closing	cleaning
opening	from lift stand, removing 49
	lift stand, raising with 49
Fuel, oils, etc	0
Fuse	
main fuse, changing	Oil filter
H	changing 121
Hand brake lever	Oil screen
basic position, adjusting	cleaning
free travel, checking	Owner's Manual
Handlebar position 47	P
adjusting	Plug-in stand
	•
High-speed compression damping	Preparing for use
shock absorber, adjusting	advice on preparing for first use
	checks and maintenance measures when
Idle speed	preparing for use
adjusting	Protective clothing
, -	Putting into operation
Idle speed adjusting screw	after storage
Implied warranty	

R	Steering head bearing
Rear sprocket	lubricating 60
checking	Steering head bearing play
Rear wheel	adjusting
installing	107
removing	
Rebound damping	Switch-off button
fork, adjusting 4	
shock absorber, adjusting 40	Technical data
Refueling	capacities 136
fuel 33	
Riding sag	chassis tightening torques
adjusting	electrical system
Rubber grips	engine tightening torques 134
checking 8	fork
S	shock absorber
Safe operation	7 tires
Seat	Throttle cable play
mounting 60	adjusting 113
removing 6	5 checking 113
Service	Throttle cable routing
Service hour counter	3
Service schedule	5 Throttle grip
Shift lever	iniottie valve position
basic position, adjusting	104011118 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
basic position, checking	Tire condition
Shock absorber	checking 101
compression damping, general	11re pressure
installing	CHECKING III/
low-speed compression damping, adjusting 38	3 Traction control
rebound damping, adjusting 40	1 1
removing 62	
riding sag, checking	
spring preload, adjusting	1
static sag, checking	0
Shock absorber article number	Ose definition
Side stand 2 Spare parts 10	V
	Vehicle identification number
Spoke tension checking	o View of vehicle
_	front left 11
Start button	rear right
Start number plate	. W
installing 6	Mark miles
removing	J
Starting	/
Starting power of lithium-ion batteries at low tempera- tures	3
	-





3214129en

10/2019









