


Wiring diagram (EXC-F EU, EXC-F SIX DAYS)

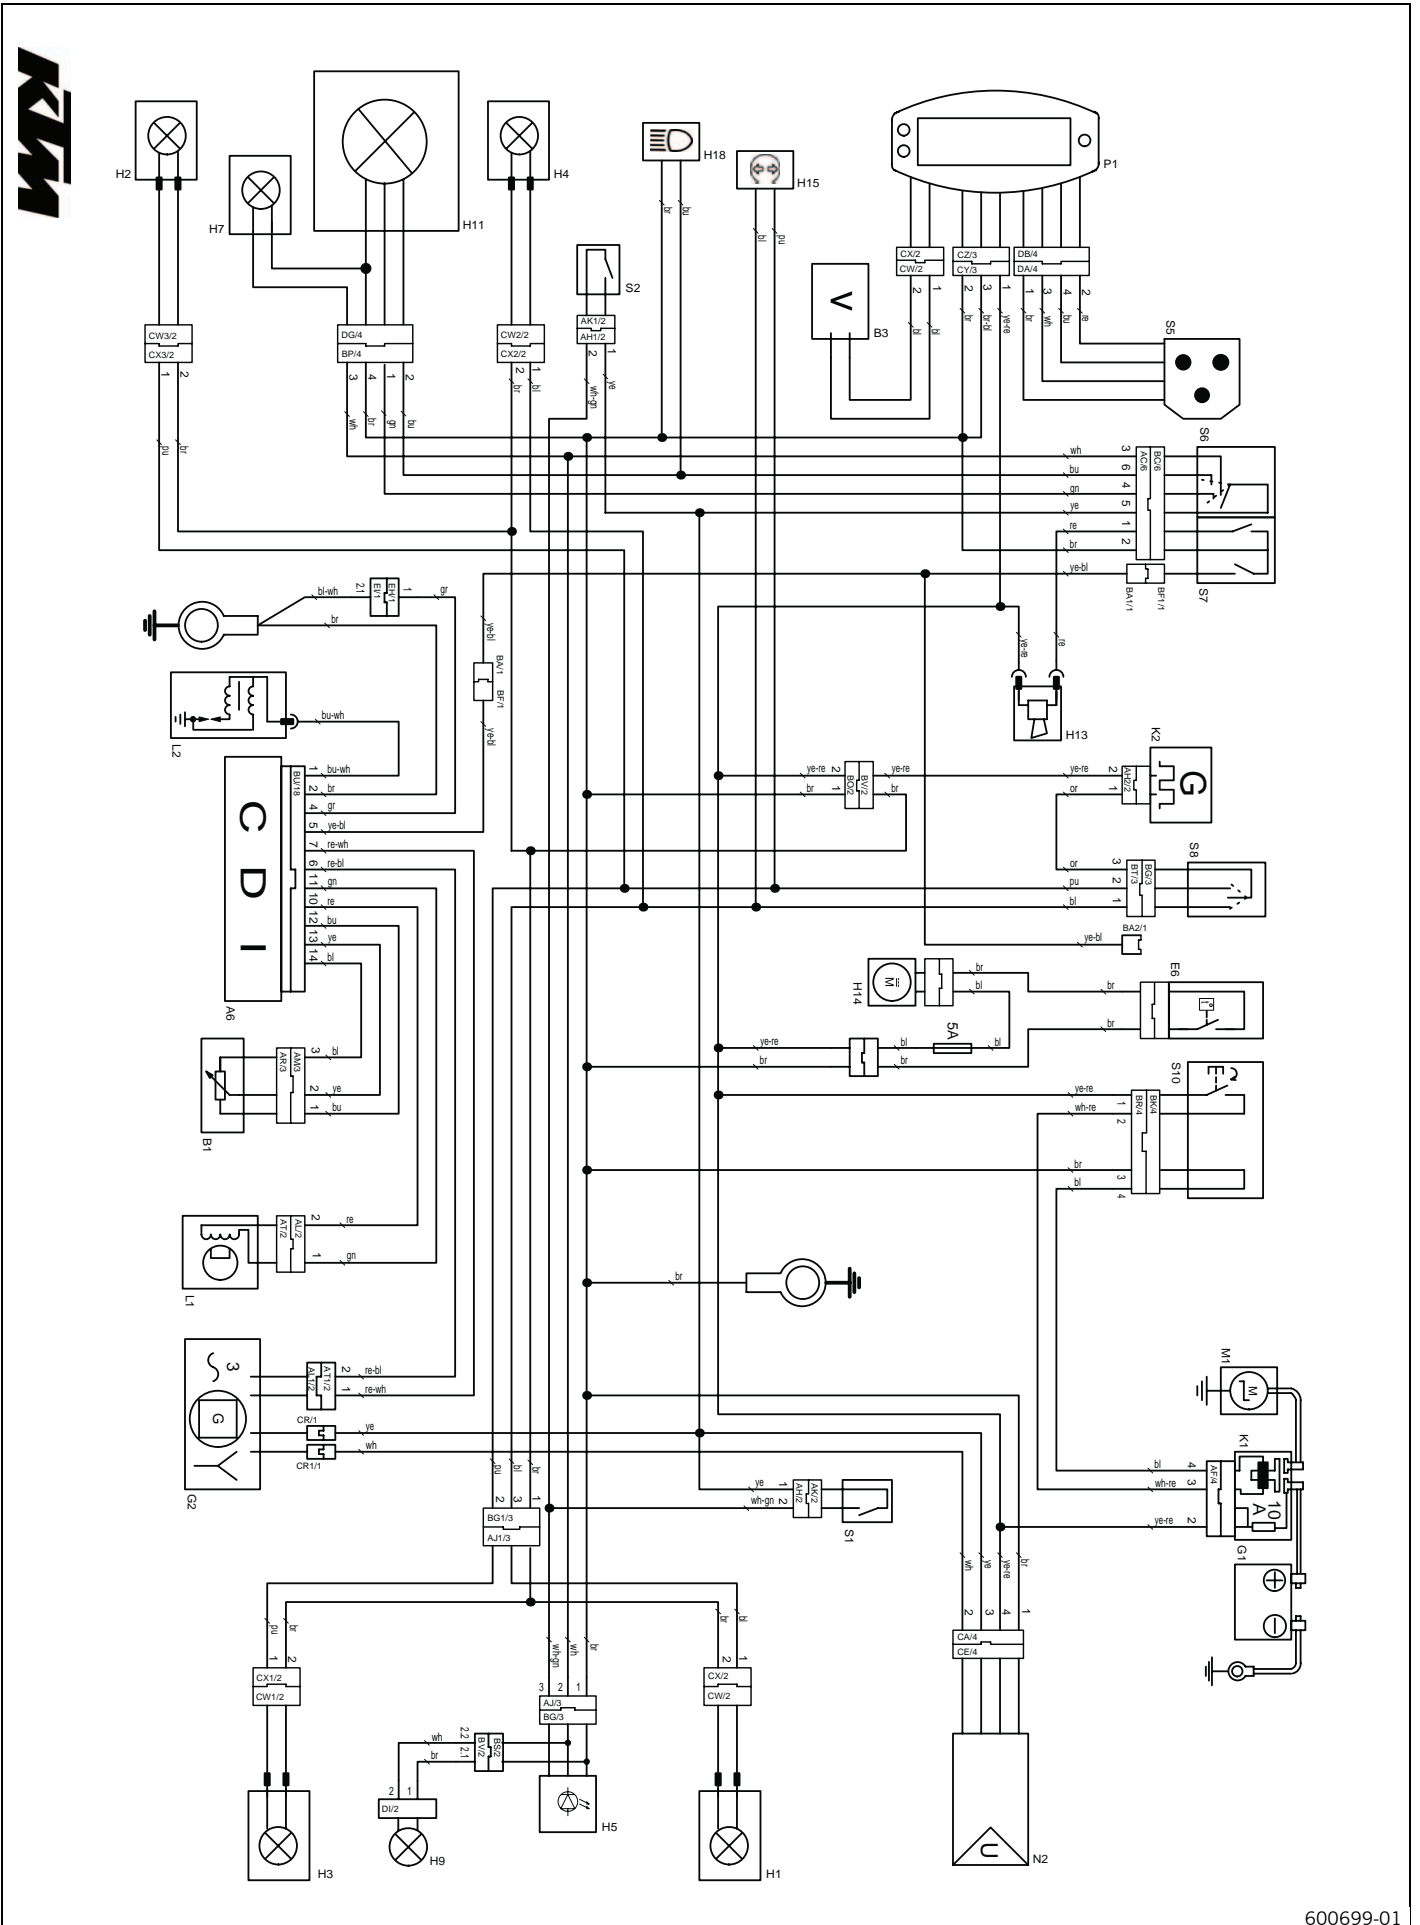

Components

A6	CDI controller
B1	Throttle position sensor
B3	Wheel speed sensor
E6	Thermoswitch (EXC-F SIX DAYS)
G1	Battery
G2	Generator
H1	Right rear flasher
H2	Left front flasher
H3	Left rear flasher
H4	Right front flasher
H5	Brake/tail light
H7	Parking light
H9	License plate lamp
H11	Low/high beam
H13	Horn
H14	Radiator fan (EXC-F SIX DAYS)
H15	Flasher indicator light
H18	High beam indicator light
K1	Starter relay with main fuse
K2	Flasher relay
L1	Pulse generator
L2	Ignition coil
M1	Starter motor
N2	Voltage regulator/rectifier
P1	Speedometer
S1	Rear brake light switch
S2	Front brake light switch
S5	Tripmaster switch (optional)
S6	Light switch
S7	Horn button, short circuit button
S8	Flasher switch
S10	Electric starter button

Cable colors

bl	Black
bl-wh	Black-white
br	Brown
br-bl	Brown-black
bu	Blue
bu-wh	Blue-white
gn	Green
gr	Gray
or	Orange
pu	Violet
re	Red
re-bl	Red-black
re-wh	Red-white
wh	White
wh-gn	White-green
wh-re	White-red
ye	Yellow
ye-bl	Yellow-black

ye-re Yellow-red

Components

A6	CDI controller
B1	Throttle position sensor
B3	Wheel speed sensor
G1	Battery
G2	Generator
H1	Right rear flasher
H2	Left front flasher
H3	Left rear flasher
H4	Right front flasher
H5	Brake/tail light
H7	Parking light
H9	License plate lamp
H11	Low/high beam
H13	Horn
H15	Flasher indicator light
H18	High beam indicator light
K1	Starter relay with main fuse
K2	Flasher relay
L1	Pulse generator
L2	Ignition coil
M1	Starter motor
N2	Voltage regulator/rectifier
P1	Speedometer
S1	Rear brake light switch
S2	Front brake light switch
S5	Tripmaster switch (optional)
S6	Light switch
S7	Horn button, short circuit button
S8	Flasher switch
S10	Electric starter button
S11	Emergency OFF switch

Cable colors

bl	Black
br	Brown
br-bl	Brown-black
bu	Blue
bu-wh	Blue-white
gn	Green
or	Orange
pu	Violet
re	Red
re-bl	Red-black
re-wh	Red-white
wh	White
wh-gn	White-green
wh-re	White-red
ye	Yellow
ye-bl	Yellow-black
ye-re	Yellow-red


Components

A6	CDI controller
B1	Throttle position sensor
B3	Wheel speed sensor
E6	Thermoswitch (XCF-W ZA)
G1	Battery
G2	Generator
H5	Brake/tail light (XCF-W ZA)
H7	Parking light (XCF-W ZA)
H11	Low beam (XCF-W ZA)
H14	Radiator fan (XCF-W ZA)
K1	Starter relay with main fuse
L1	Pulse generator
L2	Ignition coil
M1	Starter motor
N2	Voltage regulator/rectifier
P1	Speedometer
S5	Tripmaster switch (optional)
S6	Light switch
S10	Electric starter button
S12	Short circuit button

Cable colors

bl	Black
bl-wh	Black-white
br	Brown
bu	Blue
bu-wh	Blue-white
gn	Green
re	Red
re-bl	Red-black
re-wh	Red-white
wh	White
wh-re	White-red
ye	Yellow
ye-bl	Yellow-black
ye-re	Yellow-red

Wiring diagram (SX-F)

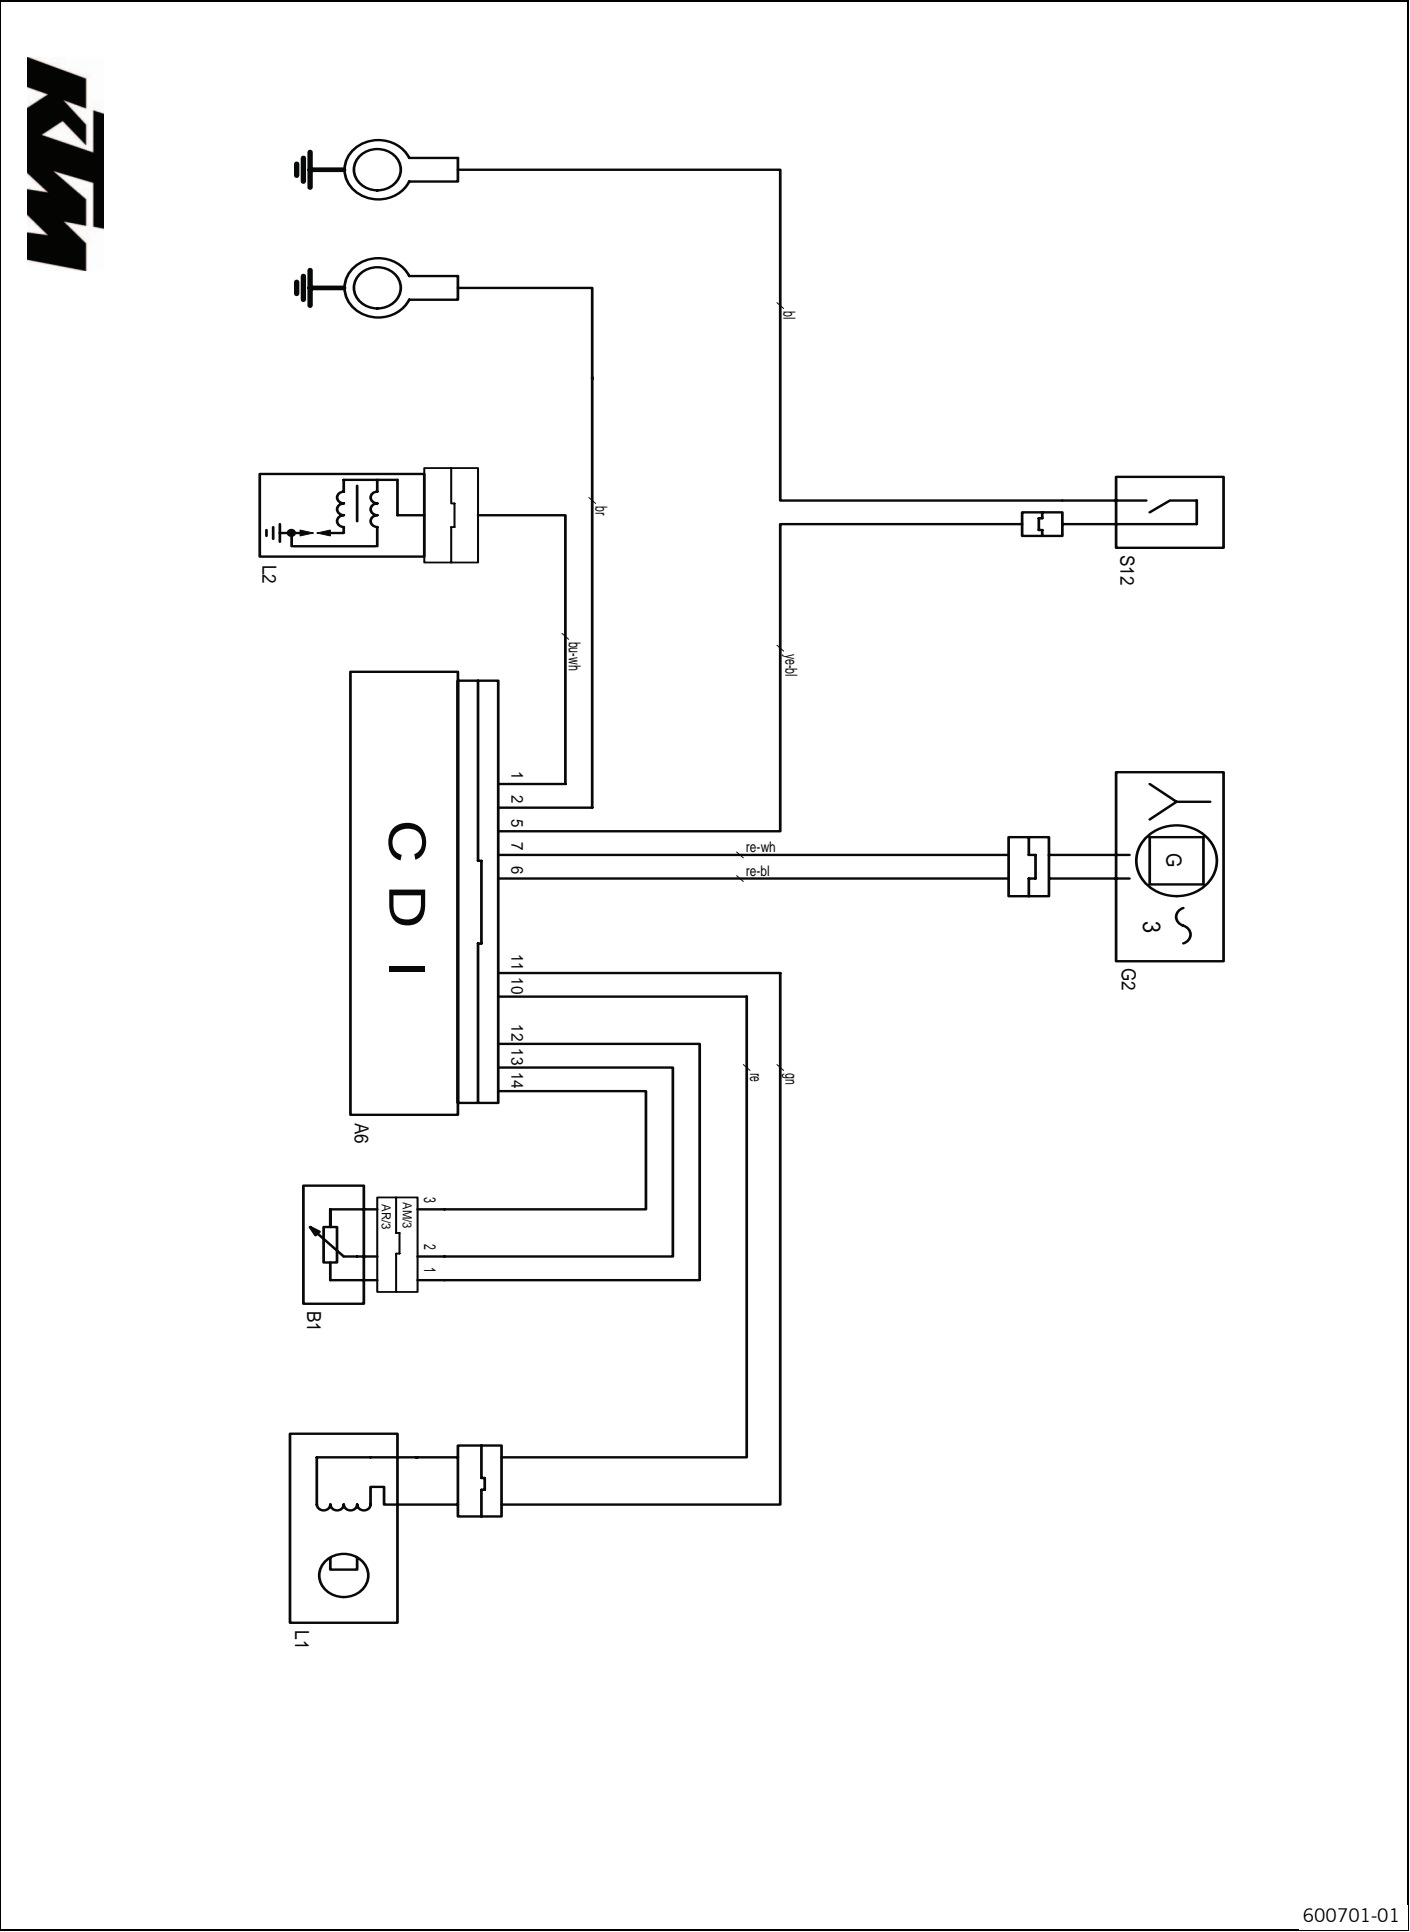

Components

A6	CDI controller
B1	Throttle position sensor
G2	Generator
L1	Pulse generator
L2	Ignition coil
S12	Short circuit button

Cable colors

bl	Black
br	Brown
bu-wh	Blue-white
gn	Green
re	Red
re-bl	Red-black
re-wh	Red-white
ye-bl	Yellow-black