
 





horn switch

cable color	re	br
HORN 	●	●
OFF		



light switch
high/low beam switch

cable color	bu	ye	gn	wh
LIGHT OFF				
P.LIGHT  LO 		●	●	●
HI  P.LIGHT 	●	●		●

brake switch

cable harness	gn- wh	ye
cable switch	bl	bl
pushed	●	●
unpushed		

flasher switch

cable harness	or	pu	bl
TURN L 	●	●	
TURN R 	●	●	●
OFF			

stop switch

cable harness	ye- bl	br
cable switch	ye- bl	br
pushed	●	●
unpushed		

