

Freeride E-XC

Art. no. 3213862en



KTM

Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it properly.

We hope you enjoy riding this motorcycle!

Enter the serial numbers of your vehicle below.

Vehicle identification number (📖 p. 17)	Dealer's stamp
Motor number (📖 p. 17)	
Key number (📖 p. 17)	

Please read through this Owner's Manual carefully, exercise caution when using the vehicle, and contact an authorized KTM workshop if you have any questions.

This Owner's Manual serves as a technical instruction manual, explains important safety matters, and provides an overview of the main functions. This Owner's Manual is only intended for personal use. This Owner's Manual is not intended for commercial use.

The Owner's Manual contained the latest information for this model series at the time of going to print. Slight deviations resulting from continuing development and design of the motorcycles can, however, not be completely excluded.

All specifications are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from figures and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2018 KTM Sportmotorcycle GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

KTM applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

REG.NO. 12 100 6061

KTM Sportmotorcycle GmbH
 Stallhofnerstraße 3
 5230 Mattighofen, Austria

This document is valid for the following models:

Freeride E-XC EU (F3001S1)



TABLE OF CONTENTS

1	MEANS OF REPRESENTATION	5	6.7	Light switch	20
1.1	Symbols used	5	6.8	Turn signal switch.....	21
1.2	Formats used.....	5	6.9	Side stand.....	21
2	SAFETY ADVICE.....	6	6.10	Ignition lock	21
2.1	Use definition – intended use.....	6	6.11	Steering lock	22
2.2	Misuse.....	6	6.12	Locking the steering.....	22
2.3	Safety advice.....	6	6.13	Unlocking the steering.....	22
2.4	Degrees of risk and symbols.....	6	7	DISPLAY	23
2.5	Safety instructions and warning labels	7	7.1	Multifunction display.....	23
2.6	Tampering warning.....	10	7.1.1	Multifunction display	23
2.7	Safe operation	10	7.1.2	Driving mode tip switch	23
2.8	Fall or accident.....	11	7.1.3	Driving mode display.....	24
2.9	Protective clothing	11	7.1.4	Malfunction indicator lamp.....	24
2.10	Work on the vehicle, motor, and lithium-ion battery (KTM PowerPack)	11	7.1.5	Charge level indicator.....	24
2.11	Environment.....	12	7.1.6	Power reduction.....	25
2.12	Owner's Manual	12	7.2	Overview	26
2.13	Fire hazard	12	7.2.1	Overview of indicator lamps	26
3	IMPORTANT NOTES.....	13	8	COMBINATION INSTRUMENT	27
3.1	Manufacturer and implied warranty....	13	8.1	Combination instrument overview	27
3.2	Fuel, auxiliary substances	13	8.2	Activation and test	27
3.3	Spare parts, accessories	13	8.3	Setting the kilometers or miles.....	27
3.4	Service	13	8.4	Setting the combination instrument ...	28
3.5	Figures	13	8.5	Setting the clock.....	29
3.6	Customer service.....	13	8.6	Viewing the lap time.....	29
3.7	System voltage	14	8.7	Display mode SPEED (speed).....	30
3.8	New KTM PowerPack	14	8.8	Display mode SPEED/H (operating hours)	30
3.9	Operation at low temperatures.....	14	8.9	Setup menu	30
4	VIEW OF VEHICLE	15	8.10	Adjusting the unit of measurement ...	31
4.1	View of vehicle, front left (example) ...	15	8.11	Display mode SPEED/CLK (time).....	32
4.2	View of vehicle, rear right (example).....	16	8.12	Adjusting the clock	32
5	SERIAL NUMBERS	17	8.13	Display mode SPEED/LAP (lap time)	32
5.1	Vehicle identification number.....	17	8.14	Viewing the lap time.....	33
5.2	Type label	17	8.15	Display mode SPEED/ODO (odometer)	33
5.3	Key number.....	17	8.16	Display mode SPEED/TR1 (trip master 1)	34
5.4	Motor number.....	17	8.17	Display mode SPEED/TR2 (trip master 2)	34
5.5	Fork part number	18	8.18	Adjusting TR2 (trip master 2).....	34
5.6	Shock absorber article number	18	8.19	Display mode SPEED/A1 (average speed 1)	35
5.7	Battery identification number.....	18	8.20	Display mode SPEED/A2 (average speed 2)	35
6	CONTROLS.....	19	8.21	Display mode SPEED/S1 (stop watch 1)	36
6.1	Front brake lever.....	19	8.22	Display mode SPEED/S2 (stop watch 2)	36
6.2	Rear brake lever.....	19	8.23	Table of functions.....	37
6.3	Throttle grip	19	8.24	Table of conditions and menu activation	38
6.4	Main switch.....	19			
6.5	Start button.....	20			
6.6	Horn button.....	20			

9	PREPARING FOR USE.....	39	13.3	Bleeding the fork legs.....	58
9.1	Advice on preparing for first use	39	13.4	Removing the fork protector	58
10	RIDING INSTRUCTIONS.....	40	13.5	Installing the fork protector.....	59
10.1	Checks and maintenance measures when preparing for use	40	13.6	Cleaning the dust boots of the fork legs	59
10.2	Starting the vehicle	40	13.7	Removing the fork legs 🛠.....	60
10.3	Starting off.....	42	13.8	Installing the fork legs 🛠.....	61
10.4	Recuperation	42	13.9	Removing the lower triple clamp 🛠.....	61
10.5	Applying the brakes.....	42	13.10	Installing the lower triple clamp 🛠.....	62
10.6	Stopping, parking.....	43	13.11	Checking steering head bearing play 🛠.....	64
10.7	Deactivating the vehicle.....	43	13.12	Adjusting steering head bearing play 🛠.....	65
10.8	Transporting the vehicle	44	13.13	Greasing the steering head bearing 🛠.....	66
10.9	Transporting the KTM PowerPack	44	13.14	Removing front fender.....	66
11	SERVICE SCHEDULE	45	13.15	Installing front fender.....	67
11.1	Additional information	45	13.16	Removing the shock absorber 🛠.....	68
11.2	Required work	45	13.17	Installing the shock absorber 🛠.....	68
11.3	Recommended work	46	13.18	Folding the seat up	69
12	TUNING THE CHASSIS	47	13.19	Locking the seat	69
12.1	Checking the basic chassis setting with the rider's weight	47	13.20	Removing the spoiler.....	69
12.2	Compression damping of the shock absorber.....	47	13.21	Installing the spoiler.....	70
12.3	Adjusting the low-speed compression damping of the shock absorber.....	47	13.22	Mounting the protection cap	71
12.4	Adjusting the high-speed compression damping of the shock absorber 🛠.....	48	13.23	Removing the protection cap.....	71
12.5	Adjusting the rebound damping of the shock absorber	49	13.24	Checking the battery discharge plug form ring	71
12.6	Measuring the rear wheel dimension unloaded.....	50	13.25	Checking for chain dirt accumulation.....	72
12.7	Checking the static sag of the shock absorber.....	51	13.26	Cleaning the chain	72
12.8	Checking the riding sag of the shock absorber.....	51	13.27	Checking the chain tension	73
12.9	Adjusting the spring preload of the shock absorber 🛠.....	52	13.28	Adjusting the chain tension 🛠.....	74
12.10	Adjusting the riding sag 🛠.....	53	13.29	Checking the chain, rear sprocket, engine sprocket, and chain guide	75
12.11	Checking the basic setting of the fork	53	13.30	Checking the frame 🛠.....	77
12.12	Adjusting the compression damping of the fork	54	13.31	Checking the link fork 🛠.....	77
12.13	Adjusting the rebound damping of the fork.....	54	13.32	Checking the rubber grip	78
12.14	Handlebar position	55	14	BRAKE SYSTEM	79
12.15	Adjusting the handlebar position 🛠.....	55	14.1	Checking the free travel of the front brake lever	79
13	SERVICE WORK ON THE CHASSIS.....	57	14.2	Adjusting the free travel of the front brake lever	79
13.1	Raising the motorcycle with a lift stand	57	14.3	Checking the brake discs	79
13.2	Removing the motorcycle from the lift stand	57	14.4	Checking the front brake fluid level ...	80
			14.5	Adding front brake fluid 🛠.....	81
			14.6	Checking the front brake linings	82
			14.7	Changing the front brake linings 🛠.....	82
			14.8	Checking the free travel of the rear brake lever	85
			14.9	Adjusting the free travel of the rear brake lever	85
			14.10	Checking the rear brake fluid level.....	86
			14.11	Adding rear brake fluid 🛠.....	86
			14.12	Checking the rear brake linings	88

TABLE OF CONTENTS

14.13	Changing the rear brake linings 	88	21	CLEANING, CARE	124
15	WHEELS, TIRES	91	21.1	Cleaning the motorcycle	124
15.1	Removing the front wheel 	91	21.2	Checks and maintenance steps for winter operation	125
15.2	Installing the front wheel 	91	22	STORAGE	126
15.3	Removing the rear wheel 	92	22.1	Storage	126
15.4	Installing the rear wheel 	93	22.2	Preparing for use after storage	127
15.5	Checking the tire condition	95	23	TROUBLESHOOTING	128
15.6	Checking tire pressure	95	23.1	Vehicle troubleshooting	128
15.7	Checking the spoke tension	96	23.2	Troubleshooting of the battery charger	130
16	ELECTRICAL SYSTEM	98	23.3	Troubleshooting of the KTM PowerPack when connected to the battery charger	131
16.1	Removing the 12 V battery 	98	24	TECHNICAL DATA	132
16.2	Installing the 12 V battery 	98	24.1	Engine	132
16.3	Charging the 12 V battery 	99	24.2	Engine tightening torques	132
16.4	Changing the fuses of individual power consumers	100	24.3	Capacities	132
16.5	Removing the headlight mask with the headlight	101	24.3.1	Gear oil	132
16.6	Installing the headlight mask with the headlight	102	24.3.2	Coolant	132
16.7	Changing the headlight bulb	103	24.4	Chassis	132
16.8	Changing the turn signal bulb	104	24.5	Electrical system	133
16.9	Checking the headlight setting	105	24.6	Tires	134
16.10	Adjusting the headlight range	105	24.7	Fork	134
16.11	Changing the combination instrument battery	106	24.8	Shock absorber	134
17	KTM POWERPACK, BATTERY CHARGER	107	24.9	Chassis tightening torques	135
17.1	Removing the KTM PowerPack	107	25	SUBSTANCES	137
17.2	Installing the KTM PowerPack	108	26	AUXILIARY SUBSTANCES	139
17.3	Overview of the KTM PowerPack battery charger	109	27	STANDARDS	140
17.4	Positioning the battery charger	109	28	INDEX OF SPECIAL TERMS	141
17.5	Checking residual current protection switch	110	29	LIST OF ABBREVIATIONS	142
17.6	Charging the KTM PowerPack	111	30	LIST OF SYMBOLS	143
17.7	Charging the KTM PowerPack in the Storage charging mode	113	30.1	Yellow and orange symbols	143
17.8	Changing charging socket protection cap 	115	30.2	Green and blue symbols	143
18	COOLING SYSTEM	117	INDEX		144
18.1	Cooling system	117			
18.2	Checking the antifreeze and coolant level	117			
18.3	Checking the coolant level	118			
18.4	Draining the coolant 	119			
18.5	Refilling with coolant 	120			
19	TUNING THE ENGINE	121			
19.1	Selecting the driving mode	121			
20	SERVICE WORK ON THE ENGINE	122			
20.1	Changing the gear oil 	122			

1.1 Symbols used

The meaning of specific symbols is described below.

	Indicates an expected reaction (e.g. of a work step or a function).
	Indicates an unexpected reaction (e.g. of a work step or a function).
	All work marked with this symbol requires specialist knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop! Your motorcycle will be optimally cared for there by specially trained experts using the auxiliary tools required.
	Indicates a page reference (more information is provided on the specified page).
	Indicates information with more details or tips.
	Indicates the result of a testing step.
	Indicates a voltage measurement.
	Indicates a current measurement.
	Indicates the end of an activity, including potential rework.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Indicates a proprietary name.
Name®	Indicates a protected name.
Brand™	Indicates a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Use definition – intended use

This vehicle has been designed and built to withstand the normal stresses and strains of offroad use.



Info

This vehicle is only authorized for operation on public roads in its homologated version. Only use the lithium-ion battery while it is inside the vehicle.

2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Degrees of risk and symbols



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note


Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Note

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Safety instructions and warning labels

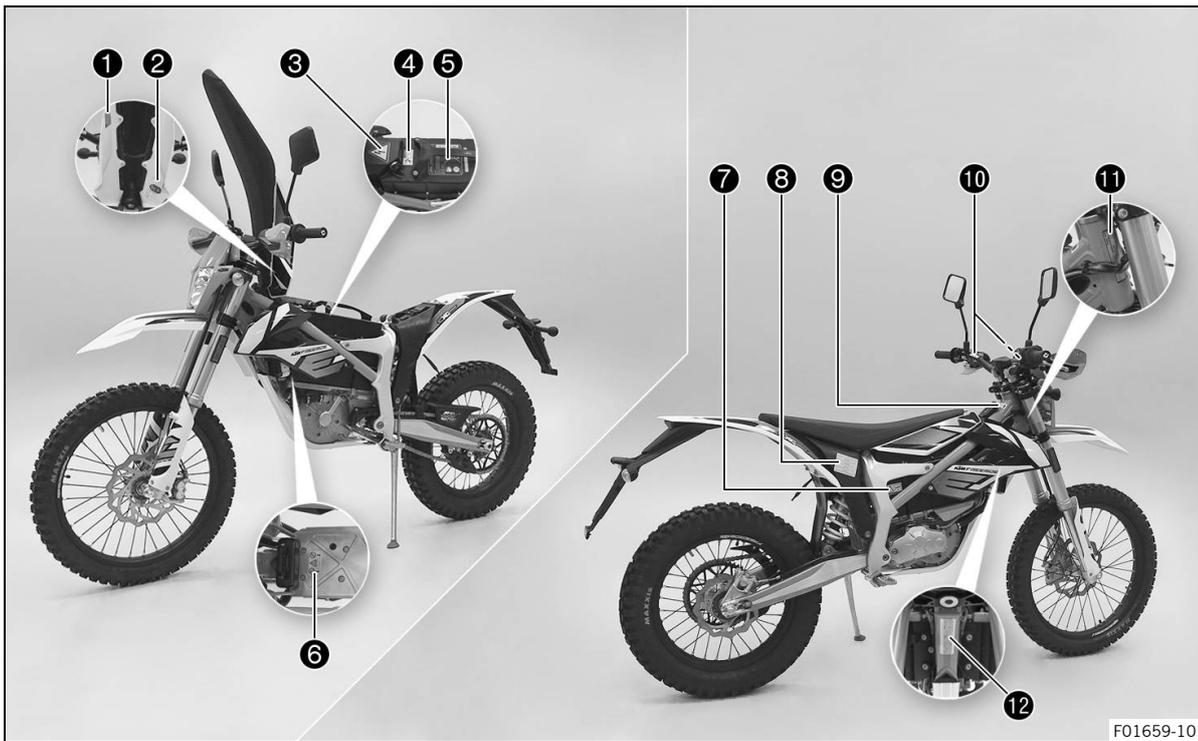


F01659-10

i Info


The safety instructions are highlighted in the text. The vehicle has warning labels in prominent locations. Do not remove any warning labels, or else you or others may fail to recognize sources of danger and become injured.

1	Chain tension
2	Multifunction display
3	High-voltage components
4	High-voltage components and electric shock
5	Rechargeable lithium-ion battery
6	High-voltage components and electric shock
7	High-voltage components, see the Repair Manual
8	Initial start-up
9	High-voltage components and electric shock, see the Owner's Manual
10	Suitable brake fluid
11	Type label for EU
12	Technical data:chassis and tires


2 SAFETY ADVICE

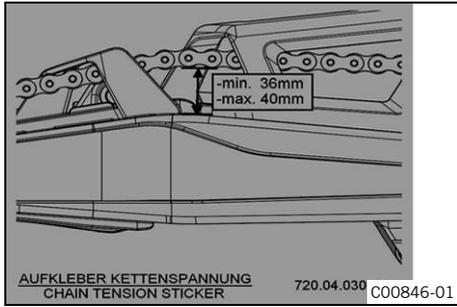

Chain tension

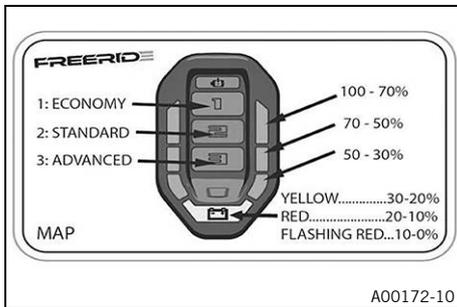

Multifunction display

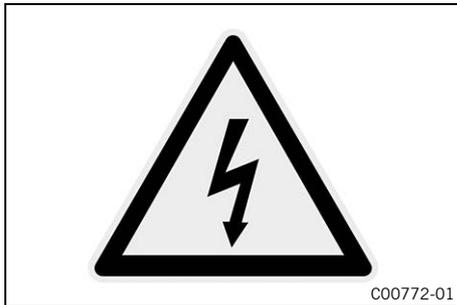


High-voltage components




High-voltage components and electric shock




Rechargeable lithium-ion battery

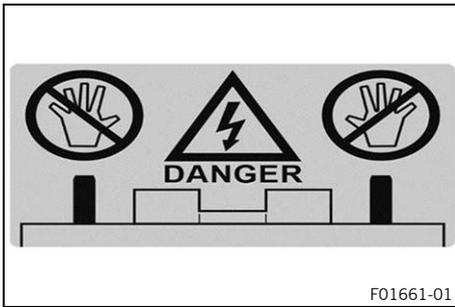


High-voltage components and electric shock

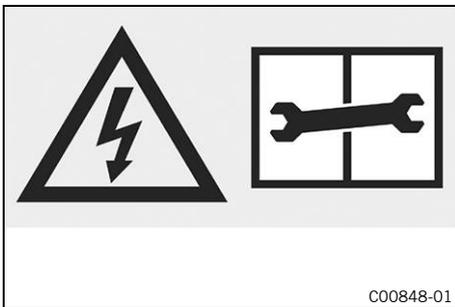


High-voltage components, see the Repair Manual

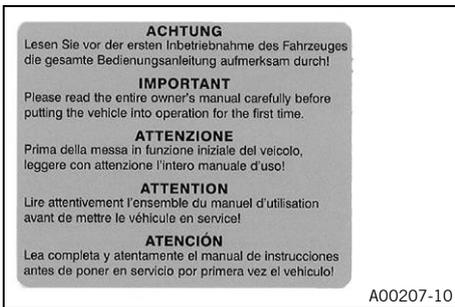


Initial start-up

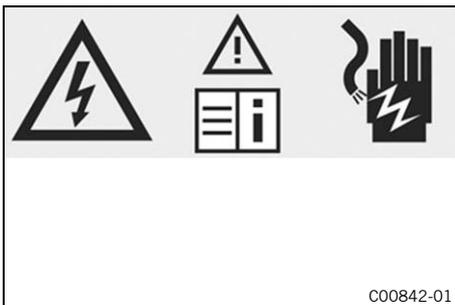

High-voltage components and electric shock, see the Owner's Manual

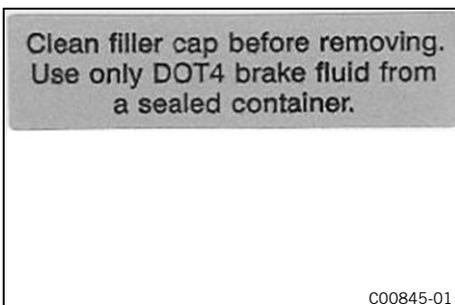

Suitable brake fluid

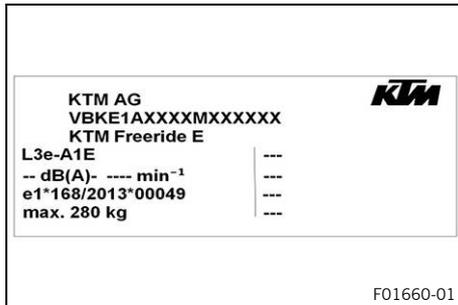

Type label for EU

MANUFACTURED BY/FABRIQUE PAR:		KTM AG	
GVWR/PNBV:	280 KG	DATE:	mm/jj
VIN/N.L.V.:			
TYPE: MC			
GAWR/PNBE	TIRE/PNEU-DIMENSION-RIM/QUANTE	COLD INFL. PRESS. / PRESS. DE GONFL. A FROID	
		PSI/LPG.	bar
1st 110 KG	2.75-21 1.60 x 21	29	2.0
2nd 170 KG	4.00R-18 2.15 x 18	29	2.0

Further information see owners handbook

F01662-01

Technical data:chassis and tires

2.6 Tampering warning

Modifying the vehicle is prohibited, as otherwise safe operation cannot be guaranteed. Examples of unlawful manipulation and modifications:

- 1 Opening the rechargeable lithium-ion battery (KTM PowerPack) or the motor.
- 2 Using the vehicle or the rechargeable lithium-ion battery (KTM PowerPack) in a condition without proper maintenance.
- 3 Using the vehicle or the rechargeable lithium-ion battery (KTM PowerPack) beyond its defined use.
- 4 Using a damaged lithium-ion battery (KTM PowerPack).

2.7 Safe operation



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the radiator, motor, shock absorber, or brake system before these parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

This vehicle is a high voltage electric motorcycle. For this reason, follow the safety and care instructions that apply when using an electric motor.

In drive modes in which recuperation is not possible, the vehicle handles similarly to a bicycle with a freewheel. When the throttle grip is closed, the vehicle continues rolling without significant deceleration. The vehicle speed decreases on account of rolling resistance and air resistance.

The rear brake lever is located on the left side of the handlebar. Because this vehicle does not have a manual transmission, there is no clutch.

As with all liquid-cooled vehicles, the operating temperature rises according to use, ambient temperature and cleanliness of the cooling surfaces. If the temperature of the engine, the lithium-ion battery, or the electronics

rises above the permissible operating temperature, the power of the vehicle is reduced markedly. This protects the system against damage from overheating. When power reduction is imminent, the active driving mode indicator flashes. When power reduction is active, all three driving mode indicators light up. When all components have returned to their normal operating temperature, full system power is restored after restarting.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

2.8 Fall or accident



Warning

Risk of injury The outside of a damaged vehicle may be conducting live current.

- Contact the KTM customer service immediately if major damage has occurred to the rechargeable lithium-ion battery (KTM PowerPack) or to the engine.

If the vehicle is lying on its side, it switches from ready mode to standby mode after seven seconds. To switch the vehicle back into ready mode, place it in an upright position and press the start button.

After a fall or accident, check the vehicle as usual when preparing for use.

2.9 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

2.10 Work on the vehicle, motor, and lithium-ion battery (KTM PowerPack)



Warning

Risk of injury There is a risk of electric shock when working on high-voltage components.

Work on high-voltage components requires special training, qualifications and tools.

- Have all work that is not described and explained performed by trained KTM mechanics only.
- Do not open the electric motor or the lithium-ion battery (KTM PowerPack).



Warning

Risk of injury The vehicle runs very quietly, even when it is ready to operate.

The vehicle starts moving in an uncontrolled manner if the throttle grip is accidentally touched while work is being performed on the vehicle.

The high-voltage components of the vehicle are only deactivated if the vehicle is switched off at the main switch.

- Ensure that the vehicle is switched off at the main switch and remains switched off while any work is being performed on the vehicle.
- Remove the power pack from the vehicle before you start any work on the vehicle.
- Protect the vehicle against access from unauthorized persons while you are performing work on the vehicle.

2.11 Environment

When you respect the rights of others and use your motorcycle legally, you will help protect the future of motorcycle sport and avoid most conflicts and problems.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the applicable laws and regulations in your country.

When disposing of the lithium-ion battery (KTM PowerPack) and the 12 V battery, comply with the laws and regulations of the respective country.

Your authorized KTM dealer can dispose of the KTM PowerPack free of charge and in an environmentally compatible manner.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to assist you.

Electrical devices like the charger may not be disposed of with household waste. Electrical devices must be disposed of through the appropriate recycling centers. Contact your municipality or your authorized KTM dealer.

2.12 Owner's Manual

Read this owner's manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer.

The Owner's Manual is an important component of the vehicle and must be handed over to the new owner if the vehicle is sold.

The Owner's Manual is also available for download from your authorized KTM dealer and on the KTM website. International KTM Website: <http://www.ktm.com>

2.13 Fire hazard



Warning

Fire hazard Damaged rechargeable lithium-ion batteries (KTM PowerPacks) present a fire hazard.

Massive mechanical damage may cause an internal cell short circuit and as a consequence may cause the battery to self-ignite.

- Contact the KTM customer service immediately if major damage to the rechargeable lithium-ion battery (KTM PowerPack) has occurred.

There is no particular fire hazard for this vehicle when the rechargeable lithium-ion battery (KTM PowerPack) is intact.

However, should the vehicle catch fire, inform the fire brigade responsible that an electric vehicle with a rechargeable lithium-ion battery is on fire.

3.1 Manufacturer and implied warranty

The work specified in the service schedule may only be performed in an authorized KTM workshop and must be recorded in both the Service & Warranty Booklet and in the **KTM Dealer.net**, otherwise any warranty coverage will become void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle is not covered by the manufacturer warranty.

Additional information on the manufacturer or manufacturer warranty and the procedures involved can be found in the Service & Warranty Booklet.

3.2 Fuel, auxiliary substances

Use the operating and auxiliary substances (such as oils and lubricants) specified in the Owner's Manual.

3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss.

Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized KTM dealer will be glad to advise you.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.

International KTM Website: <http://www.ktm.com>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work is properly carried out as described in the Owner's Manual. Incorrect adjustment and tuning of the chassis and suspension can lead to damage and breakage of components.

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can lead to considerably more rapid wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.


3.6 Customer service

Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.

International KTM Website: <http://www.ktm.com>

3.7 System voltage

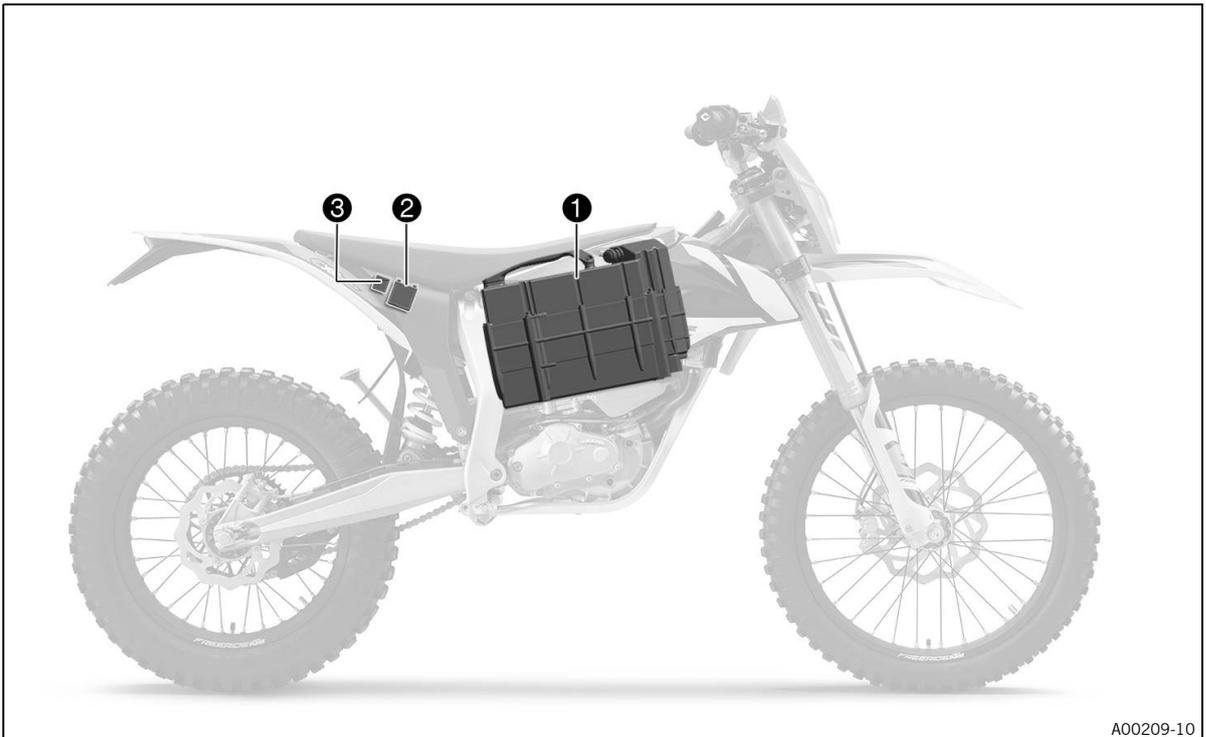

A00209-10

A rechargeable lithium-ion battery **1** (KTM PowerPack, 260 V) and a 12 V battery **2** are installed in the vehicle. The 12 V battery is located at the rear, under the seat. The fuse box **3** is located next to the 12 V battery. The KTM PowerPack is located under the seat and is bolted to the electric motor. The KTM PowerPack can be removed with just a few simple steps.

The KTM PowerPack can be charged in the vehicle or following removal from the vehicle.

Check the KTM PowerPack for damage to the housing or the plug every time it is removed and installed.

The 12 V battery is required for vehicle operation. The vehicle control unit requires the 12 V battery to start the system. If the 12 V battery is defective, discharged or not connected, the vehicle will not start.

3.8 New KTM PowerPack

When using the KTM PowerPack for the first time, the vehicle must be ridden until the KTM PowerPack is fully discharged. The vehicle will initially reduce its output power. When operating in power-reduced mode, the vehicle can still be driven for a few more minutes before the vehicle switches off with blink code 11.

Then charge the KTM PowerPack until the battery charger completes the process at 100%. The charge level indicator on the battery charger shows the progress made.

This charging process generally takes approximately 135 minutes, but may take up to four hours. Do not skip this procedure as it has a significant influence on the performance of the KTM PowerPack.

3.9 Operation at low temperatures

To spare the KTM PowerPack, the motor control reduces the power at low temperatures.

When the temperature of the KTM PowerPack falls below 9 °C, the motor control reduces power to 80%. 50% of power is available at temperatures below 0 °C. In both cases, the active driving mode display flashes slowly. The vehicle can be operated without problems. The KTM PowerPack is not damaged by the power reduction.


The KTM PowerPack warms up when the vehicle is operating. When the temperature of the KTM PowerPack rises above 0 °C, 80% of power is available once the vehicle has been started again. When the temperature of the KTM PowerPack rises above 8 °C, full power is available once the vehicle has been started again.

4.1 View of vehicle, front left (example)

F01657-10


- ❶ Front brake lever (📖 p. 19)
- ❷ Rear brake lever (📖 p. 19)
- ❸ Seat release
- ❹ Shock absorber compression adjustment
- ❺ Shock absorber rebound adjustment
- ❻ Side stand (📖 p. 21)
- ❼ Steering lock (📖 p. 22)

4.2 View of vehicle, rear right (example)

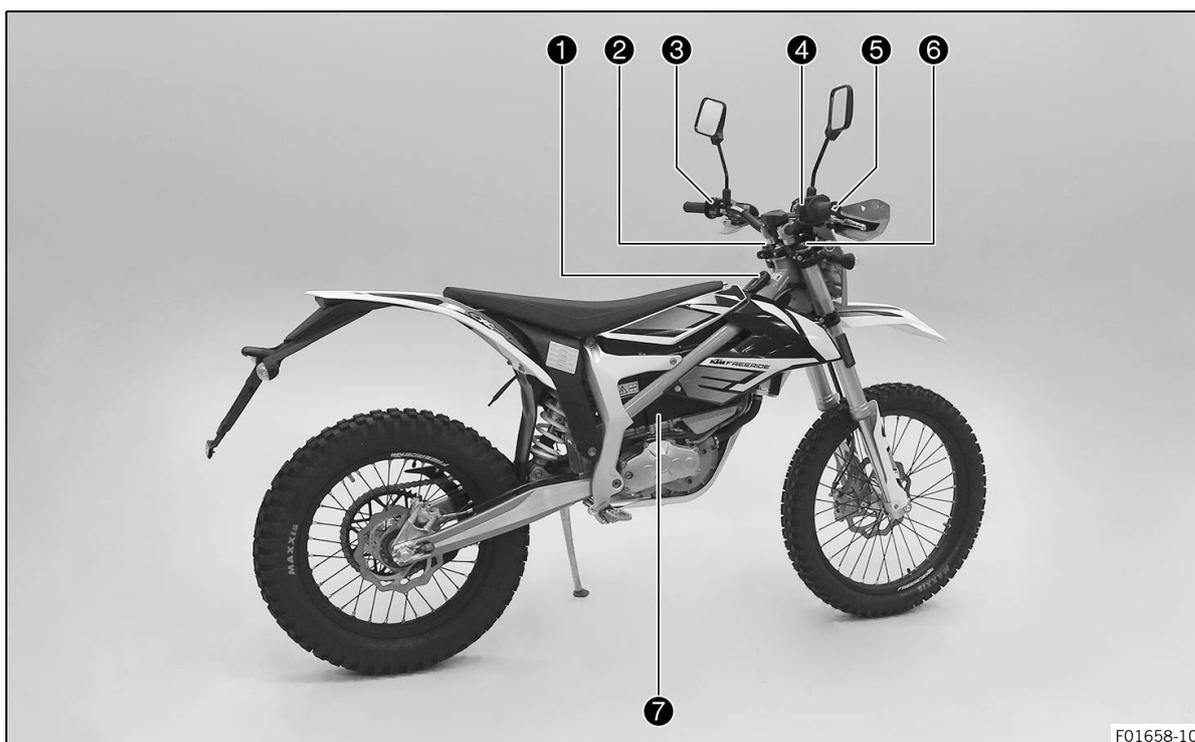


- ❶ Multifunction display (📖 p. 23)
- ❷ Fork compression adjuster
- ❸ Horn button (📖 p. 20)
- ❹ Light switch (📖 p. 20)
- ❺ Turn signal switch (📖 p. 21)
- ❻ Main switch (📖 p. 19)
- ❼ Start button (📖 p. 20)
- ❽ Throttle grip (📖 p. 19)
- ❾ Fork rebound adjustment
- ❿ KTM PowerPack

5.1 Vehicle identification number

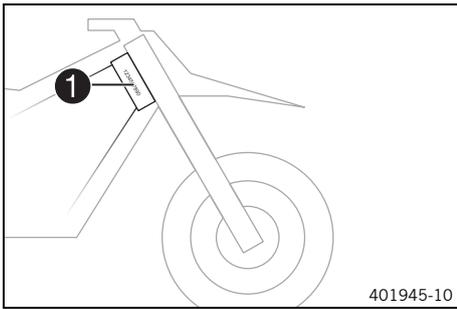


The vehicle identification number **1** is stamped on the right side of the steering head.

5.2 Type label

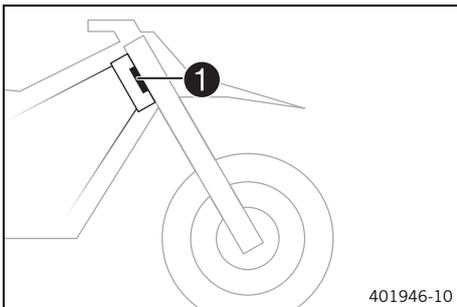

The type label **1** is located on the front steering head.

5.3 Key number

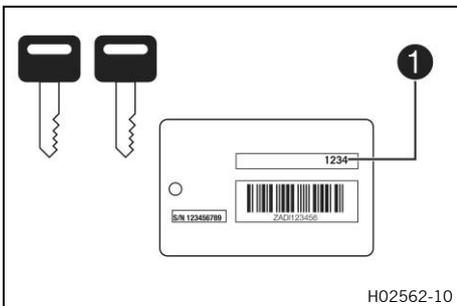


The key number **1** can be found on the **KEYCODECARD**.



Info


You need the key number to order a spare key. Keep the **KEYCODECARD** in a safe place.

5.4 Motor number

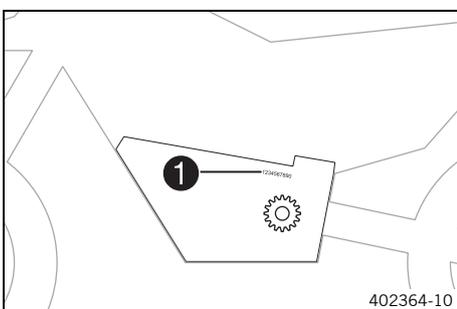


The motor number **1** is located on the left side of the motor over the motor sprocket.

5.5 Fork part number

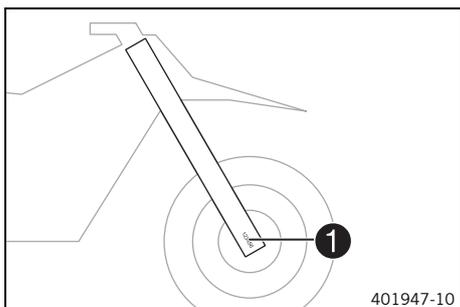

The fork part number **1** is stamped on the inner side of the axle clamp.

5.6 Shock absorber article number

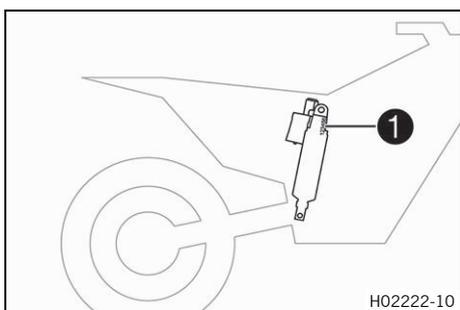


Shock absorber article number **1** is stamped on the top of the shock absorber above the adjusting ring towards the motor side.

5.7 Battery identification number




The battery identification number (**BIN**) **1** is stamped under the handle of the KTM PowerPack.

6.1 Front brake lever

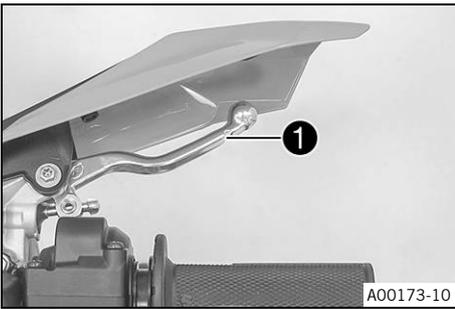


Front brake lever ❶ is fitted on the right side of the handlebar.

6.2 Rear brake lever

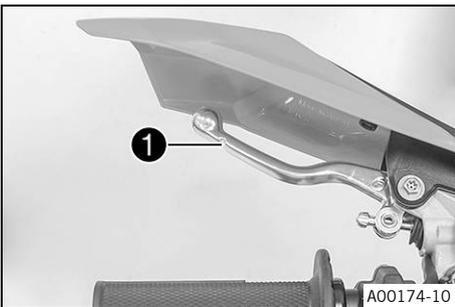


Rear brake lever ❶ is fitted on the left side of the handlebar.

6.3 Throttle grip

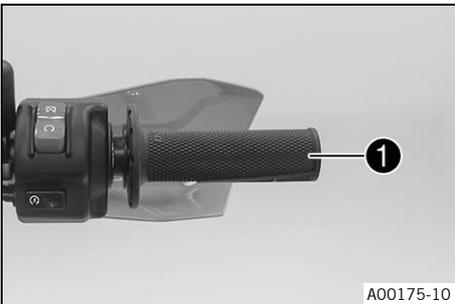

The throttle grip ❶ is fitted on the right side of the handlebar.

6.4 Main switch

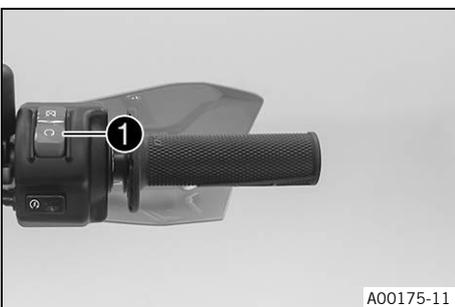


The main switch ❶ is attached to the right side of the handlebar. The main switch is also used as an emergency OFF switch.

Possible states

	Vehicle switched off. – The vehicle is switched off in this position.
	Vehicle ready for operation – The vehicle is ready for operation in this position. The start button is active.

6.5 Start button

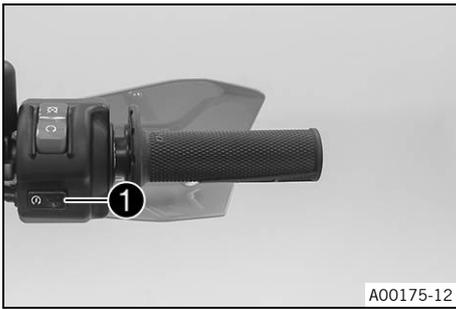

The start button **1** is fitted on the right side of the handlebar. The start button is only enabled when the main switch is switched on.

When the start button is pushed, the vehicle switches from standby to ready mode. The driving mode indicator and an acoustic signal indicate operating readiness.

When the start button is pushed again, the vehicle switches back to standby mode. The driving mode indicator goes out.




Info

Standby mode can only be switched to ready mode if the throttle grip is fully closed and the vehicle speed is less than 5 km/h. If the vehicle is not moved for 90 seconds after ready mode is activated and the throttle grip is not twisted open, the vehicle automatically switches back to standby mode.

Possible states

- The start button is in the neutral position – The state of the vehicle is retained.
- The start button is pressed – The state of the vehicle changes between ready mode and standby mode.

6.6 Horn button

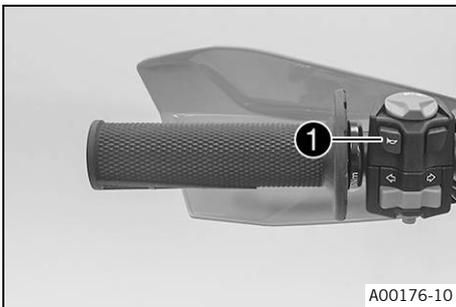


The horn button **1** is fitted on the left side of the handlebar.

Possible states

- Horn button  in neutral position
- Horn button  pressed – The horn is operated in this position.

6.7 Light switch

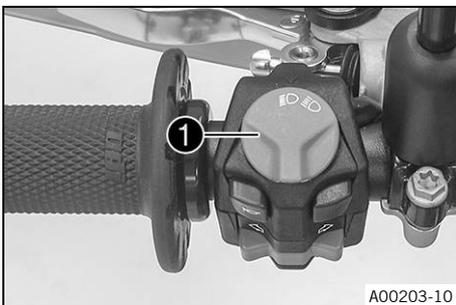


The light switch **1** is fitted on the left side of the handlebar.

Possible states

	Low beam on – Light switch is in the central position. In this position, the low beam and tail light are switched on.
	High beam on – Light switch is turned to the left. In this position, the high beam and the tail light are switched on.

6.8 Turn signal switch

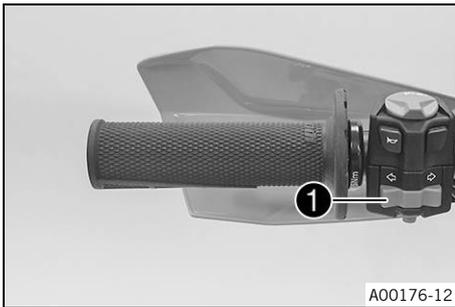


Turn signal switch ① is fitted on the left side of the handlebar.


Possible states

	Turn signal light off – Turn signal switch is in the central position.
←	Turn signal light, left, on – Turn signal switch is turned to the left.
→	Turn signal light, right, on – Turn signal switch is turned to the right.

6.9 Side stand

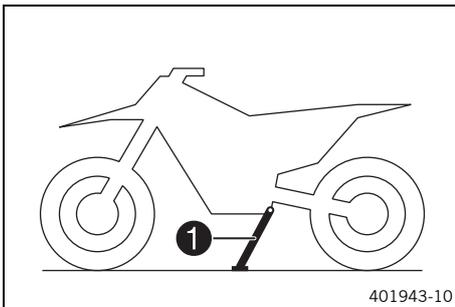


The side stand ① is located on the left of the vehicle.

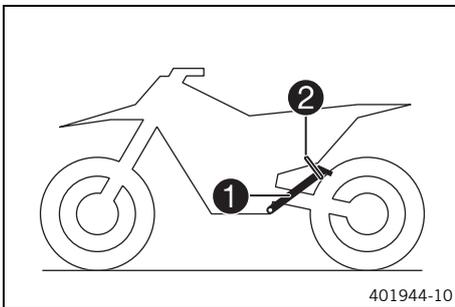

The side stand is used for parking the motorcycle.

i Info
When you are riding, side stand ① must be folded up and secured with rubber strap ②.

6.10 Ignition lock

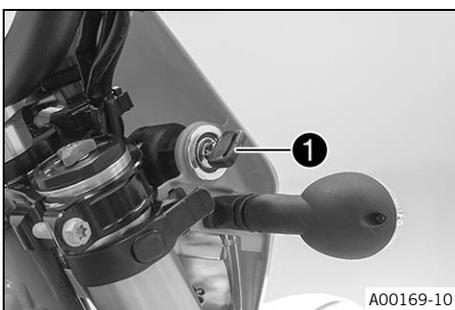


The ignition lock ① is on the right behind the headlight mask.

i Info
When the ignition is switched on at the ignition lock, quickly activate the vehicle with the main switch. When the ignition is switched on and the main switch is switched off, the 12-V battery discharges very quickly because in this case the lighting is powered by the 12-V battery instead of the KTM PowerPack.

Possible states

	Ignition off – In this position, the electric circuit of the 12-V battery is interrupted and the vehicle cannot be activated.
	Ignition on – In this position, the electric circuit of the 12-V battery is closed and the vehicle can be started.

6.11 Steering lock

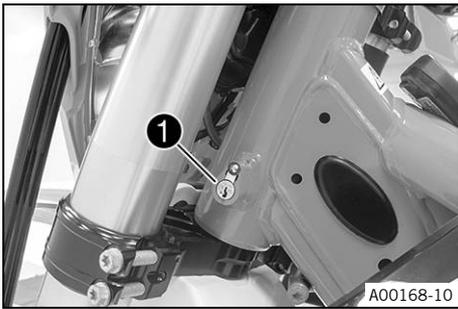


Steering lock ❶ is fitted on the left side of the steering head. The steering lock is used to lock the steering. Steering, and therefore riding, is no longer possible.

6.12 Locking the steering

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

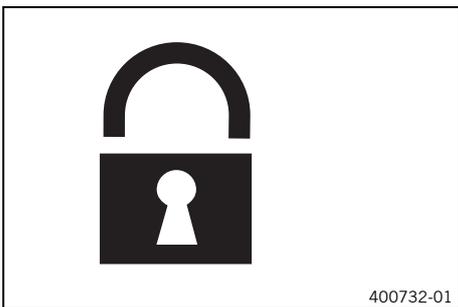

- Park the vehicle.
- Deactivate the vehicle. (📖 p. 43)
- Turn the handlebar as far as possible to the right.
- Lubricate the steering lock regularly.

Universal oil spray (📖 p. 139)


- Insert the ignition key in the steering lock, turn it to the left, press it in, and turn it to the right. Remove the ignition key.
- ✓ Steering is no longer possible.



Info

Never leave the ignition key in the steering lock.

6.13 Unlocking the steering

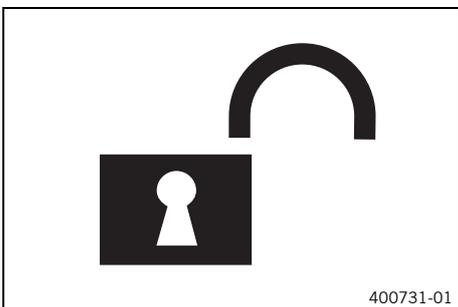

- Insert the ignition key in the steering lock, turn it to the left, pull it out, and turn it to the right. Remove the ignition key.
- ✓ The handlebar can now be moved again.



Info

Never leave the ignition key in the steering lock.


7.1 Multifunction display

7.1.1 Multifunction display

The multifunction display is attached in front of the seat.

Overview of the multifunction display

- ❶ Driving mode tip switch (📖 p. 23)
- ❷ Driving mode display (📖 p. 24)
- ❸ Malfunction indicator lamp (📖 p. 24)
- ❹ Charge level indicator (📖 p. 24)

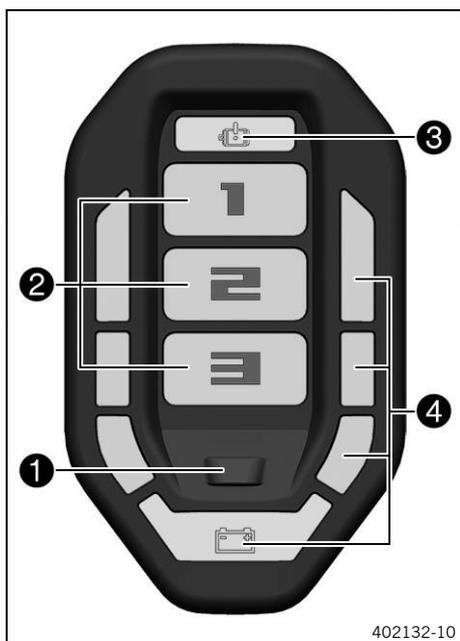

402132-10

7.1.2 Driving mode tip switch

The driving mode tip switch ❶ determines the driving mode.


Possible states

- The vehicle is in standby mode – The driving mode tip switch is active.
- The vehicle is in ready mode – The driving mode tip switch is active.
- All other vehicle conditions – The driving mode tip switch is not active.



402133-10

7.1.3 Driving mode display

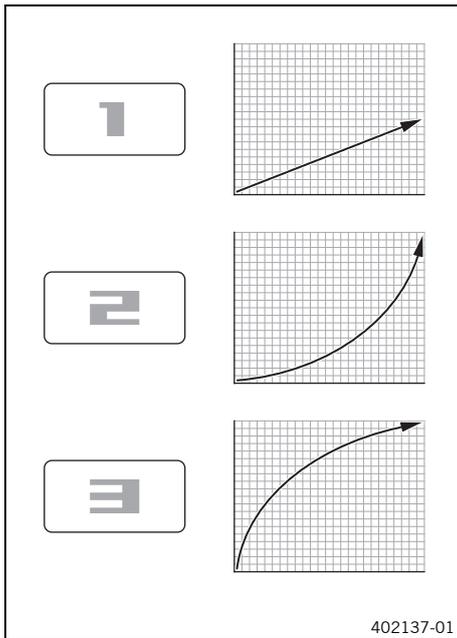


Red driving mode displays with the numbers **1**, **2** or **3** show the driving mode selected.

Three different driving modes are available. The driving modes determine how the vehicle reacts to throttle grip operation. The figures only show approximate values for illustrative purposes, and do not describe the actual reaction.

Driving mode **1** is Economy: the motor torque is reduced by half. Driving mode **2** is Standard: the further the throttle grip is twisted open, the more the motor power increases.

Driving mode **3** is Advanced: the greatest increase in power occurs immediately, after which the motor power increases more slowly.

7.1.4 Malfunction indicator lamp

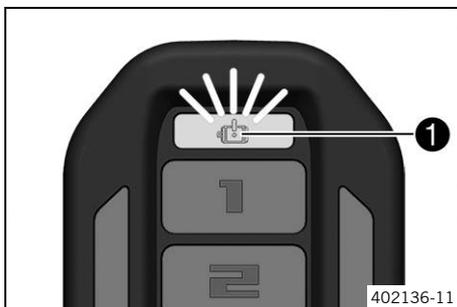


The warning tones emitted by the multifunction display are synchronized with the flashing rhythm of the malfunction indicator lamp **1**.

Possible states

	The malfunction indicator lamp flashes – A error is present in the vehicle electronic system.
	The malfunction indicator lamp lights up – The system is carrying out a self-check or has been disabled during driving.


7.1.5 Charge level indicator

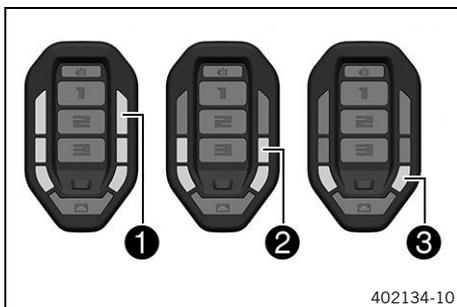

All segments **1** light up: charging level 70 % - 100%.

Four segments **2** light up: charging level 50 % - 70%.

Two segments **3** light up: charging level 30 % - 50 %.

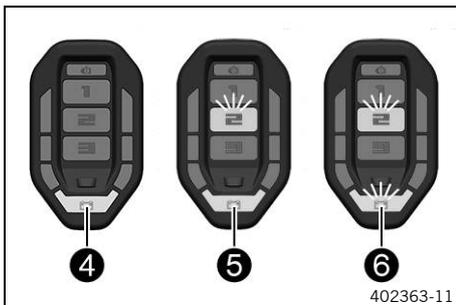


The last segment **4** lights up in yellow: charging level 20% - 30 %.

The last segment **5** lights up in red and the driving mode indicator flashes red: charging level 10%–20%.

The last segment **6** and the driving mode indicator light up in red: charging level 0%–10%.

7.1.6 Power reduction

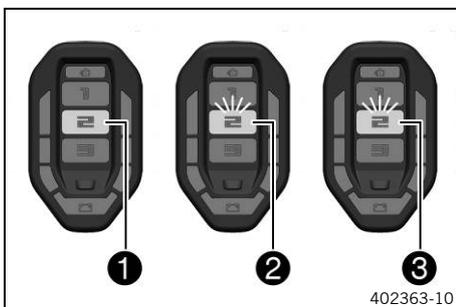

The selected driving mode 1 lights up:

- The vehicle is ready to operate and provides full power.

The selected driving mode 2 flashes slowly:

- The KTM PowerPack charge level is low. The system is still fully operable.
- High temperature; the system is still fully operable. The driving style must be adapted.
- Low temperature; the system provides 80 % of power at temperatures of less than 9 °C and 50 % of power at temperatures of less than 0 °C.

When the KTM PowerPack has warmed up sufficiently, 80% of power or full power is available, depending on the temperature, once the vehicle has been started again.

The selected driving mode 3 alternately flashes slow and fast:

- Power is still reduced considerably due to temperature monitoring, but 100% power is restored after the vehicle is restarted.

All three driving mode indicators light up and the yellow malfunction indicator lamp 4 flashes (blink code 22, 23, or 24):


- The system has exceeded the operating temperature. To protect the system from damage, the power is reduced considerably. Park the vehicle, if possible, and allow it to cool down. Full power is only enabled when the component concerned has cooled down and the vehicle has been started again.

All three driving mode indicators light up and the yellow malfunction indicator lamp 5 flashes with a different rhythm:

- The system provides 50% of power as an emergency operation program.

The selected driving mode 6 flashes slowly and the charge level indicator lights up red or flashes red:

- The KTM PowerPack charge level is below 20%. Vehicle power will be reduced. Switch off the vehicle and charge the KTM PowerPack.

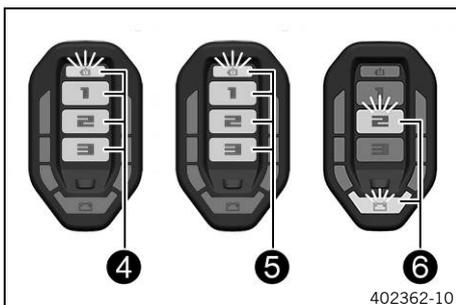

7.2 Overview


7.2.1 Overview of indicator lamps



Possible states

	The high beam indicator lamp lights up blue – The high beam is switched on.
	Turn signal indicator lamp flashes green – The turn signal is switched on.

8.1 Combination instrument overview

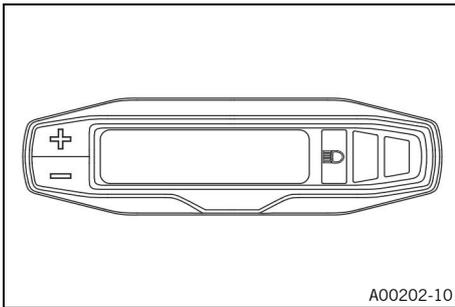

A00202-10


- Press the button **+** to control different functions.
- Press the button **-** to control different functions.



Info

When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.

8.2 Activation and test

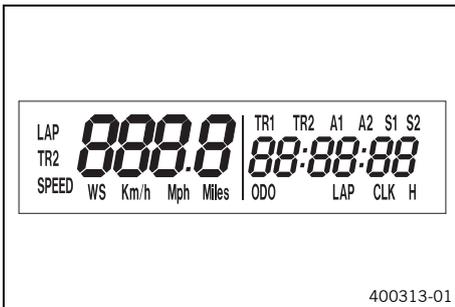

400313-01

Activating combination instrument

The combination instrument is activated when one of the buttons is pressed or an impulse comes from the wheel speed sensor.

Display test

To enable you to check that the display is functioning properly, all display segments light up briefly.



400314-01

WS (wheel size)

After the display function check, the wheel circumference **WS** is displayed briefly.



Info

The number 2205 equals the circumference of the 21" front wheel with standard tires.


The display then changes to the last selected mode.

8.3 Setting the kilometers or miles



Info

If you change the unit, the value **ODO** is retained and converted accordingly. The values **TR1**, **TR2**, **A1**, **A2** and **S1** are cleared when the unit of measure is changed.

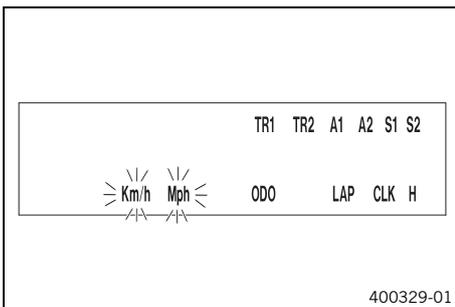

400329-01

Condition

The motorcycle is stationary.

- Repeatedly press the button **+** briefly until **H** appears at the bottom right of the display.
- Press the button **+** for 2–3 seconds.
 - ✓ The Setup menu is displayed and the active functions are shown.
- Repeatedly press the button **+** briefly until **Km/h / Mph** flashes.

Adjusting the Km/h

- Press the button **+**.

Adjusting the Mph

- Press the button **-**.

- Wait 3 - 5 seconds.
- ✓ The settings are stored.



Info


If no button is pressed for 10–12 seconds, or if an impulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

8.4 Setting the combination instrument



Info

When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.

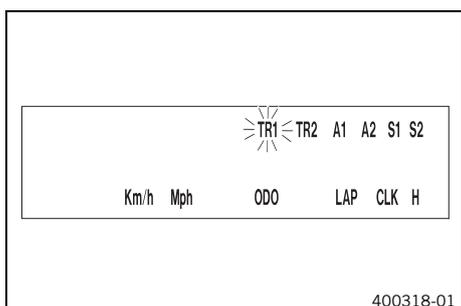

Condition

The motorcycle is stationary.

- Repeatedly press the button briefly until **H** appears at the bottom right of the display.
- Press the button for 2–3 seconds.
- ✓ The Setup menu is displayed and the active functions are shown.



Info

If no button is pressed for 10 - 12 seconds, the settings are automatically saved.
If no button is pressed for 20 seconds, or if an impulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

- Repeatedly press the button briefly until the desired function flashes.
- ✓ The selected function flashes.


Activating the function

- Press the button .
- ✓ The symbol continues to appear in the display and the next function appears.

Deactivating a function

- Press the button .
- ✓ The symbol disappears in the display and the next function appears.

8.5 Setting the clock

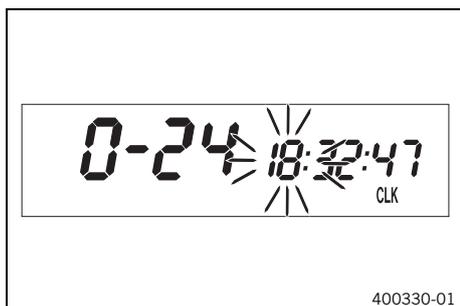

Condition

The motorcycle is stationary.

- Repeatedly press the button **+** briefly until **CLK** appears at the bottom right of the display.
- Press the button **+** for 2–3 seconds.
 - ✓ The hour display flashes.
- Adjust the hour display with the button **+** and/or button **-**.
- Wait 3 - 5 seconds.
 - ✓ The next segment of the display flashes and can be set.
- You can set the following segments in the same way as the hours by pressing the button **+** and the button **-**.



Info

The seconds can only be set to zero. If no button is pressed for 15–20 seconds, or if an impulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.




8.6 Viewing the lap time



Info

This function can only be opened if lap times have actually been timed.

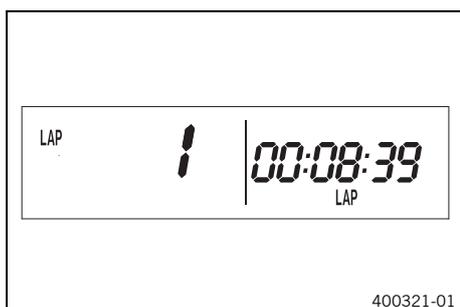

Condition

The motorcycle is stationary.

- Repeatedly press the button **+** briefly until **LAP** appears at the bottom right of the display.
- Briefly press the button **+**.
 - ✓ **LAP 1** appears on the left side of the display.
- The laps 1 - 10 can be viewed with the button **-**.
- Press and hold the button **+** for 3 - 5 seconds.
 - ✓ The lap times are deleted.
- Briefly press the button **+**.
 - ✓ Next display mode



Info

When an impulse is received from the wheel speed sensor, the left side of the display changes back to the **SPEED** mode.



8.7 Display mode SPEED (speed)



- Repeatedly press the button briefly until **SPEED** appears on the left side of the display.

The current speed is displayed in the **SPEED** display mode. The current speed can be displayed in **Km/h** or **Mph**.

i Info
Make the setting according to the country. When an impulse comes from the front wheel, the left side of the display changes to the **SPEED** mode and the current speed is shown.

8.8 Display mode SPEED/H (operating hours)



Condition


- The motorcycle is stationary.
- Repeatedly press the button briefly until **H** appears at the bottom right of the display.

In display mode **H**, the service hours of the motor are displayed. The service hour counter stores the total traveling time.

i Info
The service hour counter is necessary for ensuring that service work is carried out at the right intervals. If the combination instrument is in **H** display mode when starting off, it automatically changes to the **ODO** display mode. The **H** display mode is suppressed during the journey.

Press the button for 2–3 seconds.	The display changes to the functions setup menu.
Briefly press the button .	Next display mode
Press the button for 2–3 seconds.	No function
Briefly press the button .	No function

8.9 Setup menu

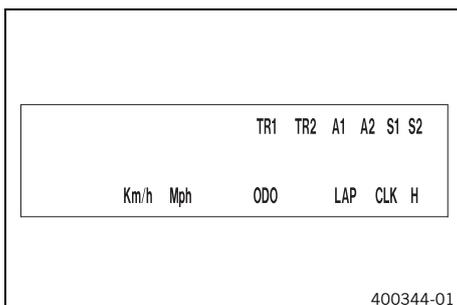

Condition

- The motorcycle is stationary.
- Repeatedly press the button briefly until **H** appears at the bottom right of the display.
- Press the button for 2–3 seconds.


The Setup menu displays the active functions.

i Info

Repeatedly press the button **+** briefly until the desired function is reached.
If no button is pressed for 20 seconds, the settings are automatically saved.

Briefly press the button + .	Activates the flashing display and changes to the next display
Press the button + for 2–3 seconds.	No function
Briefly press the button - .	Deactivates the flashing display and changes to the next display
Press the button - for 2–3 seconds.	No function
Wait 3 - 5 seconds.	Changes to the next display without changes
Wait 10 - 12 seconds.	Setup menu starts, stores the settings, and changes to H or ODO .

8.10 Adjusting the unit of measurement

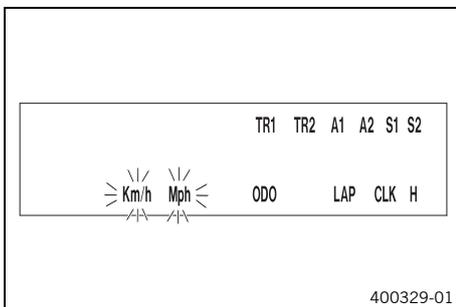

Condition


- The motorcycle is stationary.
- Repeatedly press the button **+** briefly until **H** appears at the bottom right of the display.
- Press the button **+** for 2–3 seconds.
- Repeatedly press the button **+** briefly until **Km/h / Mph** flashes. In measurement unit mode, you can change the unit of measurement.

i Info

If no button is pressed for 5 seconds, the settings are automatically saved.

Briefly press the button + .	Starts selection, activates Km/h display
Press the button + for 2–3 seconds.	No function
Briefly press the button - .	Activates Mph display
Press the button - for 2–3 seconds.	No function
Wait 3 - 5 seconds.	Changes to the next display, changes from selection to the Setup menu
Wait 10 - 12 seconds.	Stores and closes the Setup menu

8.11 Display mode SPEED/CLK (time)

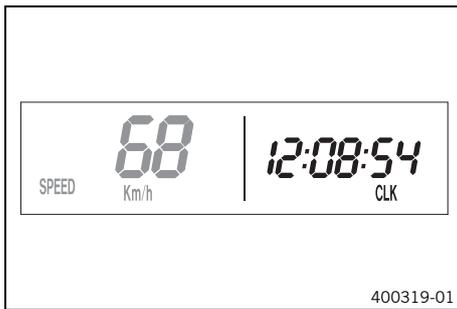

- Repeatedly press the button briefly until **CLK** appears at the bottom right of the display.

The time is shown in display mode **CLK**.

Press the button for 2–3 seconds.	The display changes to the Setup menu of the clock.
Briefly press the button .	Next display mode
Press the button for 2–3 seconds.	No function
Briefly press the button .	No function

8.12 Adjusting the clock



Condition

- The motorcycle is stationary.
- Repeatedly press the button briefly until **CLK** appears at the bottom right of the display.
- Press the button for 2–3 seconds.

Press the button for 2–3 seconds.	Increases the value
Briefly press the button .	Increases the value
Press the button for 2–3 seconds.	Reduces the value
Briefly press the button .	Reduces the value
Wait 3 - 5 seconds.	Changes to the next value
Wait 10 - 12 seconds.	Closes the SETUP menu

8.13 Display mode SPEED/LAP (lap time)




- Repeatedly press the button briefly until **LAP** appears at the bottom right of the display.

In the **LAP** display mode, up to 10 lap times can be timed with the stop watch.

i Info
If the lap time continues running after the button is pressed, 9 memory locations are occupied. Lap 10 must be timed using the button .

Press the button  for 2–3 seconds.	The stop watch and the lap time are reset.
Briefly press the button  .	Next display mode
Press the button  for 2–3 seconds.	Stops the clock.
Briefly press the button  .	Starts the stop watch or stop the current lap time measurement, stores it and the stop watch starts the next lap.

8.14 Viewing the lap time

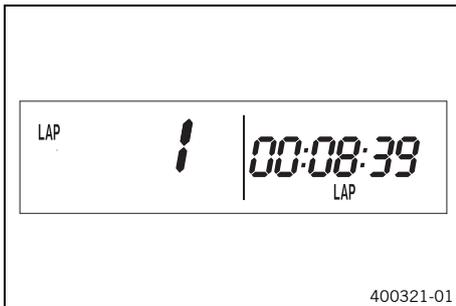

Condition

- The motorcycle is stationary.
- Repeatedly press the button  briefly until **LAP** appears at the bottom right of the display.
- Briefly press the button .

Press the button  for 2–3 seconds.	The stop watch and the lap time are reset.
Briefly press the button  .	Select a lap from 1 – 10
Press the button  for 2–3 seconds.	No function
Briefly press the button  .	View the next lap time.

8.15 Display mode SPEED/ODO (odometer)




- Repeatedly press the button  briefly until **ODO** appears at the bottom right of the display.

The total traveled distance is shown in display mode **ODO**.

Press the button  for 2–3 seconds.	No function
Briefly press the button  .	Next display mode
Press the button  for 2–3 seconds.	No function
Briefly press the button  .	No function

8.16 Display mode SPEED/TR1 (trip master 1)

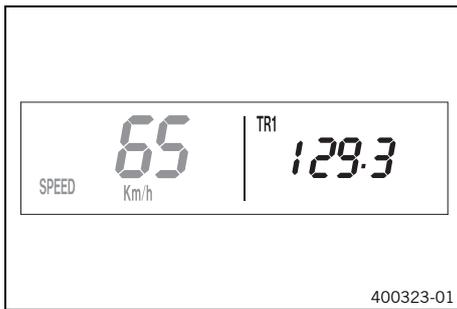

- Repeatedly press the button \oplus briefly until **TR1** appears at the top right of the display.


TR1 (trip master 1) runs constantly and counts up to 999.9. You can use it to measure trips or the distance between refueling stops.

TR1 is coupled with **A1** (average speed 1) and **S1** (stop watch 1).

Info
If 999.9 is exceeded, the values of **TR1**, **A1** and **S1** are automatically reset to 0.0.

Press the button \oplus for 2–3 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
Briefly press the button \oplus .	Next display mode
Press the button \ominus for 2–3 seconds.	No function
Briefly press the button \ominus .	No function

8.17 Display mode SPEED/TR2 (trip master 2)

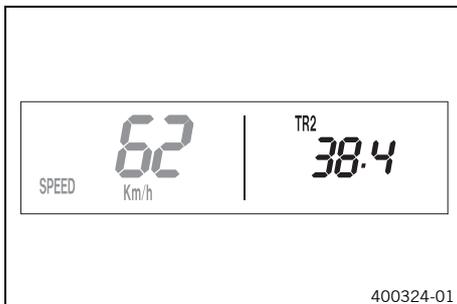


- Repeatedly press the button \oplus briefly until **TR2** appears at the top right of the display.

TR2 (trip master 2) runs constantly and counts up to 999.9.

Press the button \oplus for 2–3 seconds.	Clears the values TR2 and A2 .
Briefly press the button \oplus .	Next display mode
Press the button \ominus for 2–3 seconds.	Reduces value of TR2 .
Briefly press the button \ominus .	Reduces value of TR2 .

8.18 Adjusting TR2 (trip master 2)

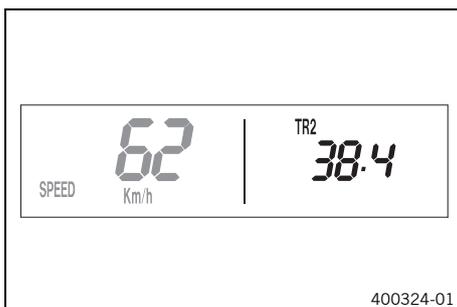

Condition

- The motorcycle is stationary.
- Repeatedly press the button \oplus briefly until **TR2** appears at the top right of the display.
- Press the button \ominus for 2–3 seconds until **TR2** flashes.


The displayed value can be set manually with the button \oplus and the button \ominus . This is a very practical function when riding using the road book.

i Info

The **TR2** value can also be corrected manually during the journey with the button **+** and the button **-**.
If 999.9 is exceeded, the value of **TR2** is automatically reset to 0.0.

Press the button + for 2–3 seconds.	Increases value of TR2 .
Briefly press the button + .	Increases value of TR2 .
Press the button - for 2–3 seconds.	Reduces value of TR2 .
Briefly press the button - .	Reduces value of TR2 .
Wait 10 - 12 seconds.	Stores and closes the Setup menu.

8.19 Display mode SPEED/A1 (average speed 1)

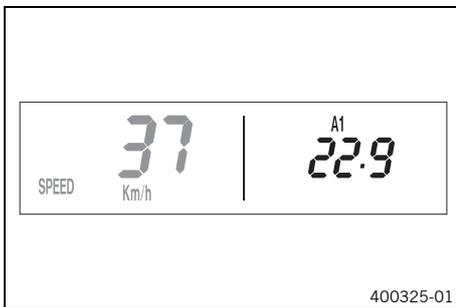

- Repeatedly press the button **+** briefly until **A1** appears at the top right of the display.

A1 (average speed 1) shows the average speed calculated using **TR1** (trip master 1) and **S1** (stop watch 1). The calculation of this value is activated by the first impulse of the wheel speed sensor and ends 3 seconds after the last impulse.

Press the button + for 2–3 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
Briefly press the button + .	Next display mode
Press the button - for 2–3 seconds.	No function
Briefly press the button - .	No function

8.20 Display mode SPEED/A2 (average speed 2)



- Repeatedly press the button **+** briefly until **A2** appears at the top right of the display.

A2 (average speed 2) shows the average speed on the basis of the current speed if the stop watch **S2** (stop watch 2) is running.

i Info

The displayed value can differ from the actual average speed if **S2** was not stopped after the ride.

Briefly press the button + .	Next display mode
-------------------------------------	-------------------

8 COMBINATION INSTRUMENT

Press the button \oplus for 2–3 seconds.	No function
Press the button \ominus for 2–3 seconds.	No function
Briefly press the button \ominus .	No function

8.21 Display mode SPEED/S1 (stop watch 1)



- Repeatedly press the button \oplus briefly until **S1** appears at the top right of the display.

S1 (Stop watch 1) shows the riding time based on **TR1** and continues running as soon as an impulse arrives from the wheel speed sensor.

The calculation of this value starts with the first impulse from the wheel speed sensor and ends 3 seconds after the last impulse.

Press the button \oplus for 2–3 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
Briefly press the button \oplus .	Next display mode
Press the button \ominus for 2–3 seconds.	No function
Briefly press the button \ominus .	No function

8.22 Display mode SPEED/S2 (stop watch 2)



- Repeatedly press the button \oplus briefly until **S2** appears at the top right of the display.

S2 (Stop watch 2) is a manual stop watch.

If **S2** is running in the background, the display **S2** flashes.

Press the button \oplus for 2–3 seconds.	The displays of S2 and A2 are set to 0,0.
Briefly press the button \oplus .	Next display mode
Press the button \ominus for 2–3 seconds.	No function
Briefly press the button \ominus .	Starts or stops S2 .

8.23 Table of functions

Display	Press the button + for 2–3 seconds.	Briefly press the button + .	Press the button = for 2–3 seconds.	Briefly press the button = .	Wait 3 - 5 seconds.	Wait 10 - 12 seconds.
Display mode SPEED/H (operating hours)	The display changes to the functions setup menu.	Next display mode	No function	No function		
Setup menu	No function	Activates the flashing display and changes to the next display	No function	Deactivates the flashing display and changes to the next display	Changes to the next display without changes	Setup menu starts, stores the settings, and changes to H or ODO .
Adjusting the unit of measurement	No function	Starts selection, activates Km/h display	No function	Activates Mph display	Changes to the next display, changes from selection to the Setup menu	Stores and closes the Setup menu
Display mode SPEED/CLK (time)	The display changes to the Setup menu of the clock.	Next display mode	No function	No function		
Adjusting the clock	Increases the value	Increases the value	Reduces the value	Reduces the value	Changes to the next value	Closes the SETUP menu
Display mode SPEED/LAP (lap time)	The stop watch and the lap time are reset.	Next display mode	Stops the clock.	Starts the stop watch or stop the current lap time measurement, stores it and the stop watch starts the next lap.		
Viewing the lap time	The stop watch and the lap time are reset.	Select a lap from 1 – 10	No function	View the next lap time.		
Display mode SPEED/ODO (odometer)	No function	Next display mode	No function	No function		
Display mode SPEED/TR1 (trip master 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		
Display mode SPEED/TR2 (trip master 2)	Clears the values TR2 and A2 .	Next display mode	Reduces value of TR2 .	Reduces value of TR2 .		

8 COMBINATION INSTRUMENT

Display	Press the button \oplus for 2–3 seconds.	Briefly press the button \oplus .	Press the button \ominus for 2–3 seconds.	Briefly press the button \ominus .	Wait 3 - 5 seconds.	Wait 10 - 12 seconds.
Adjusting TR2 (trip master 2)	Increases value of TR2 .	Increases value of TR2 .	Reduces value of TR2 .	Reduces value of TR2 .		Stores and closes the Setup menu.
Display mode SPEED/A1 (average speed 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		
Display mode SPEED/A2 (average speed 2)	No function	Next display mode	No function	No function		
Display mode SPEED/S1 (stop watch 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		
Display mode SPEED/S2 (stop watch 2)	The displays of S2 and A2 are set to 0,0.	Next display mode	No function	Starts or stops S2 .		

8.24 Table of conditions and menu activation

Display	The motorcycle is stationary.	Menu can be activated
Display mode SPEED/H (operating hours)	•	
Setup menu	•	
Adjusting the unit of measurement	•	
Adjusting the clock	•	
Display mode SPEED/LAP (lap time)		•
Viewing the lap time	•	
Display mode SPEED/TR1 (trip master 1)		•
Display mode SPEED/TR2 (trip master 2)		•
Adjusting TR2 (trip master 2)	•	
Display mode SPEED/A1 (average speed 1)		•
Display mode SPEED/A2 (average speed 2)		•
Display mode SPEED/S1 (stop watch 1)		•
Display mode SPEED/S2 (stop watch 2)		•

9.1 Advice on preparing for first use



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Warning

Danger of accidents An unadapted riding style impairs the handling characteristic.

- Adapt your riding speed to the road conditions and your riding ability.



Warning

Danger of accidents The vehicle is not designed to carry passengers.

- Do not ride with a passenger.



Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

- Do not exceed the maximum permissible overall weight or the axle loads.



Warning

Risk of misappropriation People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended.
- Protect the vehicle against access by unauthorized persons.

- Make sure that the pre-sales inspection work has been carried out by an authorized KTM workshop.
 - ✓ You will receive the delivery documents and the Service & Warranty Booklet at vehicle handover.
- Before riding for the first time, read the entire Owner's Manual carefully.
- Get to know the controls.
- Adjust the free travel of the front brake lever. (📖 p. 79)
- Adjust the free travel of the rear brake lever. (📖 p. 85)
- Get used to handling the motorcycle in a suitable area before undertaking a longer trip.



Info

When off road, it is recommended that you are accompanied by another person on another vehicle so that you can help each other.

- Try also to ride as slowly as possible and in a standing position to get a better feeling for the motorcycle.
- Do not take any offroad trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- Do not exceed the maximum permissible weight and the maximum permissible axle loads.


Guideline

Maximum permissible overall weight	280 kg (617 lb.)
Maximum permissible front axle load	110 kg (243 lb.)
Maximum permissible rear axle load	170 kg (375 lb.)

10.1 Checks and maintenance measures when preparing for use

i Info

Before every trip, check the condition of the vehicle and ensure that it is safe to operate. The vehicle must be in perfect technical condition when it is being operated.

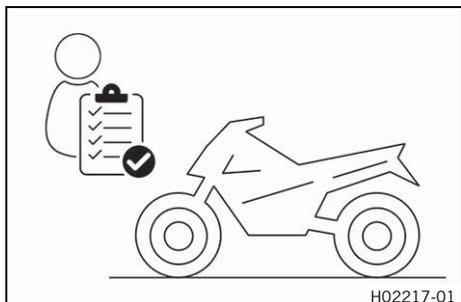


- Check the throttle grip, main switch, KTM PowerPack, multi-function display, and electric motor for external damage.
- Check the electrical system.
- Check the front brake fluid level. (📖 p. 80)
- Check the rear brake fluid level. (📖 p. 86)
- Check the front brake linings. (📖 p. 82)
- Check the rear brake linings. (📖 p. 88)
- Check that the brake system is functioning properly.
- Check the coolant level. (📖 p. 118)
- Check for chain dirt accumulation. (📖 p. 72)
- Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 75)
- Check the chain tension. (📖 p. 73)
- Check the tire condition. (📖 p. 95)
- Check tire pressure. (📖 p. 95)
- Check the spoke tension. (📖 p. 96)

i Info


The spoke tension must be checked regularly as incorrect spoke tension will strongly impair riding safety.

- Clean the dust boots of the fork legs. (📖 p. 59)
- Bleed the fork legs. (📖 p. 58)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps for a tight fit.
- Check the charge level of the KTM PowerPack.


10.2 Starting the vehicle

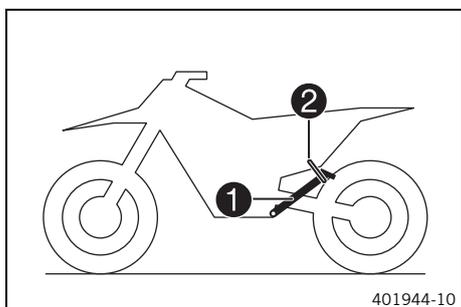

- Take the motorcycle off side stand **1** and secure the side stand with rubber strap **2**.
- Turn the ignition key in the ignition lock to the position \circ .

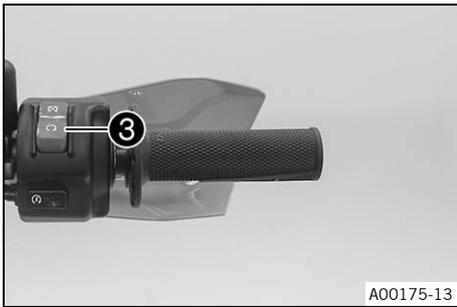


- Push main switch **3** into position **O**.
 ✓ The vehicle is in standby.

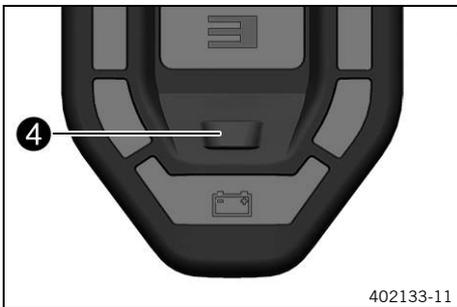

Optional:

- Press and hold driving mode tip switch **4** for at least one second.
 ✓ Driving mode is activated when the tip switch is let go.

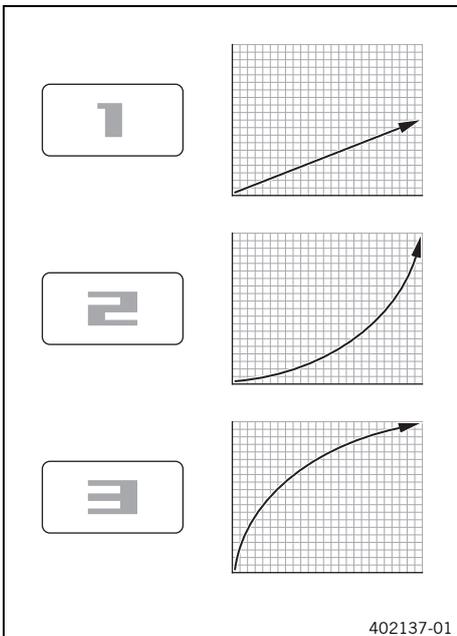


- Select one of the driving modes.
 The driving mode **1** is Economy: the motor torque is reduced by half.
 Driving mode **2** is Standard: the further the throttle grip is twisted open, the more the motor power increases.
 The driving mode **3** is Advanced: the greatest increase in power occurs immediately, after which the motor power increases more slowly.



Info

A red driving mode display with the number **1**, **2**, or **3** shows the driving mode selected. Three drive modes are available. The drive modes define how the vehicle will respond to operation of the throttle grip. The figures contain approximate values for illustration purposes and do not show the actual response.

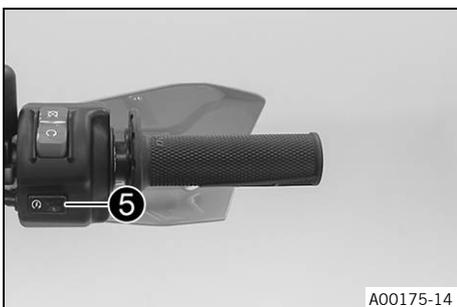

- Press start button **5**.
 ✓ The vehicle is ready to drive and responds to turning of the throttle grip.


10.3 Starting off

i Info

When you are riding, the side stand must be folded up and secured with the rubber strap.

- First familiarize yourself with the new riding and handling characteristic of this vehicle.
- Turn the throttle grip carefully. The absence of engine noise belies the actual power of the vehicle.

10.4 Recuperation

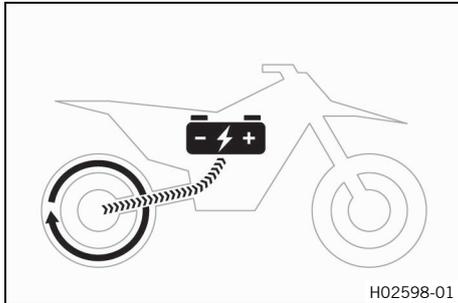

In the driving mode **1** (Economy) (🗨️ p. 24), the KTM PowerPack is charged by the electric motor when the throttle grip is fully closed in overrun.

Due to the recuperation function, **1** there is an increased motor braking effect in driving mode.

The recuperation effect increases with the motor speed.

i Info

The recuperation function is not available in the driving mode **2** and **3**.

10.5 Applying the brakes



Warning

Danger of accidents Excessively forceful application of the brakes blocks the wheels.

- Adjust application of the brakes to the respective riding situation and riding surface conditions.



Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

i Info

The rear brake lever is located on the left side of the handlebar.

- When braking, release the throttle and apply the front and rear brakes at the same time.
- On sandy, wet, or slippery surfaces, use mostly the rear brake if possible.
- Try to complete the braking procedure before riding into a curve.

10.6 Stopping, parking



Warning

Risk of misappropriation People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended.
- Protect the vehicle against access by unauthorized persons.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the radiator, motor, shock absorber, or brake system before these parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

Note


Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.


-
- Apply the brakes on the motorcycle.
 - Deactivate the vehicle. (📖 p. 43)
 - Park the motorcycle on its side stand on a firm surface.
 - Lock the steering. (📖 p. 22)



10.7 Deactivating the vehicle

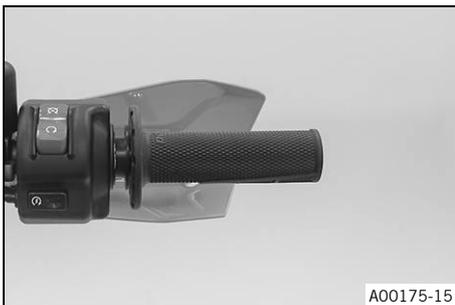

- Push the main switch into the position ☒.

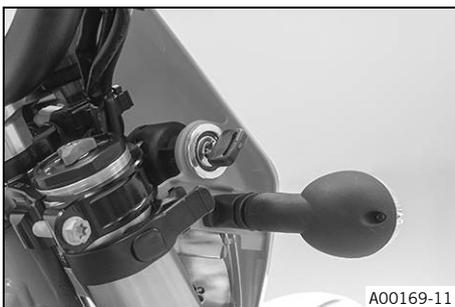

- Turn the ignition key in the ignition lock to the position ☒ while the vehicle is deactivated. Remove the ignition key.



10.8 Transporting the vehicle

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

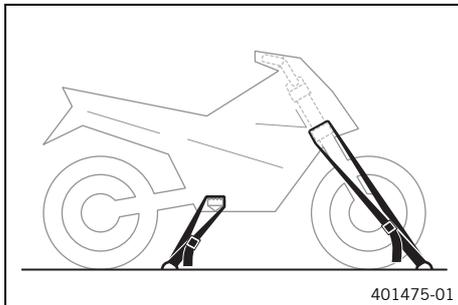

- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

10.9 Transporting the KTM PowerPack



Warning

Risk of injury The KTM PowerPack is very heavy.

Serious injury may result if the KTM PowerPack is not properly secured during transport. The transport vehicle may be damaged if the KTM PowerPack is not properly secured.

- Secure the KTM PowerPack with tension belts or other suitable fixing materials.
- To ensure rapid access in the event of an emergency, always transport the KTM PowerPack close to the cargo door.
- Transport the KTM PowerPack separately from flammable liquids or ignition sources such as fuel, gas, or oil.
- Keep suitable fire extinguishers ready.

11.1 Additional information

Any further work that results from the required work or from the recommended work must be ordered separately and can be invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule can always be found on KTM Dealer.net. Your authorized KTM dealer will be happy to advise you.

11.2 Required work

	Every 80 operating hours	Every 50 operating hours	Every 20 operating hours when used for motorsports	Once after 1 operating hour
Read out the fault memory using the KTM diagnostics tool. 🛠️	○	●	●	●
Check that the electrical system is functioning properly. 🛠️	○	●	●	
Check and charge the 12 V battery. 🛠️		●	●	
Check and charge the KTM PowerPack. 🛠️	○	●	●	
Check the front brake linings. (📖 p. 82)		●	●	
Check the rear brake linings. (📖 p. 88)		●	●	
Check the brake discs. (📖 p. 79)		●	●	
Check the brake lines for damage and leakage. 🛠️		●	●	
Check the frame. 🛠️ (📖 p. 77)		●	●	
Check the link fork. 🛠️ (📖 p. 77)		●	●	
Check the heim joint for play. 🛠️		●	●	
Check the tire condition. (📖 p. 95)	○	●	●	
Check tire pressure. (📖 p. 95)	○	●	●	
Check the wheel bearing for play. 🛠️		●	●	
Check the wheel hubs. 🛠️		●	●	
Check the rim run-out. 🛠️	○	●	●	
Check the spoke tension. (📖 p. 96)	○	●	●	
Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 75)		●	●	
Check the chain tension. (📖 p. 73)	○	●	●	
Grease all moving parts (e.g. side stand, hand lever, chain, etc.) and check for smooth operation. 🛠️	○	●	●	
Check the front brake fluid level. (📖 p. 80)		●	●	
Check the rear brake fluid level. (📖 p. 86)		●	●	
Check the travel of the brake levers. 🛠️		●	●	
Check steering head bearing play. 🛠️ (📖 p. 64)	○	●	●	
Check all hoses and bellows for cracking, leakage and incorrect routing. 🛠️	○	●	●	
Check the antifreeze and coolant level. (📖 p. 117)	○	●	●	
Check the cables for damage and for routing without kinks. 🛠️		●	●	
Service the fork. 🛠️				●
Perform the shock absorber service. 🛠️				●
Check the battery discharge plug form ring. (📖 p. 71)	○	●	●	
Check the screws and nuts for tightness. 🛠️	○	●	●	
Check the screw connection on the KTM PowerPack for the specified tightening torque. 🛠️	○	●	●	

11 SERVICE SCHEDULE

	Every 80 operating hours	Every 50 operating hours	Every 20 operating hours when used for motorsports	Once after 1 operating hour
Check the headlight setting. (🔧 p. 105)	○	●	●	
Final check: Check the vehicle is roadworthy and take a test ride. 🛞	○	●	●	
Read out the error memory after the test ride using the KTM diagnostics tool. 🛞	○	●	●	
Make the service entry in KTM Dealer.net and in the Service & Manufacturer Warranty Booklet. 🛞	○	●	●	●

- One-time interval
- Periodic interval

11.3 Recommended work


	Every 20 operating hours when used for motorsports	Annually	Every 100 operating hours	Every 50 operating hours	Once after 40 operating hours	Once after 20 operating hours
Change the front brake fluid. 🛞		●				
Change the rear brake fluid. 🛞		●				
Grease the steering head bearing. 🛞 (🔧 p. 66)		●				
Change the battery discharge plug form ring. 🛞			●	●		●
Service the fork. 🛞	○					
Perform the shock absorber service. 🛞			○			
Check the fork bearing for play. 🛞			●	●		●
Change the gear oil. 🛞 (🔧 p. 122)			●	●		●
Change all motor bearings, shaft seal rings and bearing seals. 🛞				●		

- One-time interval
- Periodic interval

12.1 Checking the basic chassis setting with the rider's weight

i Info

When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

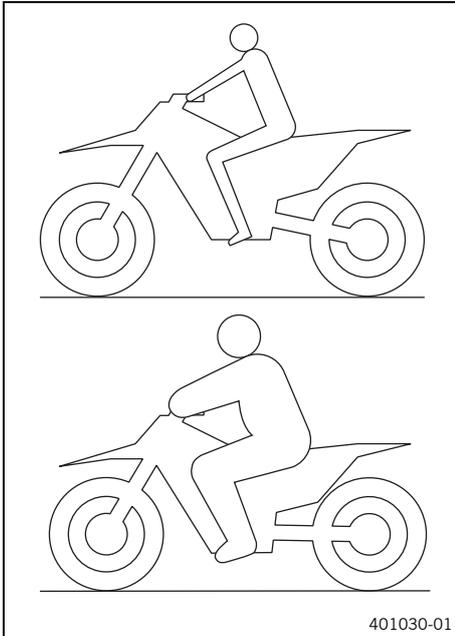

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, link fork and frame, the basic settings of the suspension components must match the rider's weight.
- As delivered, KTM offroad motorcycles are adjusted for a rider's weight (with full protective clothing).

Guideline

Standard rider weight	75 ... 85 kg (165 ... 187 lb.)
-----------------------	--------------------------------

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Small weight differences can be compensated by adjusting the spring preload, but in the case of large weight differences, the springs must be replaced.

12.2 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed setting, for example, has an effect on the landing after a jump: the rear wheel suspension compresses quickly.

The low-speed setting, for example, has an effect when riding over long ground swells: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is gradual. Thus, modifications in the high-speed range affect the compression damping in the low-speed range and vice versa.

12.3 Adjusting the low-speed compression damping of the shock absorber



Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.


- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)

i Info

The low-speed setting takes effect during slow to normal compression of the shock absorber.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)

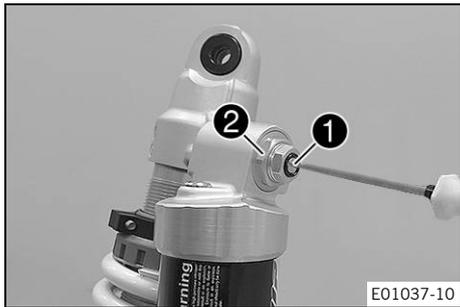

- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)
- Remove the shock absorber. 🛠️ (📖 p. 68)

Main work

- Turn adjusting screw **1** clockwise with a screwdriver as far as the last perceptible click.



Info

Do not loosen fitting **2**!

- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

Low-speed compression damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks



Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

Finishing work

- Install the shock absorber. 🛠️ (📖 p. 68)
- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

12.4 Adjusting the high-speed compression damping of the shock absorber 🛠️



Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)




Info

The high-speed setting takes effect during fast compression of the shock absorber.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)
- Remove the shock absorber. 🛠️ (📖 p. 68)

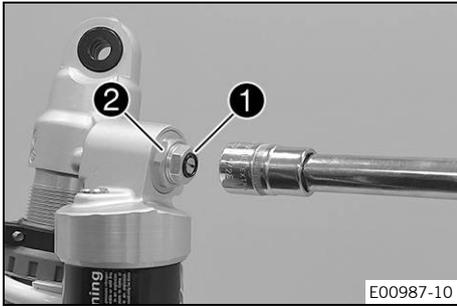

Main work

- Turn adjusting screw **1** all the way clockwise with a socket wrench.

i Info
Do not loosen fitting **2**!

- Turn counterclockwise by the number of turns corresponding to the shock absorber type.

Guideline

High-speed compression damping	
Comfort	2 turns
Standard	2 turns
Sport	1.5 turns

i Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.

Finishing work

- Install the shock absorber. (📖 p. 68)
- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



12.5 Adjusting the rebound damping of the shock absorber



Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

Main work

- Turn adjusting screw **1** clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

Rebound damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks



i Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping during rebound of the shock absorber.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)


12.6 Measuring the rear wheel dimension unloaded

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

Main work


- Measure the distance – as vertical as possible – between the rear axle and another fixed point, for example, a marking on the rear fairing.
- Note down the value as dimension **A**.

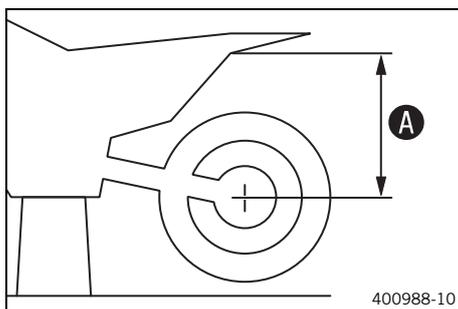

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

12.7 Checking the static sag of the shock absorber

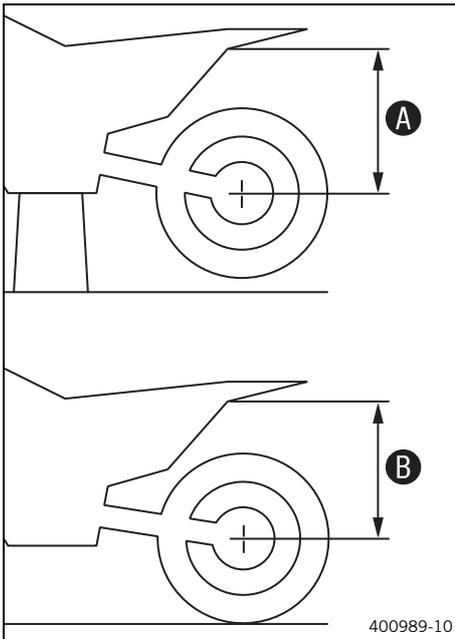

- Measure dimension **A** of rear wheel unloaded. (📖 p. 50)
- Hold the motorcycle upright with the aid of an assistant.
- Measure the distance between the rear axle and the fixed point again.
- Note down the value as dimension **B**.


i Info
The static sag is the difference between measurements **A** and **B**.

- Check the static sag.

Static sag	30 mm (1.18 in)
------------	-----------------

- » If the static sag is less or more than the specified value:
 - Adjust the spring preload of the shock absorber. 🛠️ (📖 p. 52)

12.8 Checking the riding sag of the shock absorber

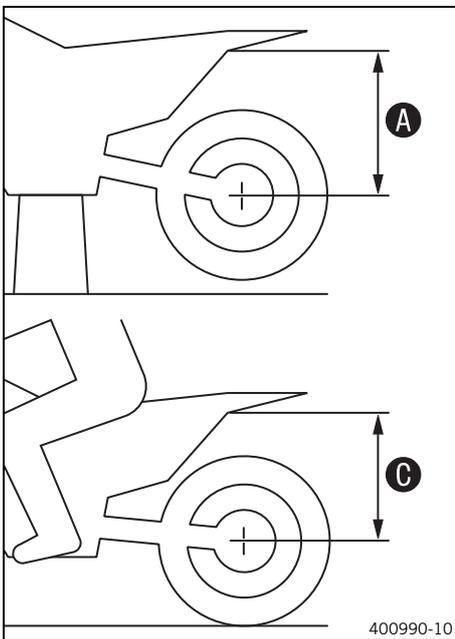

- Measure dimension **A** of rear wheel unloaded. (📖 p. 50)
- With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal sitting position (feet on footrests) and bounces up and down a few times.
 - ✓ The rear wheel suspension levels out.
- Another person now measures the distance between the rear axle and the fixed point.
- Note down the value as dimension **C**.

i Info
The riding sag is the difference between measurements **A** and **C**.

- Check the riding sag.

Riding sag	90 mm (3.54 in)
------------	-----------------

- » If the riding sag differs from the specified measurement:
 - Adjust the riding sag. 🛠️ (📖 p. 53)

12.9 Adjusting the spring preload of the shock absorber



Caution


Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)



Info

Before changing the spring preload, make a note of the present setting, e.g., by measuring the spring length.

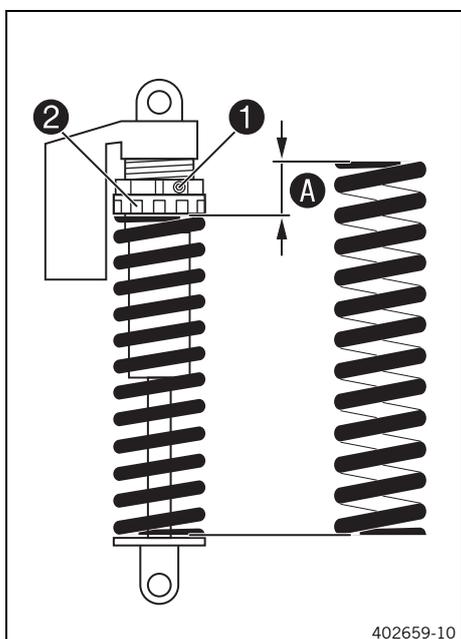

Preparatory work

- Deactivate the vehicle. (p. 43)
- Fold the seat up. (p. 69)
- Remove the KTM PowerPack. (p. 107)
- Mount the protection cap. (p. 71)
- Raise the motorcycle with a lift stand. (p. 57)
- Remove the shock absorber. (p. 68)
- After removing the shock absorber, clean it thoroughly.

Main work

- Loosen screw 1.
- Turn adjusting ring 2 until the spring is no longer under tension.

Hook wrench (90129051000)

- Measure the overall spring length while the spring is not under tension.
- Tighten the spring by turning adjusting ring 2 to specified measurement A.

Guideline

Spring preload	8 mm (0.31 in)
----------------	----------------



Info

Depending on the static sag and/or the riding sag, it may be necessary to increase or decrease the spring preload.

- Tighten screw 1.

Guideline

Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)
--------------------------------------	----	-------------------

Finishing work

- Install the shock absorber. (p. 68)
- Remove the motorcycle from the lift stand. (p. 57)
- Install the KTM PowerPack. (p. 108)
- Lock the seat. (p. 69)

12.10 Adjusting the riding sag 🛠️

Preparatory work


- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)
- Remove the shock absorber. 🛠️ (📖 p. 68)
- After removing the shock absorber, clean it thoroughly.

Main work

- Choose and mount a suitable spring.

Guideline

Spring rate	
Weight of rider: 65 ... 75 kg (143 ... 165 lb.)	66 N/mm (377 lb/in)
Weight of rider: 75 ... 85 kg (165 ... 187 lb.)	68 N/mm (388 lb/in)
Weight of rider: 85 ... 95 kg (187 ... 209 lb.)	69 N/mm (394 lb/in)

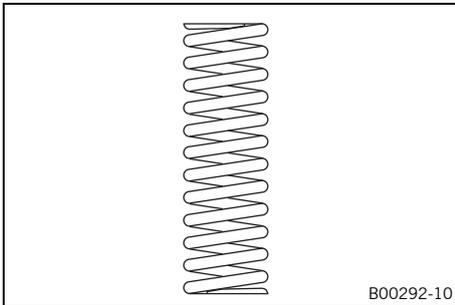

i Info

The spring rate is shown on the outside of the spring. Smaller weight differences can be compensated by changing the spring preload.


Finishing work

- Install the shock absorber. 🛠️ (📖 p. 68)
- Remove the motorcycle from the lift stand. (📖 p. 57)
- Check the static sag of the shock absorber. (📖 p. 51)
- Check the riding sag of the shock absorber. (📖 p. 51)
- Adjust the rebound damping of the shock absorber. (📖 p. 49)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

12.11 Checking the basic setting of the fork

i Info

For various reasons, no exact riding sag can be determined for the fork.

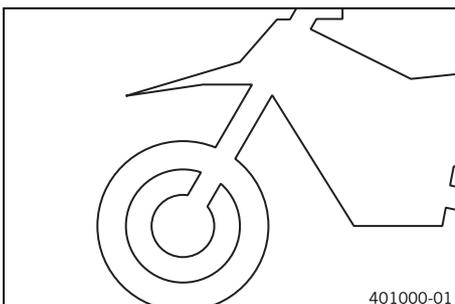


- As with the shock absorber, smaller differences in the rider's weight can be compensated by the spring preload.
- However, if the fork is often overloaded (hard end stop on compression), harder springs must be fit to avoid damage to the fork and frame.

12.12 Adjusting the compression damping of the fork

i Info

The hydraulic compression damping determines the fork suspension behavior.

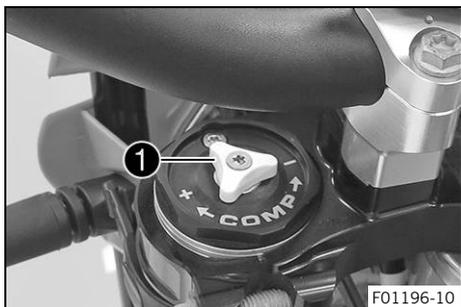

- Turn white adjusting screw ① clockwise as far as it will go.

i Info

Adjusting screw ① is located at the upper end of the left fork leg. The compression damping is located in left fork leg **COMP** (white adjusting screw). The rebound damping is located in right fork leg **REB** (red adjusting screw).

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Compression damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks


i Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

12.13 Adjusting the rebound damping of the fork

i Info

The hydraulic rebound damping determines the fork suspension behavior.

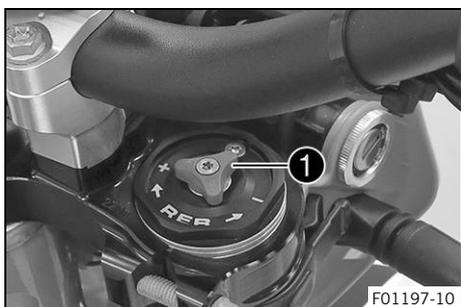

- Turn red adjusting screw ① clockwise as far as it will go.

i Info

Adjusting screw ① is located at the upper end of the right fork leg. The rebound damping is located in right fork leg **REB** (red adjusting screw). The compression damping is located in left fork leg **COMP** (white adjusting screw).


- Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Rebound damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks

i Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.

12.14 Handlebar position

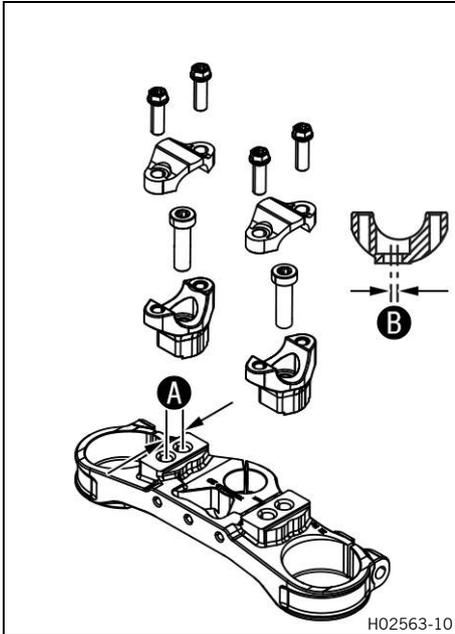

On the upper triple clamp, there are two holes at a distance of **A** to each other.

Hole distance A	15 mm (0.59 in)
------------------------	-----------------

The holes on the handlebar supports are placed at a distance of **B** from the center.

Hole distance B	3.5 mm (0.138 in)
------------------------	-------------------

The handlebar supports can be mounted in four different positions.

12.15 Adjusting the handlebar position



Warning


Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

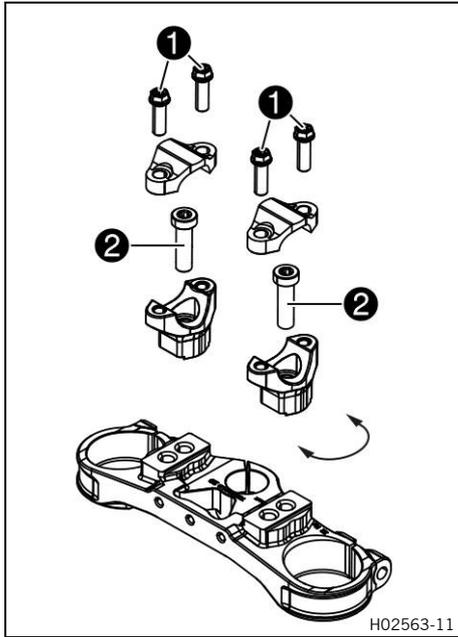

Main work

- Remove screws **1**. Take off the handlebar clamps.
- Take off the handlebar and hang to the side.



Info

Cover the components to protect them against damage. Do not kink the cables and lines.

- Remove screws **2**. Take off the handlebar supports.
- Place the handlebar supports in the required position. Mount and tighten screws **2**.

Guideline

Screw, handlebar support	M10	40 Nm (29.5 lbf ft) Loctite®243™
--------------------------	-----	--



Info

Position the left and right handlebar supports evenly.

- Position the handlebar.



Info

Make sure the cables and wiring are positioned correctly.

- Position the handlebar clamps. Mount screws **1** and tighten evenly.

Guideline

Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
------------------------	----	---------------------



Info

Make sure the gap widths are even.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.1 Raising the motorcycle with a lift stand


Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

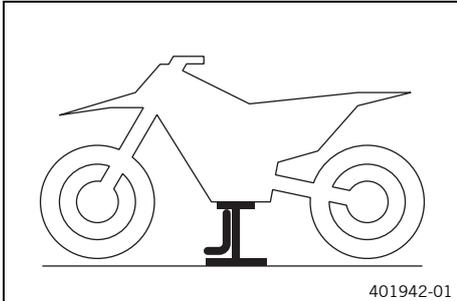

Main work

- Use the motor guard underneath the motor to raise the vehicle.

Lift stand (78129955100)

- ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.




13.2 Removing the motorcycle from the lift stand

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

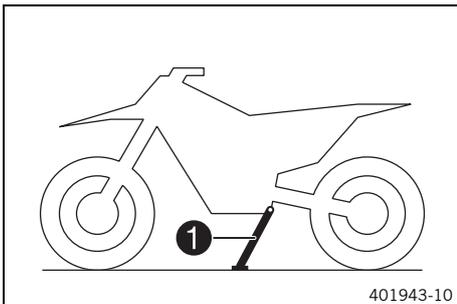

Main work

- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, press side stand ① to the ground with your foot and lean the motorcycle on it.

Info

When you are riding, the side stand must be folded up and secured with the rubber strap.

Finishing work


- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



13.3 Bleeding the fork legs

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

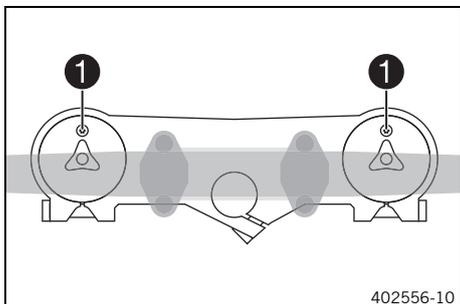

Main work

- Release bleeder screws ❶.
- ✓ Any excess pressure escapes from the interior of the fork.
- Tighten the bleeder screws.

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.4 Removing the fork protector

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)



Main work

- Remove screws ❶. Take off the clamp.
- Remove screws ❷ on the left fork leg. Take off the fork protector.



- Remove screws ❸ on the right fork leg. Take off the fork protector.

13.5 Installing the fork protector



Main work

- Position the fork protector on the right fork leg. Mount and tighten screws ①.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------



- Position the fork protector on the left fork leg. Mount and tighten screws ②.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Position the brake line, wiring harness, and clamp. Mount and tighten screws ③.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



13.6 Cleaning the dust boots of the fork legs

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)
- Remove the fork protector. (📖 p. 58)

Main work

- Push dust boots ① of both fork legs downward.



Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind the dust boots can start to leak.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and inner fork tubes of both fork legs.

Universal oil spray (📖 p. 139)

- Press the dust boots back into their normal position.
- Remove excess oil.

Finishing work

- Install the fork protector. (📖 p. 59)
- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



13.7 Removing the fork legs 🛠️

Preparatory work


- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)
- Remove the front wheel. 🛠️ (📖 p. 91)
- Remove the headlight mask with the headlight. (📖 p. 101)

Main work

- Remove screws ❶ and take off the clamp.
- Remove the cable tie(s) and detach plug-in connector.
- Remove screws ❷ with the spacers and take off the brake caliper.
- Allow the brake caliper and brake line to hang loosely to the side.
- Loosen screws ❸. Take out the left fork leg.
- Loosen screws ❹. Take out the right fork leg.

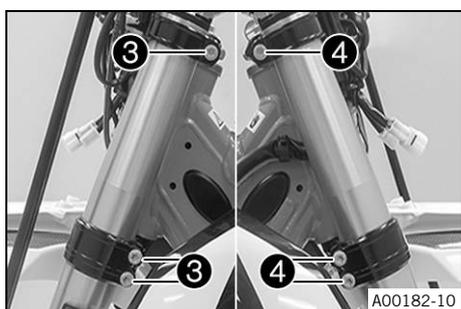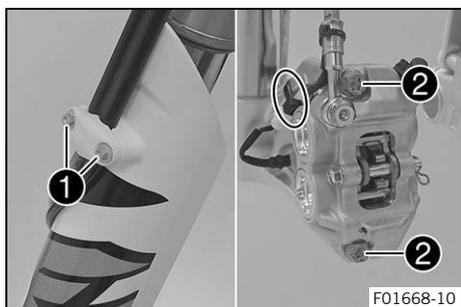

13.8 Installing the fork legs

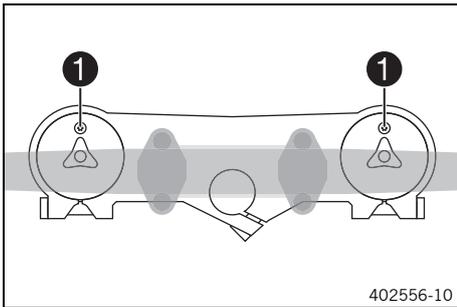


Main work

- Position the fork legs.
- ✓ Bleeder screws **1** are positioned toward the front.



Info

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

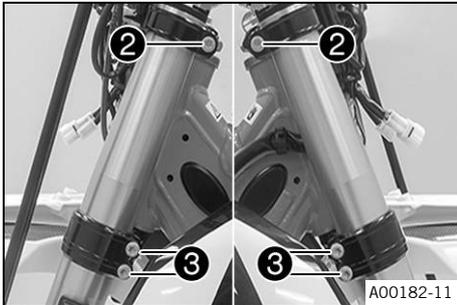

- Tighten screws **2**.


Guideline

Screw, top triple clamp	M8	22 Nm (16.2 lbf ft)
-------------------------	----	---------------------

- Tighten screws **3**.

Guideline

Screw, bottom triple clamp	M8	18 Nm (13.3 lbf ft)
----------------------------	----	---------------------

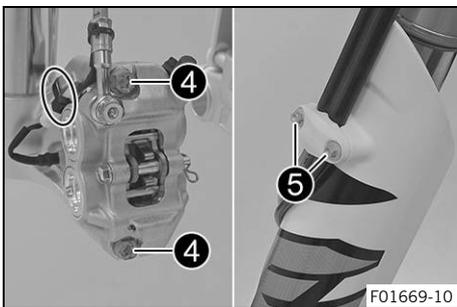

- Position the brake caliper. Mount and tighten screws **4** with the spacers.

Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
----------------------------	----	--

- Position the brake line, wiring harness, and clamp. Mount and tighten screws **5**.
- Connect plug-in connector and mount the cable tie(s).


Finishing work

- Install the front wheel. (📖 p. 91)
- Install the headlight mask with the headlight. (📖 p. 102)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Check the headlight setting. (📖 p. 105)

13.9 Removing the lower triple clamp

Preparatory work


- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)
- Remove the front wheel. (📖 p. 91)
- Remove the headlight mask with the headlight. (📖 p. 101)
- Remove front fender. (📖 p. 66)
- Remove the fork legs. (📖 p. 60)

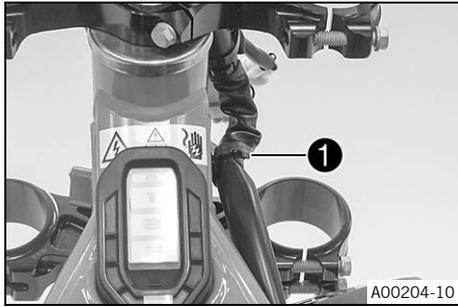

A00204-10

Main work

- Open holder **1** and detach the wiring harness and brake line.

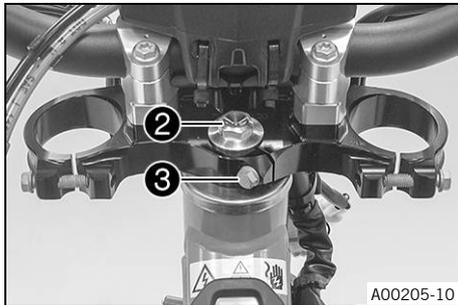


A00205-10

- Remove screw **2**.
- Remove screw **3**.
- Take off the upper triple clamp with the handlebar and set it aside.



Info


Cover the components to protect them against damage. Do not kink the cables and lines.

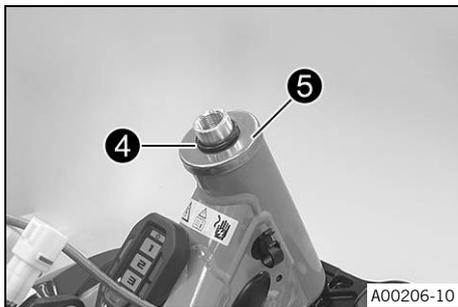

A00206-10

- Remove O-ring **4** and protective ring **5**.
- Take off the lower triple clamp with the steering stem.
- Remove the upper steering head bearing.

13.10 Installing the lower triple clamp

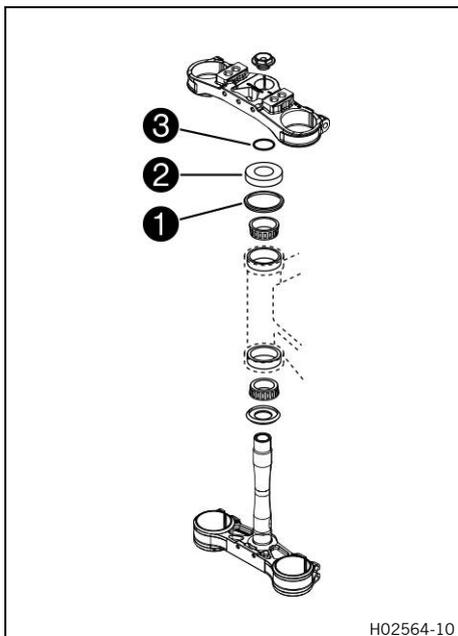


H02564-10

Main work

- Clean the bearing and sealing elements, check for damage, and grease.
- High viscosity grease (📖 p. 139)
- Insert the lower triple clamp with the steering stem. Mount the upper steering head bearing.
 - Check whether upper steering head seal **1** is correctly positioned.
 - Push protective ring **2** and O-ring **3** onto the steering stem.



- Position the upper triple clamp with the handlebar.
- Mount screw 4 but do not tighten yet.
- Position the rear wheel brake line and wiring harness.

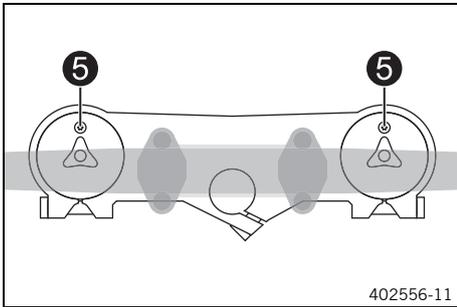


- Position the fork legs.
- ✓ Bleeder screws 5 face forwards.



Info


The rebound damping is located in right fork leg **REB** (red adjusting screw). The compression damping is located in left fork leg **COM** (white adjusting screw). Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

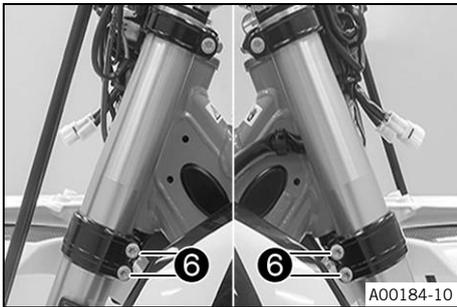

- Tighten screws 6.

Guideline


Screw, bottom triple clamp	M8	18 Nm (13.3 lbf ft)
----------------------------	----	---------------------

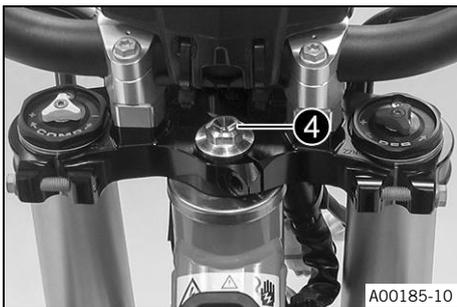

- Tighten screw 4.

Guideline


Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

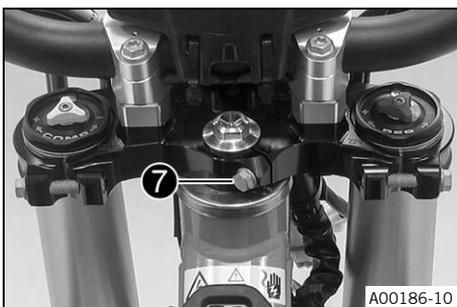

- Mount and tighten screw 7.

Guideline

Screw, top steering stem	M8	17 Nm (12.5 lbf ft) Loctite®243™
--------------------------	----	--

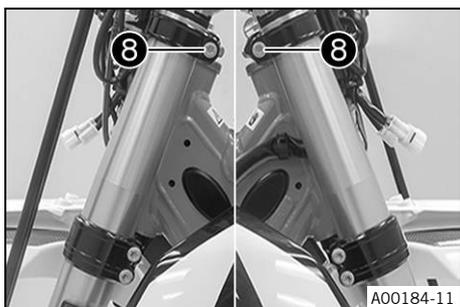


- Tighten screws 8.

Guideline

Screw, top triple clamp	M8	22 Nm (16.2 lbf ft)
-------------------------	----	---------------------



- Attach the brake line and wiring harness. Close holder 9.

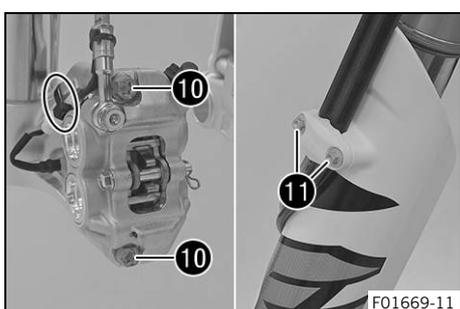

- Position the brake caliper. Mount and tighten screws 10 with the spacers.

Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
----------------------------	----	--

- Position the brake line, wiring harness, and clamp. Mount and tighten screws 11.
- Connect plug-in connector and mount the cable tie(s).

Finishing work

- Install front fender. (📖 p. 67)
- Install the headlight mask with the headlight. (📖 p. 102)
- Install the front wheel. 🛠️ (📖 p. 91)
- Check that the cable and brake lines are routed correctly.
- Check steering head bearing play. 🛠️ (📖 p. 64)
- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Check the headlight setting. (📖 p. 105)

13.11 Checking steering head bearing play 🛠️




Warning

Danger of accidents Incorrect steering head bearing play impairs the handling characteristic and damages components.

- Correct incorrect steering head bearing play immediately. (Your authorized KTM workshop will be glad to help.)

i Info

If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged over time.

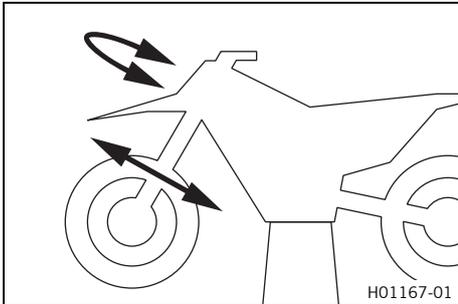

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

Main work

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

- » If there is detectable play:
 - Adjust steering head bearing play. 🛠️ (📖 p. 65)
- Move the handlebar to and fro over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

- » If detent positions are detected:
 - Adjust steering head bearing play. 🛠️ (📖 p. 65)
- » If detent positions can still be detected:
 - Change the steering head bearing. 🛠️


Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.12 Adjusting steering head bearing play 🛠️

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

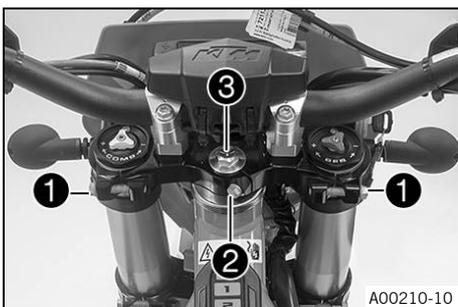

Main work

- Loosen screws ❶. Remove screw ❷.
- Loosen and retighten screw ❸.

Guideline

Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws ❶.

13 SERVICE WORK ON THE CHASSIS

Guideline

Screw, top triple clamp	M8	22 Nm (16.2 lbf ft)
-------------------------	----	---------------------

- Mount and tighten screw ②.


Guideline

Screw, top steering stem	M8	17 Nm (12.5 lbf ft) Loctite®243™
--------------------------	----	--

Finishing work

- Check steering head bearing play. 🛠️ (📖 p. 64)
- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.13 Greasing the steering head bearing 🛠️

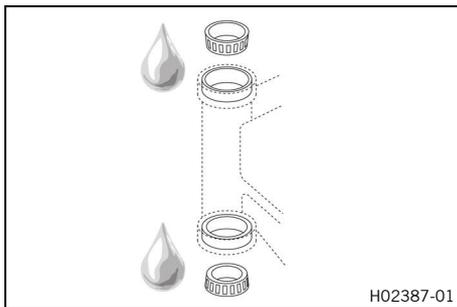


- Remove the lower triple clamp. 🛠️ (📖 p. 61)
- Install the lower triple clamp. 🛠️ (📖 p. 62)

13.14 Removing front fender

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Remove the headlight mask with the headlight. (📖 p. 101)

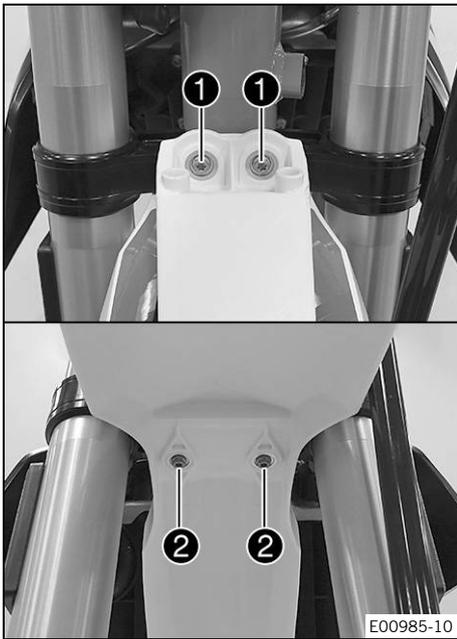


Main work

- Remove screws ①.
- Remove screws ②.
- Take off the front fender.



13.15 Installing front fender

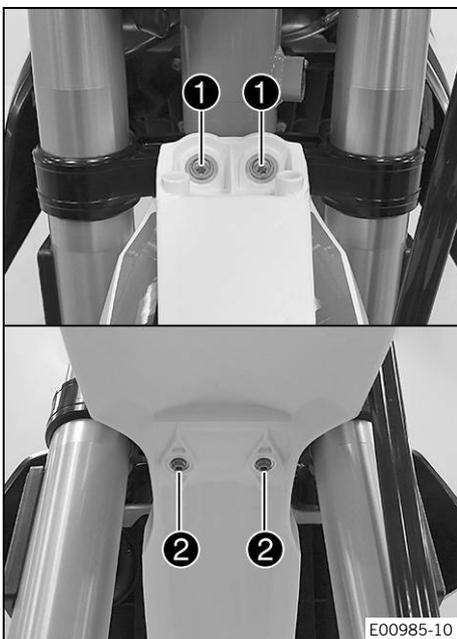

Main work

- Position front fender. Mount and tighten screws ①.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
------------------------------	----	--------------------

- Mount and tighten screws ②.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
------------------------------	----	--------------------

Finishing work


- Install the headlight mask with the headlight. (📖 p. 102)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Check the headlight setting. (📖 p. 105)



13.16 Removing the shock absorber

Preparatory work


- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

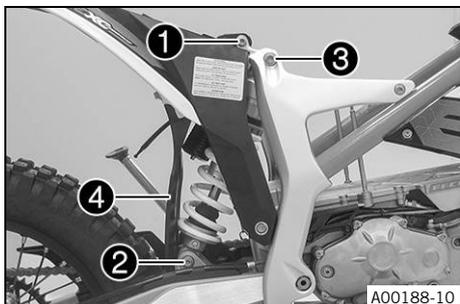

Main work

- Remove screw 1.
- Remove screw 2 and lower the rear wheel with the link fork as far as possible without blocking the rear wheel. Secure the rear wheel in this position.
- Remove screw 3.
- Push splash protector 4 to the side and remove the shock absorber.

13.17 Installing the shock absorber

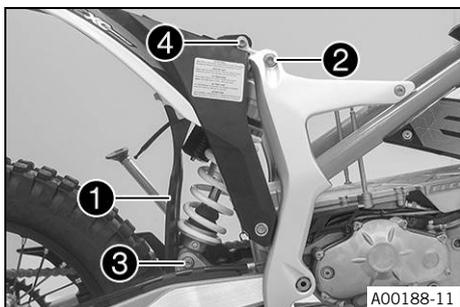

Main work

- Push splash protector 1 to the side and position the shock absorber.
- Mount and tighten screw 2.

Guideline

Screw, top shock absorber	M12	80 Nm (59 lbf ft) Loctite®2701™
---------------------------	-----	---

- Mount and tighten screw 3.

Guideline

Screw, bottom shock absorber	M12	80 Nm (59 lbf ft) Loctite®2701™
------------------------------	-----	---

Info

The heim joint for the shock absorber on the link fork is Teflon coated. It must not be lubricated with grease, nor with any other lubricants. Lubricants dissolve the Teflon coating, thereby drastically reducing the service life.

- Mount and tighten screw 4.


Guideline

Screw, sub-frame top	M10	45 Nm (33.2 lbf ft) Loctite®243™
----------------------	-----	--

Finishing work


- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.18 Folding the seat up

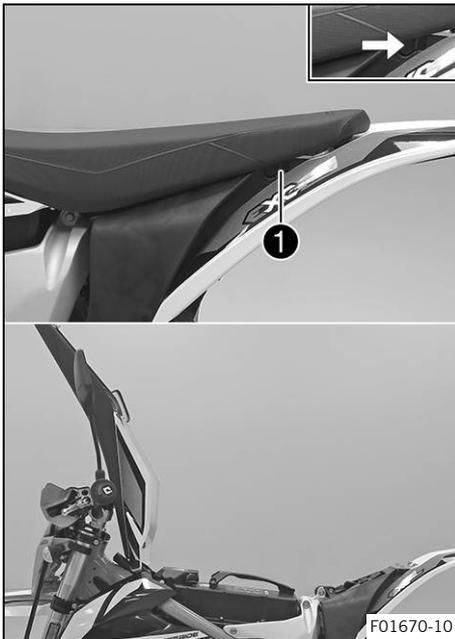

- Push the release lever ❶ in the direction of the arrow.
- Lift the seat and fold it up.

13.19 Locking the seat

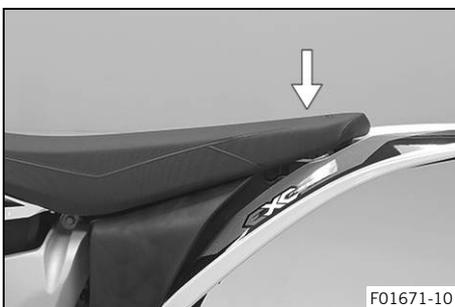

- Fold down the seat and push it down.
- ✓ The seat engages with an audible click.
- Finally, check that the seat is correctly locked.

13.20 Removing the spoiler


Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

Main work


- Remove screws ❶.



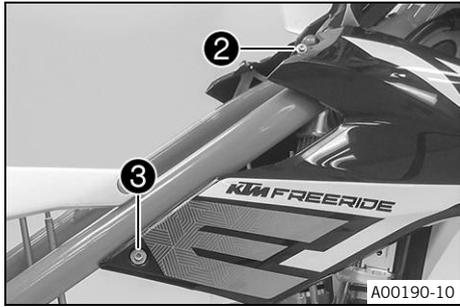


- Remove screw ②.
- Remove screw ③.
- Take off the spoiler.
- Repeat the operation on the opposite side.

13.21 Installing the spoiler

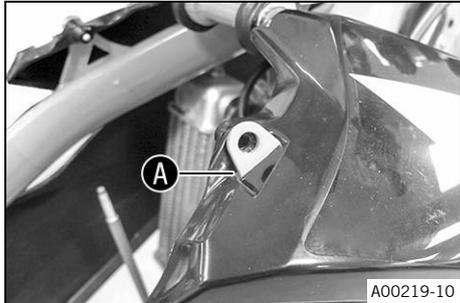

Main work

- Position the spoiler and hook it in at area A.

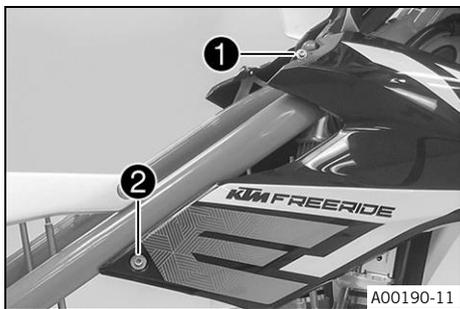

- Mount and tighten screw ①.


Guideline

Screw for spoiler, top	EJOT PT® K60x20AL	3 Nm (2.2 lbf ft)
------------------------	-----------------------------	-------------------

- Mount and tighten screw ②.

Guideline

Screw for spoiler attachment	M6	5 Nm (3.7 lbf ft)
------------------------------	----	-------------------

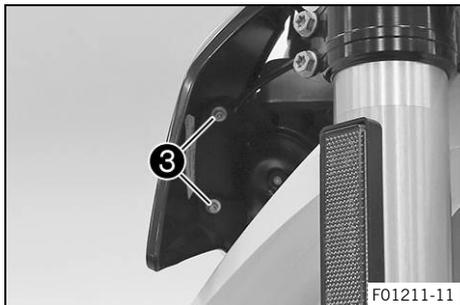

- Mount and tighten screws ③.

Guideline

Screw, front spoiler	EJOT PT® K60x30-Z	3 Nm (2.2 lbf ft)
----------------------	-----------------------------	-------------------

- Repeat these steps on the opposite side.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.22 Mounting the protection cap

Note

Material damage Components damaged or destroyed by water or dirt.


- Mount the protection cap after you have removed the KTM PowerPack.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)

Main work

- Check the battery discharge plug form ring. (📖 p. 71)
- Mount protection cap ❶ with one hand.

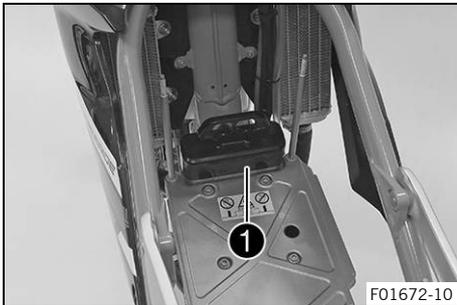

13.23 Removing the protection cap


Note

Material damage Components damaged or destroyed by water or dirt.

- Mount the protection cap after you have removed the KTM PowerPack.

Main work

- Remove protection cap ❶ with one hand.

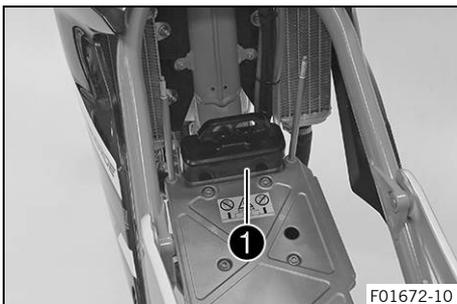

Finishing work


- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.24 Checking the battery discharge plug form ring

Condition


The KTM PowerPack has been removed.

The protection cap has been removed.

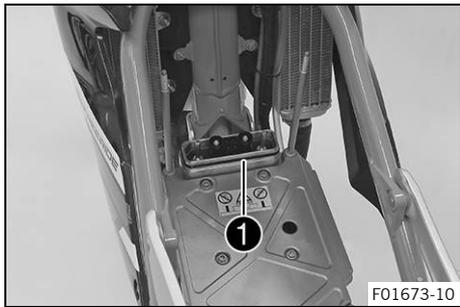

- Check battery discharge plug form ring ❶ on the electric motor.
 - » If the battery discharge plug form ring is dirty:
 - Ascertain that the discharge plug is de-energized. 🗑️
 - Clean the form ring without using water or compressed air.
 - Cover the contacts and spray silicone spray onto the form ring.
 - » If the battery discharge plug form ring is damaged:
 - Change the battery discharge plug form ring. 🗑️

13.25 Checking for chain dirt accumulation

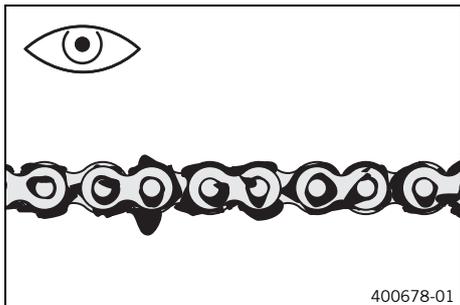

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain. (📖 p. 72)

13.26 Cleaning the chain



Warning

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.




Info

The service life of the chain depends largely on its maintenance.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

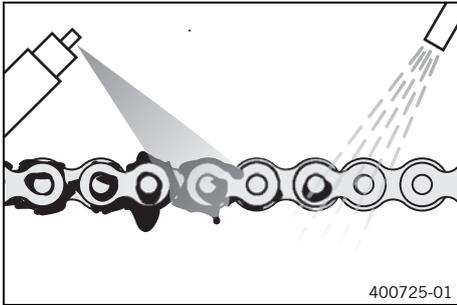

Main work

- Rinse off loose dirt with a soft jet of water.
- Remove old grease residue with chain cleaner.

Chain cleaner (📖 p. 139)

- After drying, apply chain spray.

Off-road chain spray (📖 p. 139)

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.27 Checking the chain tension



Warning

Danger of accidents Danger caused by incorrect chain tension.


- If the chain is too taut, the components of the secondary power transmission (chain, chain pinion, rear sprocket, bearings in the transmission and in the rear wheel) will be under additional load. In addition to premature wear, this can cause the chain or the countershaft of the transmission to break in extreme cases. If the chain is too loose, however, it may fall off the chain pinion or rear sprocket and block the rear wheel or damage the motor. Ensure that the chain tension is correct and adjust it if necessary.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

Main work

- Pull the chain at the end of the chain sliding piece upward to measure chain tension **A**.

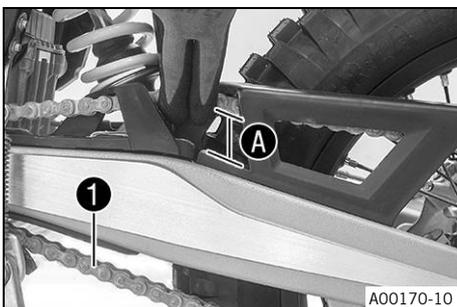

Info

Lower chain section **1** must be taut. Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension	36 ... 40 mm (1.42 ... 1.57 in)
---------------	---------------------------------

- » If the chain tension does not meet the specification:
 - Adjust the chain tension. 🛠️ (📖 p. 74)

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.28 Adjusting the chain tension



Warning

Danger of accidents Danger caused by incorrect chain tension.

- If the chain is too taut, the components of the secondary power transmission (chain, chain pinion, rear sprocket, bearings in the transmission and in the rear wheel) will be under additional load. In addition to premature wear, this can cause the chain or the countershaft of the transmission to break in extreme cases. If the chain is too loose, however, it may fall off the chain pinion or rear sprocket and block the rear wheel or damage the motor. Ensure that the chain tension is correct and adjust it if necessary.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)
- Check the chain tension. (📖 p. 73)

Main work

- Loosen nut ①.
- Loosen nuts ②.
- Adjust the chain tension by turning adjusting screws ③ left and right.

Guideline

Chain tension	36 ... 40 mm (1.42 ... 1.57 in)
Turn adjusting screws ③ on the left and right so that the markings on the left and right chain adjusters are in the same position relative to reference marks A. The rear wheel is then correctly aligned.	

- Tighten nuts ②.
- Make sure that chain adjusters ④ are fitted correctly on adjusting screws ③.
- Tighten nut ①.

Guideline

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------




Info

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.

Chain adjusters ④ can be turned by 180°.

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

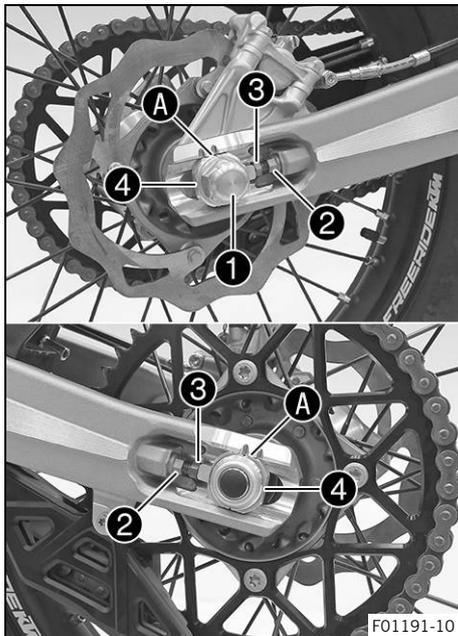

F01191-10


13.29 Checking the chain, rear sprocket, engine sprocket, and chain guide

Preparatory work


- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

Main work

- Check the chain, rear sprocket and engine sprocket for wear.
 - » If the chain, rear sprocket or engine sprocket is worn:
 - Change the drivetrain kit. 🛠️

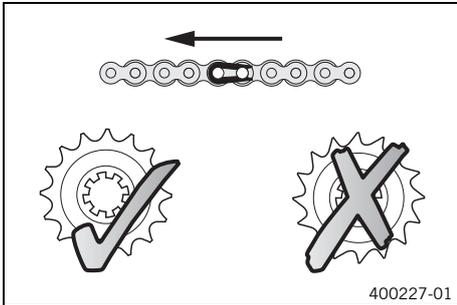

i Info
The engine sprocket, rear sprocket and chain should always be replaced together.

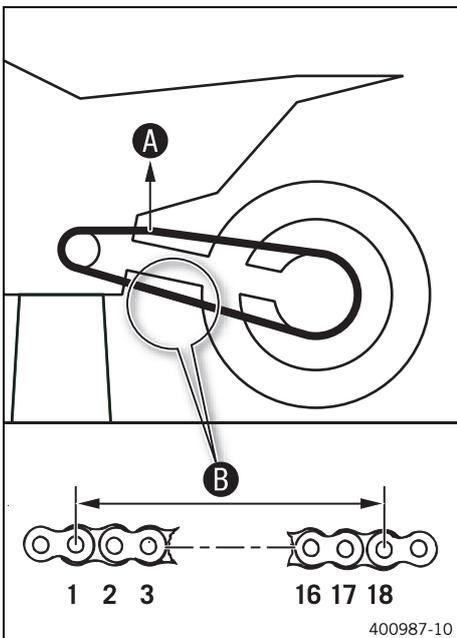

- Pull on the top section of the chain with the specified weight **A**.

Guideline

Weight, chain wear measurement	10 ... 15 kg (22 ... 33 lb.)
--------------------------------	------------------------------


- Measure distance **B** of 18 chain rollers in the lower chain section.

i Info
Chain wear is not always even, so you should repeat this measurement at different chain positions.

Maximum distance B from 18 chain rollers at the longest chain section	272 mm (10.71 in)
--	-------------------

- » If distance **B** is greater than the specified measurement:
 - Change the drivetrain kit. 🛠️

i Info
The engine sprocket, rear sprocket and chain should always be replaced together.

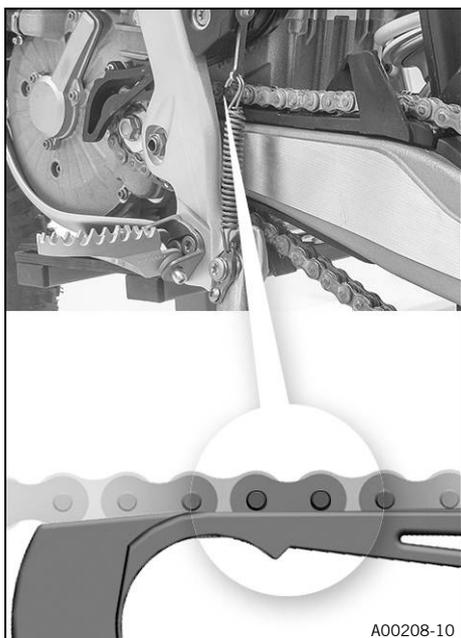

- Check the chain sliding guard for wear.
 - » If the lower edge of the chain pins is in line with, or below, the chain sliding guard:
 - Change the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly seated.
 - » If the chain sliding guard is loose:
 - Tighten the screws on the chain sliding guard.

Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	-----------------------



- Check the chain sliding piece for wear.
 - » If the lower edge of the chain pins is in line with or below the chain sliding piece:
 - Change the chain sliding piece. 🛠️
- Check that the chain sliding piece is firmly seated.
 - » If the chain sliding piece is loose:
 - Tighten the screw on the chain sliding piece.

Guideline

Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)
----------------------------	----	------------------------

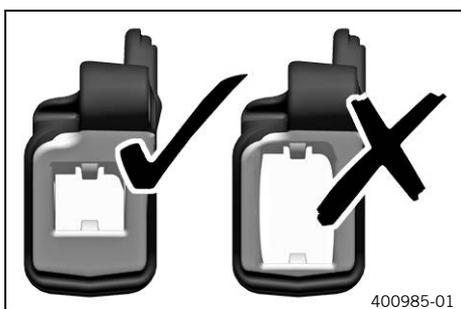

- Check the chain guide for wear.



Info

Wear can be seen on the front of the chain guide.

- » If the light part of the chain guide is worn:
 - Change the chain guide. 🛠️



- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the fitting on the chain guide.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)

Finishing work


- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



13.30 Checking the frame 🛠️

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

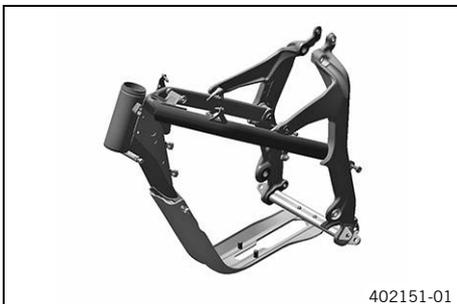

Main work

- Check the frame for cracking and deformation.
 - » If the frame exhibits cracking or deformation due to a mechanical impact:
 - Change the frame. 🛠️



Info

A frame that has been damaged due to a mechanical impact must be replaced. Repair of the frame is not authorized by KTM.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



13.31 Checking the link fork 🛠️

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)



Main work


- Check the link fork for damage, cracking, and deformation.
 - » If the link fork exhibits damage, cracking, or deformation:
 - Change the link fork. ↩

i Info
A damaged link fork must always be replaced. Repairing the link fork is not authorized by KTM.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

13.32 Checking the rubber grip

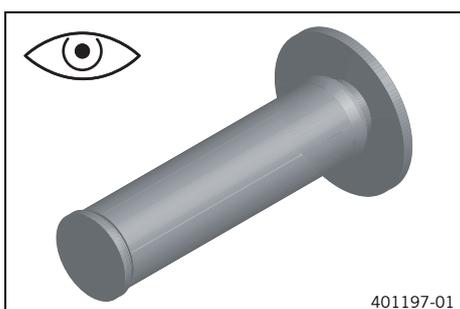

- Check the rubber grips on the handlebar for damage, wear, and looseness.


i Info
The rubber grips are vulcanized onto a sleeve on the left and onto the handle tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar. The rubber grip can only be replaced with the sleeve or the throttle tube.

- » If a rubber grip is damaged, worn, or loose:
 - Change the rubber grip.
- Check that screw **1** is firmly seated.

Guideline

Screw, fixed grip	M4	5 Nm (3.7 lbf ft) Loctite®243™
-------------------	----	--

Diamond **A** must be located at the top.

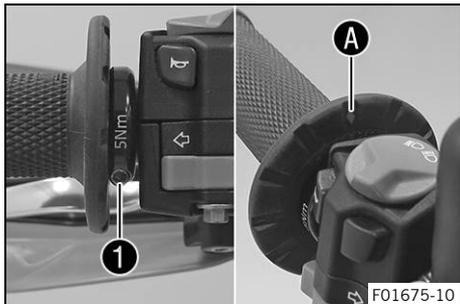

14.1 Checking the free travel of the front brake lever




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the front brake lever, pressure builds up in the brake system on the front brake.

- Set the free travel on the front brake lever in accordance with the specification.

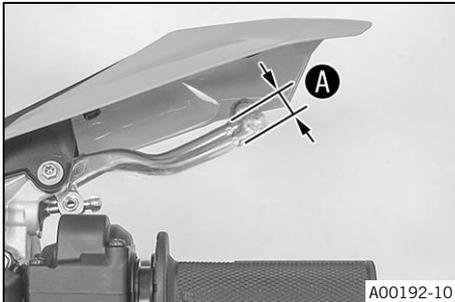


- Push the front brake lever to the handlebar and check free travel **A**.

Free travel of the front brake lever	$\geq 3 \text{ mm } (\geq 0.12 \text{ in})$
--------------------------------------	---

- » If the free travel does not match the specification:
 - Adjust the free travel of the front brake lever. (p. 79)

14.2 Adjusting the free travel of the front brake lever

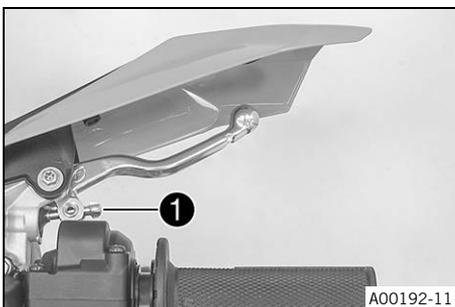

- Adjust the free travel of the front brake lever using adjusting screw **1**.



Info

Turn the adjusting screw clockwise to reduce free travel. The pressure point moves away from the handlebar.

Turn the adjusting screw counterclockwise to increase free travel. The pressure point moves towards the handlebar.

The range of adjustment is limited.

Only turn the adjusting screw by hand, and do not use force.

Do not make any adjustments while riding.


14.3 Checking the brake discs



Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

- Make sure that worn-out brake discs are replaced immediately. (Your authorized KTM workshop will be glad to help.)

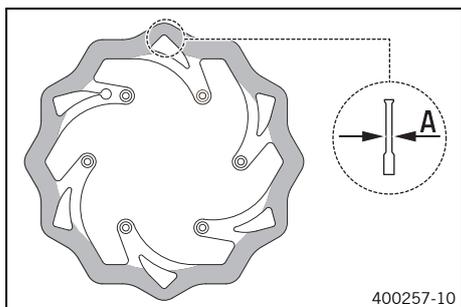

- Check the front and rear brake disc thickness at multiple points for the dimension **A**.

Info
Wear reduces the thickness of the brake disc around the contact surface of the brake linings.

Brake discs - wear limit	
front	3.7 mm (0.146 in)
rear	3.5 mm (0.138 in)

- » If the brake disc thickness is less than the specified value:
 - Change the front brake disc. 🛠️
 - Change the rear brake disc. 🛠️
- Check the front and rear brake discs for damage, cracking, and deformation.
 - » If the brake disc exhibits damage, cracking, or deformation:
 - Change the front brake disc. 🛠️
 - Change the rear brake disc. 🛠️

14.4 Checking the front brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

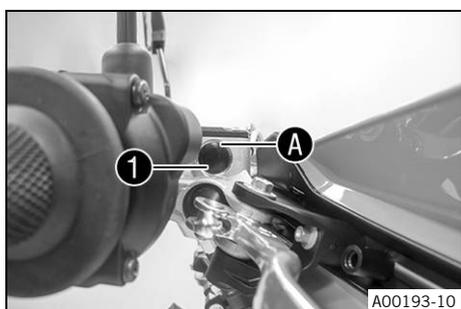

- Move the brake fluid reservoir attached to the right of the handlebar to a horizontal position.
- Check the brake fluid level in level viewer **1**.
 - » If the brake fluid level has dropped below the marking **A**:
 - Add front brake fluid. 🛠️ (📖 p. 81)

14.5 Adding front brake fluid



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Unsuitable brake fluid damages the brake system.

DOT 5 brake fluid attacks seals and brake lines. DOT 5 brake fluid is silicone-based and purple in color.

- Do not use DOT 5 brake fluid.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.




Info

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint. Only use clean brake fluid from a sealed container.

Preparatory work

- Deactivate the vehicle. ( p. 43)
- Fold the seat up. ( p. 69)
- Remove the KTM PowerPack. ( p. 107)
- Mount the protection cap. ( p. 71)
- Check the front brake linings. ( p. 82)

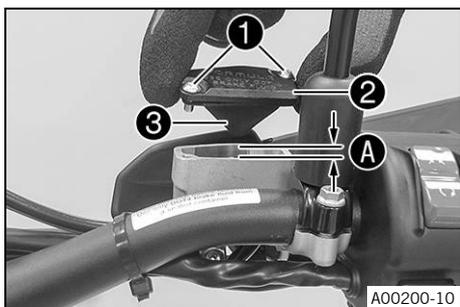

Main work

- Move the brake fluid reservoir attached to the right of the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.
- Add brake fluid to level A.

Guideline

Level A (brake fluid level below reservoir rim)	5 mm (0.2 in)
---	---------------

Brake fluid DOT 4 / DOT 5.1 (📖 p. 137)
--

- Position the cover with the membrane. Mount and tighten the screws.

Info

Clean up overflowed or spilled brake fluid immediately with water.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)


14.6 Checking the front brake linings



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)

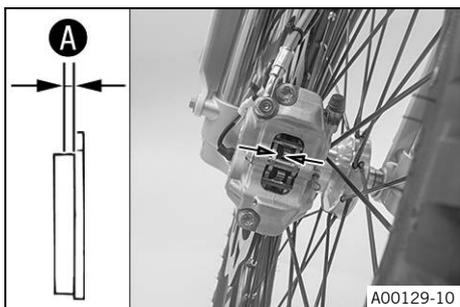

- Check the brake linings for lining thickness A.

Minimum thickness A	≥ 1 mm (≥ 0.04 in)
---------------------	--------------------

- » If the minimum thickness is less than specified:
 - Change the front brake linings. 🛠️ (📖 p. 82)
- Check the brake linings for damage and cracking.
 - » If damage or cracking is visible:
 - Change the front brake linings. 🛠️ (📖 p. 82)

14.7 Changing the front brake linings 🛠️



Warning

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally. (Your authorized KTM workshop will be glad to help.)

**Warning****Skin irritation** Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

**Warning****Danger of accidents** Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

**Warning****Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

**Warning****Danger of accidents** Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for KTM motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings. If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the warranty shall be void.

- Only use brake linings approved and recommended by KTM.

**Warning****Danger of accidents** Unsuitable brake fluid damages the brake system.

DOT 5 brake fluid attacks seals and brake lines. DOT 5 brake fluid is silicone-based and purple in color.

- Do not use DOT 5 brake fluid.

**Note****Environmental hazard** Hazardous substances cause environmental damage.


- Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.

**Info**


Avoid contact between brake fluid and painted parts. Brake fluid attacks paint. Only use clean brake fluid from a sealed container.

Preparatory work


- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

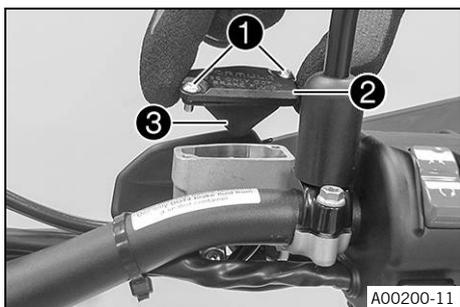


A00200-11

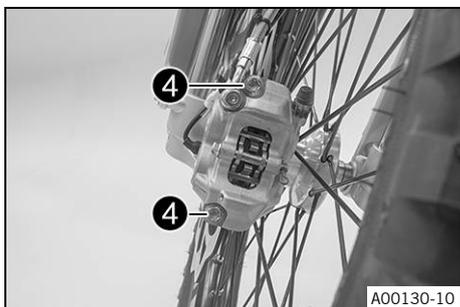

A00130-10

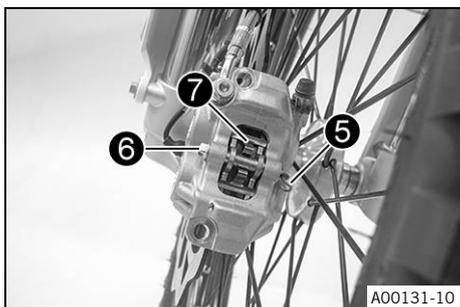

A00131-10

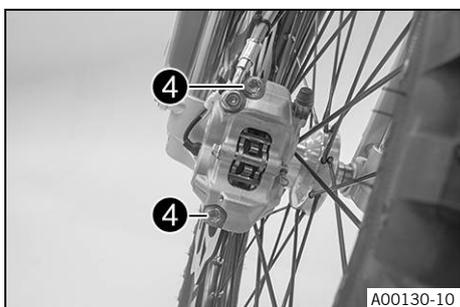

A00130-10

Main work

- Move the brake fluid reservoir attached to the right of the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.

- Remove screws ④ with spacers.
- Remove the cable tie.
- Press back the brake linings by slightly tilting the brake caliper laterally on the brake disc.
- Carefully pull the brake caliper backward from the brake disc.
- Press the brake piston back to its basic position and make sure that no brake fluid overflows from the brake fluid reservoir, extracting brake fluid if necessary.

- Remove cotter pin ⑤.
- Remove pin ⑥.
- Take off retainer spring ⑦ and remove the brake linings.
- Clean the brake caliper.
- Position new brake linings.

Info

Always change the brake linings in pairs.

- Position retaining spring ⑦.
- Mount pin ⑥.

Info


To make it easier to mount the pin, push the retainer spring down.
Make sure the retaining spring is seated correctly.

- Mount cotter pins ⑤.
- Position the brake caliper. Mount screws ④ with the spacers but do not tighten yet.
- Operate the front brake lever several times until the brake linings are in contact with the brake disc and there is a pressure point. Secure the front brake lever in the activated position.
- ✓ The brake caliper straightens.
- Tighten screws ④.

Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
----------------------------	----	--

- Remove the means of securing the front brake lever.
- Mount the cable tie.

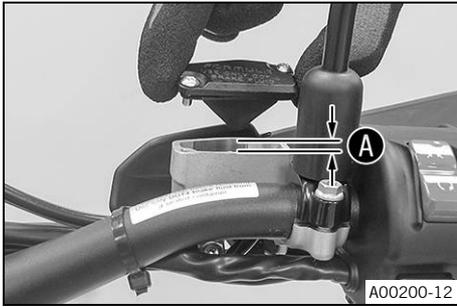

- Add brake fluid to level **A**.

Guideline

Level A (brake fluid level below reservoir rim)	5 mm (0.2 in)
--	---------------

Brake fluid DOT 4 / DOT 5.1 (📖 p. 137)
--

- Position the cover with the membrane. Mount and tighten the screws.

i Info
Clean up overflowed or spilled brake fluid immediately with water.

Finishing work


- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



14.8 Checking the free travel of the rear brake lever

⚠ Warning
Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the rear brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the rear brake lever in accordance with the specification.

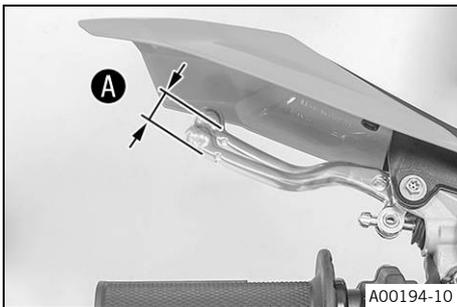

- Push the rear brake lever to the handlebar and check free travel **A**.


Guideline

Free travel of the rear brake lever	≥ 3 mm (≥ 0.12 in)
-------------------------------------	--------------------

- » If the free travel does not match the specification:
 - Adjust the free travel of the rear brake lever. (📖 p. 85)



14.9 Adjusting the free travel of the rear brake lever

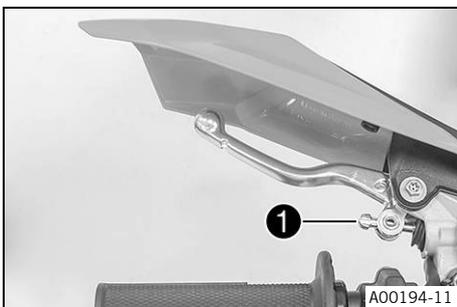

- Adjust the free travel of the rear brake lever using adjusting screw **1**.

i Info
Turn the adjusting screw clockwise to reduce free travel. The pressure point moves away from the handlebar.
Turn the adjusting screw counterclockwise to increase free travel. The pressure point moves towards the handlebar.
The range of adjustment is limited.
Only turn the adjusting screw by hand, and do not use force.
Do not make any adjustments while riding.



14.10 Checking the rear brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

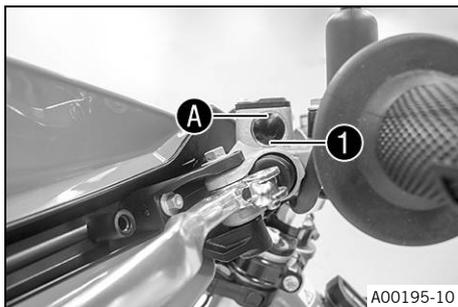

- Move the brake fluid reservoir attached to the left of the handlebar to a horizontal position.
- Check the brake fluid level in level viewer **1**.
 - » If the brake fluid level has dropped below the marking **A**:
 - Add rear brake fluid. 🛠️ (p. 86)

14.11 Adding rear brake fluid 🛠️



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

- Danger of accidents** Unsuitable brake fluid damages the brake system. DOT 5 brake fluid attacks seals and brake lines. DOT 5 brake fluid is silicone-based and purple in color.
- Do not use DOT 5 brake fluid.



Note

- Environmental hazard** Hazardous substances cause environmental damage.
- Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info

- Avoid contact between brake fluid and painted parts. Brake fluid attacks paint. Only use clean brake fluid from a sealed container.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Check the rear brake linings. (📖 p. 88)

Main work


- Move the brake fluid reservoir attached to the left of the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.
- Add brake fluid to level A.

Guideline

Level A (brake fluid level below reservoir rim)	5 mm (0.2 in)
---	---------------

Brake fluid DOT 4 / DOT 5.1 (📖 p. 137)

- Position the cover with the membrane. Mount and tighten the screws.

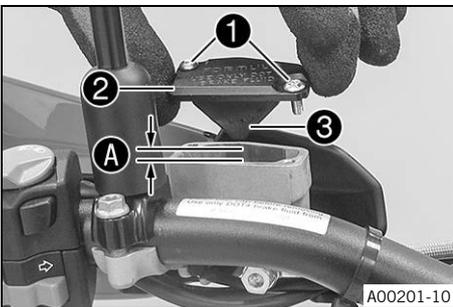

Info

- Clean up overflowed or spilled brake fluid immediately with water.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)


14.12 Checking the rear brake linings



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)

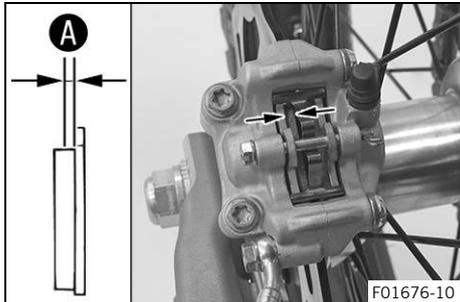

- Check the brake linings for lining thickness **A**.

Minimum thickness A	$\geq 1 \text{ mm } (\geq 0.04 \text{ in})$
----------------------------	---

- » If the minimum thickness is less than specified:
 - Change the rear brake linings. 🛠️ (📖 p. 88)
- Check the brake linings for damage and cracking.
 - » If damage or wear is encountered:
 - Change the rear brake linings. 🛠️ (📖 p. 88)

14.13 Changing the rear brake linings 🛠️



Warning

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning

Danger of accidents Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for KTM motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings. If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the warranty shall be void.

- Only use brake linings approved and recommended by KTM.



Warning

Danger of accidents Unsuitable brake fluid damages the brake system.

DOT 5 brake fluid attacks seals and brake lines. DOT 5 brake fluid is silicone-based and purple in color.

- Do not use DOT 5 brake fluid.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info



Avoid contact between brake fluid and painted parts. Brake fluid attacks paint. Only use clean brake fluid from a sealed container.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

Main work

- Move the brake fluid reservoir attached to the left of the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.
- Press the brake piston back to its basic position and make sure that no brake fluid overflows from the brake fluid reservoir, extracting brake fluid if necessary.
- Remove cotter pin ④.
- Remove pin ⑤.
- Take off retainer spring ⑥ and remove the brake linings.
- Clean the brake caliper.

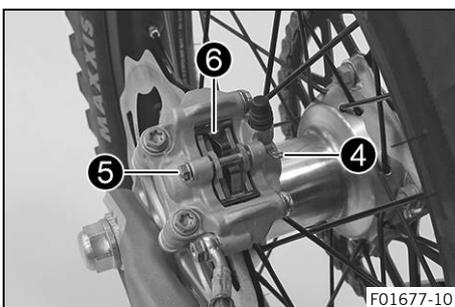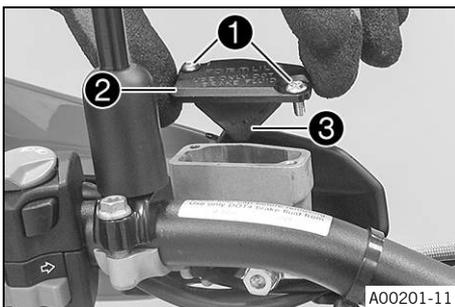




- Position new brake linings.



Info

Always change the brake linings in pairs.

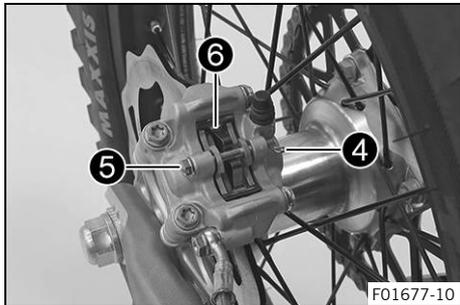


- Position retaining spring ⑥.
- Mount pin ⑤.



Info

To make it easier to mount the pin, push the retainer spring down.
Make sure the retaining spring is seated correctly.

- Mount cotter pins ④.
- Operate the rear brake lever several times until the brake linings are in contact with the brake disc and there is a pressure point.

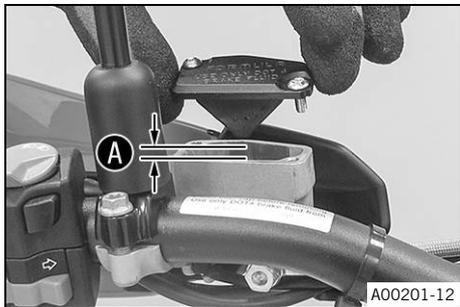

- Fill up the brake fluid to the level ①.

Guideline

Level ① (brake fluid level below reservoir rim)	5 mm (0.2 in)
---	---------------

Brake fluid DOT 4 / DOT 5.1 (📖 p. 137)

- Position the cover with the membrane. Mount and tighten the screws.



Info

Clean up overflowed or spilled brake fluid immediately with water.


Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

15.1 Removing the front wheel

Preparatory work


- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

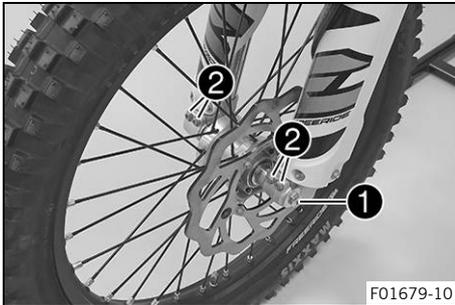

F01679-10

Main work

- Loosen screw ❶ by several rotations.
- Loosen screws ❷.
- Press on screw ❶ to push the wheel spindle out of the axle clamp.
- Remove screw ❶.

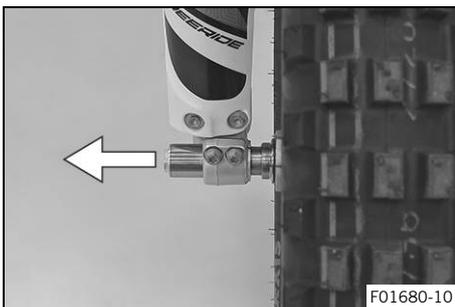

F01680-10



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.


- Hold the front wheel and remove the wheel spindle. Take the front wheel out of the fork.



Info

Do not operate the front brake lever when the front wheel is removed.

- Remove spacers ❸.

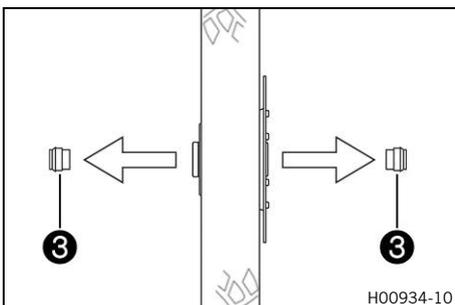

H00934-10



15.2 Installing the front wheel



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

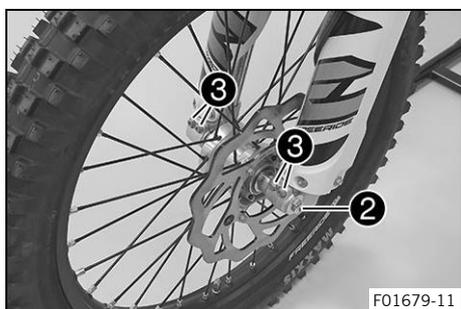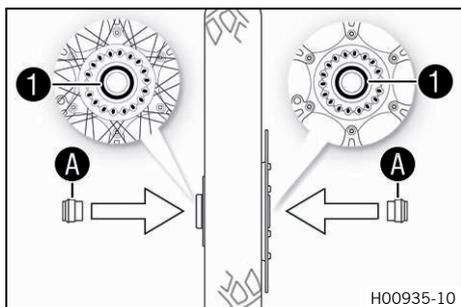

Main work

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change front wheel bearing. 🛠️
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.

Long-life grease (📖 p. 139)

- Insert the spacers.
- Clean and grease the wheel spindle.

Long-life grease (📖 p. 139)

- Position the front wheel and insert the wheel spindle.
 - ✓ The brake linings are correctly positioned.
- Mount and tighten screw 2.

Guideline

Screw, front wheel spindle	M20x1.5	35 Nm (25.8 lbf ft)
----------------------------	---------	---------------------

- Operate the front brake lever several times until the brake linings are in contact with the brake disc.
- Remove the motorcycle from the lift stand. (📖 p. 57)
- Operate the front brake and compress the fork a few times firmly.
 - ✓ The fork legs straighten.
- Tighten screws 3.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	---------------------


Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

15.3 Removing the rear wheel 🛠️

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

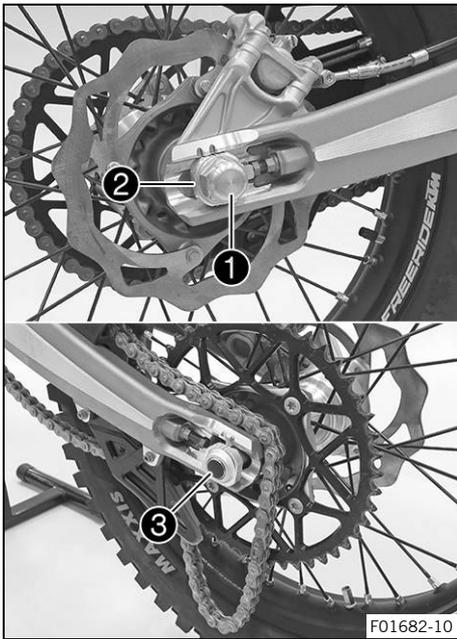

Main work

- Remove nut ①.
- Remove chain adjuster ②.



Info

Pull out wheel spindle ③ far enough to allow the rear wheel to be pushed forward.

- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.



Info

Cover the components to protect them against damage.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.


- Hold the rear wheel and remove the wheel spindle. Take the rear wheel out of the link fork.



Info

Do not operate the rear brake lever when the rear wheel is removed.

- Remove spacers ④.

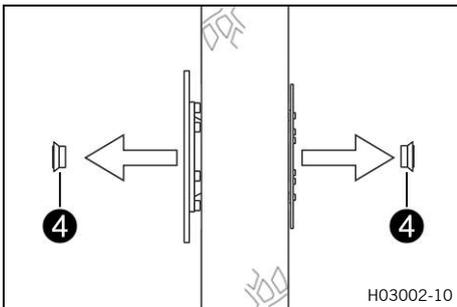




15.4 Installing the rear wheel



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

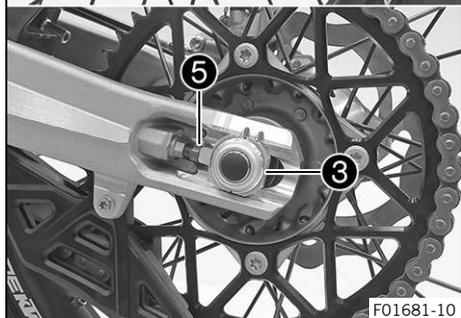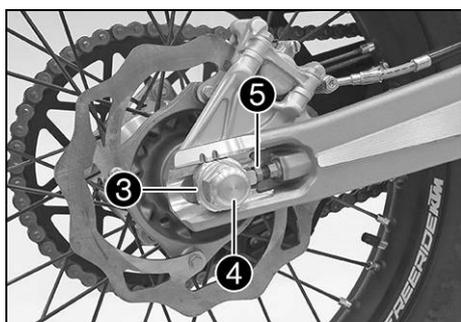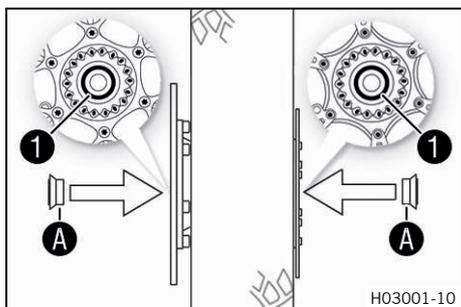

Main work

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing. 🛠️
- Clean and grease shaft seal rings ① and contact surfaces ①A of the spacers.

Long-life grease (📖 p. 139)
- Insert the spacers.
- Position the rear wheel.
 - ✓ The brake linings are correctly positioned.
- Insert wheel spindle ②.
- Mount the chain.

- Position chain adjuster ③. Mount nut ④, but do not tighten it yet.
- Make sure that chain adjusters ③ are fitted correctly on adjusting screws ⑤.
- Check the chain tension. (📖 p. 73)
- Tighten nut ④.

Guideline

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------

Info

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.

Chain adjusters ③ can be turned by 180°.

- Operate the rear brake lever several times until the brake linings are in contact with the brake disc and there is a pressure point.


Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

15.5 Checking the tire condition

i Info

Only mount tires approved and/or recommended by KTM.
 Other tires could have a negative effect on handling characteristics.
 The type, condition, and pressure of the tires all have a major impact on the handling characteristic of the motorcycle.
 The tires mounted on the front and rear wheels must have a similar profile.
 Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

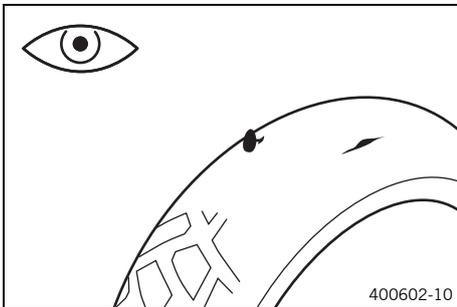

- Check the front and rear tires for cuts, run-in objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires. 🛠️
- Check the tread depth.

i Info

Observe the minimum profile depth required by national law.

Minimum tread depth	$\geq 2 \text{ mm}$ ($\geq 0.08 \text{ in}$)
---------------------	--


- » If the tread depth is less than the minimum tread depth:
 - Change the tires. 🛠️

- Check the tire age.

i Info

The tire's date of manufacture is usually part of the tire markings and is indicated by four digits. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.
 KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tires are more than 5 years old:
 - Change the tires. 🛠️

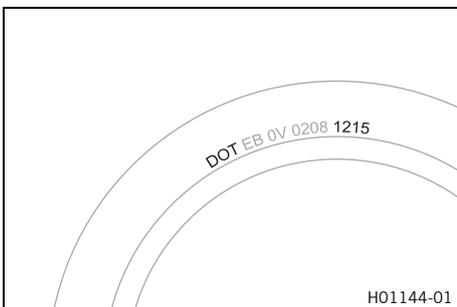


15.6 Checking tire pressure

i Info

Low tire pressure leads to abnormal wear and overheating of the tire.
 Correct tire pressure ensures optimal riding comfort and maximum tire service life.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

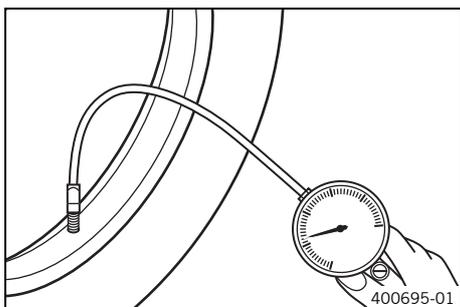

Main work

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

Offroad tire pressure	
front	0.9 bar (13 psi)
rear	0.7 bar (10 psi)

Street tire pressure	
front	1.5 bar (22 psi)
rear	1.5 bar (22 psi)

- » If the tire pressure does not meet specifications:
 - Correct the tire pressure.

- Mount the protection cap.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

15.7 Checking the spoke tension



Warning

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and result in secondary damage.

The spokes break due to being overloaded if they are too tightly tensioned. If the tension in the spokes is too low, then lateral and radial run-out will form in the wheel. Other spokes will become looser as a result.


- Check spoke tension regularly, and in particular on a new vehicle. (Your authorized KTM workshop will be glad to help.)

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

Main work

- Briefly strike each spoke with the tip of a screwdriver.

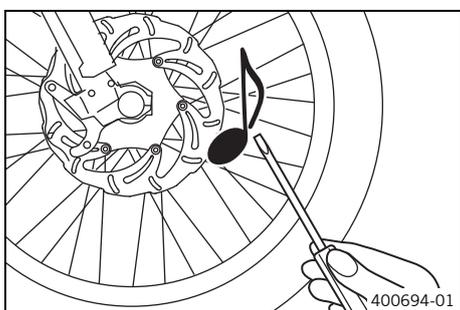

Info

The tone frequency depends on the length of the spoke and the spoke diameter.

If spokes of equal length and diameter vibrate with a different tone, this is an indication that the spoke tensions differ.

You should hear a high note.

- » If the spoke tension varies:
 - Correct the spoke tension. 🛠️
- Check the spoke torque.

Guideline

Spoke nipple	M4.5	6 Nm (4.4 lbf ft)
--------------	------	-------------------

Torque wrench kit (58429094000)

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



16.1 Removing the 12 V battery



Warning

Risk of injury Battery gases cause serious chemical burns.

- Keep the 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- In the event of contact with the skin, rinse the affected area with plenty of water.
- Flush eyes with water for at least 15 minutes and consult a physician if battery gases have come into contact with the eyes.



Note

Environmental hazard 12 V batteries contain environmentally hazardous materials.


- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)

Main work

- Detach rubber strap ①.
- Disconnect negative cable ② from the 12-V battery.
- Disconnect positive cable ③ from the 12 V battery.
- Remove the 12 V battery.

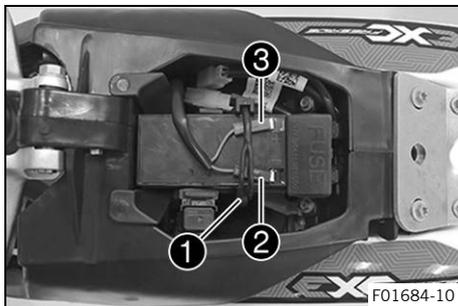


16.2 Installing the 12 V battery



Warning

Risk of injury Battery gases cause serious chemical burns.

- Keep the 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- In the event of contact with the skin, rinse the affected area with plenty of water.
- Flush eyes with water for at least 15 minutes and consult a physician if battery gases have come into contact with the eyes.

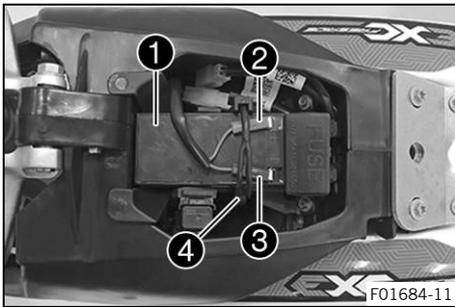**Main work**

- Position the 12-V battery ① in the battery compartment.
- Connect the positive cable ② to the 12-V battery.
- Connect the negative cable ③ to the 12-V battery.
- Attach rubber strap ④.

Finishing work

- Lock the seat. (📖 p. 69)

**16.3 Charging the 12 V battery****Warning**

Risk of injury Battery gases cause serious chemical burns.

- Keep the 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- In the event of contact with the skin, rinse the affected area with plenty of water.
- Flush eyes with water for at least 15 minutes and consult a physician if battery gases have come into contact with the eyes.

**Note**

Environmental hazard 12 V batteries contain environmentally hazardous materials.

- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.

**Info**


Even when there is no load on the 12 V battery, it discharges steadily. The charging level and the method of charging are very important for the service life of the 12 V battery. Rapid recharging with a high charging current shortens the service life of the battery. If the charging current, charging voltage or charging time is exceeded, electrolyte escapes through the safety valves. This reduces the capacity of the 12-V battery. When the 12-V battery has been discharged (blink code 44 on the vehicle), recharge the 12-V battery immediately. If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and sulfating occurs, destroying the battery. The 12 V battery is maintenance-free. The acid level does not have to be checked.

**Info**

The 12 V battery is recharged by the KTM PowerPack when operating the vehicle. When the KTM PowerPack is recharged in the vehicle, then the 12 V battery is also recharged.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the 12 V battery. (🔧📖 p. 98)

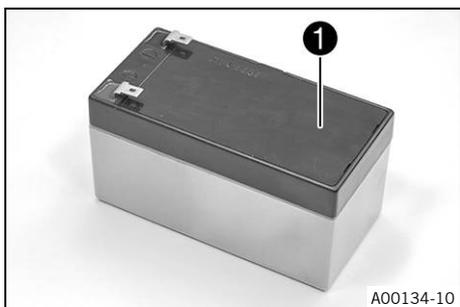

Main work

- Connect the battery charger to the 12-V battery. Switch on the battery charger.

Battery charger (58429074000)

Info

Never remove cover ①.

In addition, this battery charger can be used to test the open-circuit voltage. It is also impossible to overcharge the 12-V battery with this battery charger.

- Switch off the battery charger after charging. Disconnect the 12-V battery from the battery charger.

Guideline

The charging current, charging voltage or charging time must not be exceeded.

Recharge the 12-V battery regularly when the motorcycle is not being used	3 months
---	----------

Finishing work

- Install the 12-V battery. (📖 p. 98)
- Lock the seat. (📖 p. 69)

16.4 Changing the fuses of individual power consumers

Info


The fuse box containing the fuses for the individual power consumers is located under the seat, behind the 12-V battery.


Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

Main work

- Detach catches ① and open the fuse box cover.

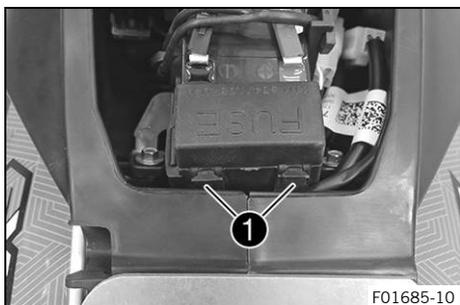

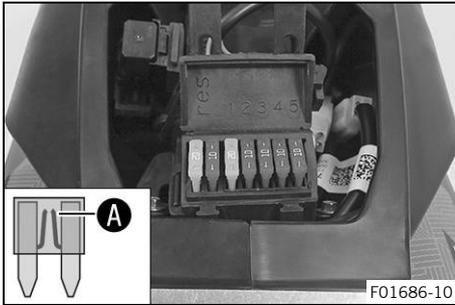

- Remove the faulty fuse.

Guideline

Fuses res - 10 A and 20 A - spare fuses
Fuse 1 - 20 A - main fuse, motor electronics control unit, ignition lock
Fuse 2 - 10 A - ignition lock, main switch, tip switch
Fuse 3 - 10 A - high beam, low beam
Fuse 4 - 10 A - horn, brake light, turn signal
Fuse 5 - 10 A - water pump



Info

You can recognize a faulty fuse by a burned-out fuse wire **A**.



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Insert spare fuse with the correct rating only.

Fuse (75011088010) (📖 p. 133)
Fuse (75011088020) (📖 p. 133)



Tip

Replace the spare fuse in the fuse box so that it is available if needed.

- Check that the power consumer is functioning properly.
- Close the fuse box cover and allow the catches to engage.

Finishing work


- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)



16.5 Removing the headlight mask with the headlight


Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

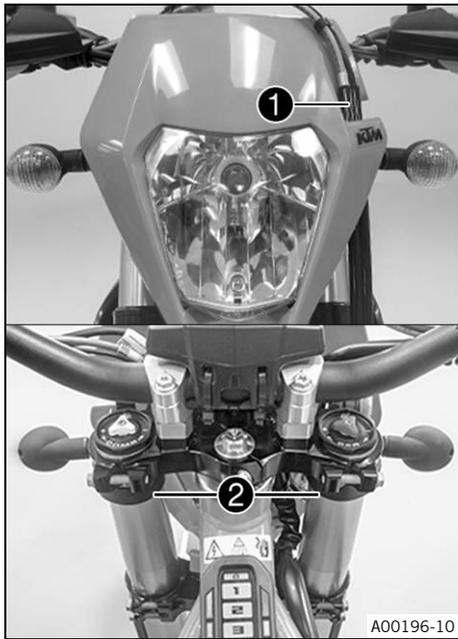


Main work

- Detach the brake line and wiring harness **1**.
- Loosen rubber straps **2**. Slide the headlight mask up and swing it forward.

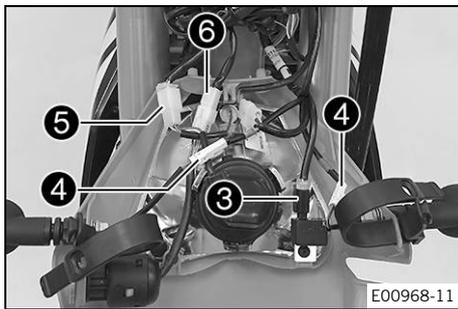


- Disconnect plug-in connector **3** of the turn signal relay, plug-in connectors **4** of the turn signals, plug-in connector **5** of the headlight and plug-in connector **6** of the ignition lock.

16.6 Installing the headlight mask with the headlight

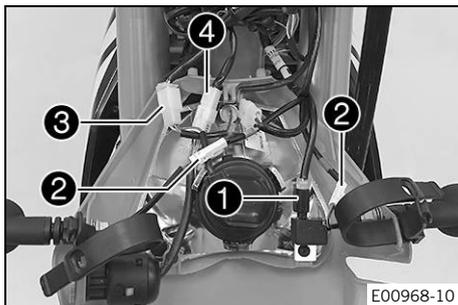

Main work

- Join plug-in connector **1** of the turn signal relay, plug-in connectors **2** of the turn signals, plug-in connector **3** of the headlight and plug-in connector **4** of the ignition lock.

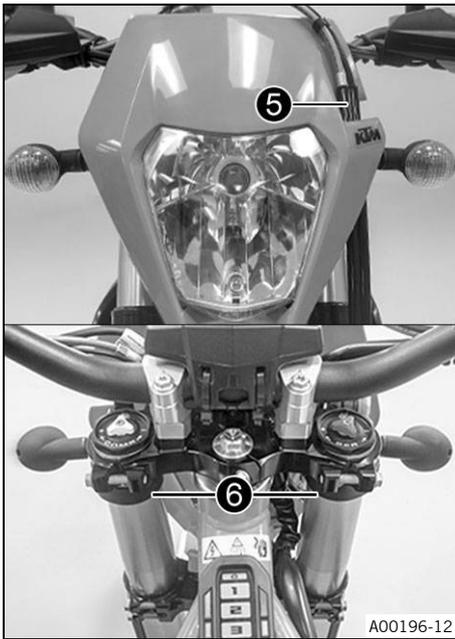

- Attach the brake line and wiring harness ⑤.
- Position the headlight mask and secure it with rubber straps ⑥.
- ✓ The holding lugs on the headlight mask engage in the fender.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Check the headlight setting. (📖 p. 105)



16.7 Changing the headlight bulb

Note

Damage to reflector Grease on the reflector reduces the light intensity.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.


- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.


Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Remove the headlight mask with the headlight. (📖 p. 101)

Main work

- Turn rubber cap ① with the bulb socket beneath it all the way counterclockwise and lift it off.
- Pull bulb socket ② of the position light out of the reflector.

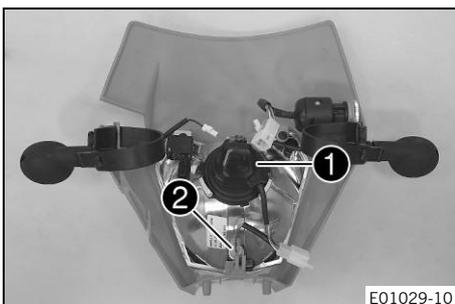

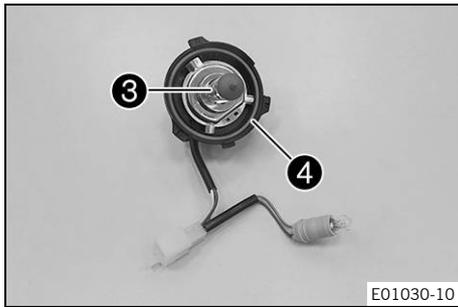

- Push headlight bulb **3** lightly into the bulb socket, turn it all the way counterclockwise, and remove it.
- Insert the new headlight bulb.

Headlight (HS1 / socket PX43t) (📖 p. 133)

- Insert the rubber cap with the bulb socket into the reflector and turn it all the way clockwise.



Info

Ensure that O-ring **4** is seated properly.

- Insert the bulb socket of the position light into the reflector.

Finishing work

- Install the headlight mask with the headlight. (📖 p. 102)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Check the headlight setting. (📖 p. 105)

16.8 Changing the turn signal bulb

Note

Damage to reflector Grease on the reflector reduces the light intensity.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.

- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

Main work

- Remove the screw on the rear of the turn signal housing.
- Carefully remove turn signal glass **1**.
- Lightly squeeze together the orange cap **2** in the area of the holding lugs and take it off.
- Press the turn signal bulb lightly into the socket, turn it counterclockwise by about 30°, and take it out of the socket.




Info

Do not touch the reflector with your fingers and keep it free from grease.

- Press the new turn signal bulb carefully into the socket and turn it clockwise until it stops.

Turn signal (R10W/socket BA15s) (📖 p. 133)

- Mount the orange cap.
- Position the turn signal glass.

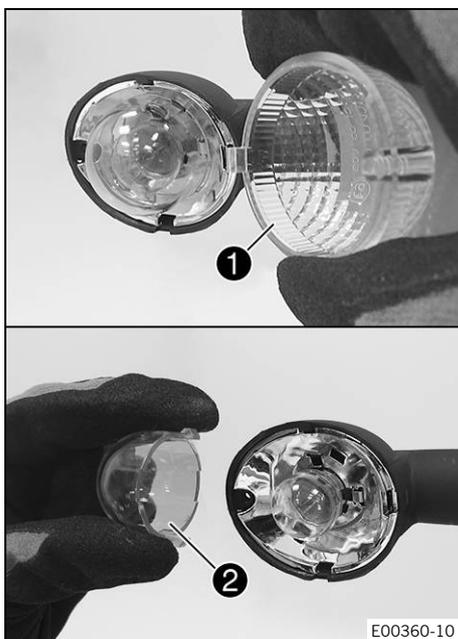


- Insert the screw and first turn counterclockwise until it engages in the thread with a small jerk. Tighten the screw lightly.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Check that the turn signal system is functioning properly.



16.9 Checking the headlight setting

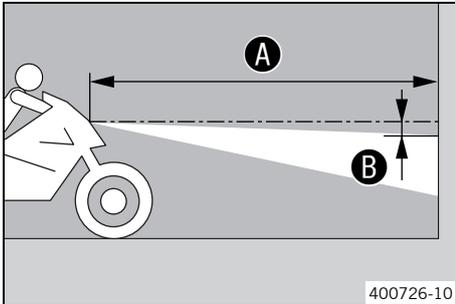

- Position the vehicle upright on a horizontal surface in front of a light wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance **B** under the first marking.

Guideline

Distance B	5 cm (2 in)
-------------------	-------------

- Position the vehicle vertically a distance **A** away from the wall.

Guideline

Distance A	5 m (16 ft)
-------------------	-------------

- The rider now sits down on the motorcycle with a full set of protective clothing.
- Turn the ignition key in the ignition lock to the position \odot .
- Push the main switch into the position \odot .
- Switch on the low beam.
- Check the headlight setting.

The boundary between light and dark must be exactly on the lower marking for a motorcycle with rider.

- » If the boundary between light and dark does not meet specifications:
 - Adjust the headlight range. (📖 p. 105)



16.10 Adjusting the headlight range

Preparatory work

- Check the headlight setting. (📖 p. 105)

Main work

- Loosen screw **1**.
- Adjust the headlight range by pivoting the headlight.

Guideline

The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider (instructions on how to apply the mark: Checking the headlight setting).



Info

A change in weight on the vehicle may require a correction of the headlight range.

- Tighten screw ❶.




16.11 Changing the combination instrument battery

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Remove the headlight mask with the headlight. (📖 p. 101)

Main work

- Remove screws ❶.
- Pull the combination instrument upward out of the holder.

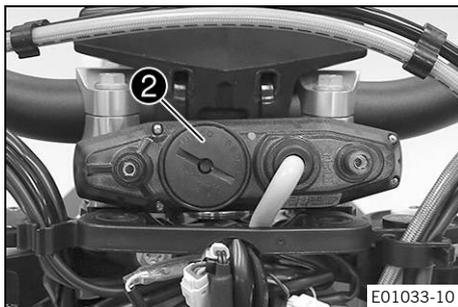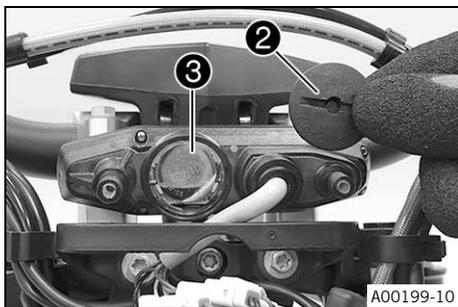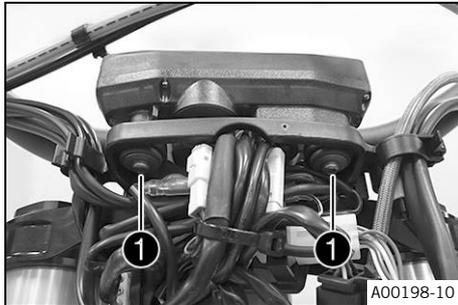

- Using a coin, turn protection cap ❷ all the way counterclockwise and remove it.
- Remove combination instrument battery ❸.
- Insert the combination instrument battery with the label facing outward.

Combination instrument battery (CR 2430) (📖 p. 133)

- Check the O-ring of the protection cap for correct seating.
- Position protection cap ❷ and turn all the way clockwise using a coin.
- Press any button on the combination instrument.
- ✓ The combination instrument is activated.
- Position the combination instrument in the holder.
- Mount and tighten the screws with washers.

Finishing work

- Install the headlight mask with the headlight. (📖 p. 102)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Check the headlight setting. (📖 p. 105)
- Set kilometers or miles. (📖 p. 27)
- Set the combination instrument. (📖 p. 28)
- Set the clock. (📖 p. 29)

17.1 Removing the KTM PowerPack



Warning

Risk of injury There is a risk of electric shock when working on high-voltage components.

Work on high-voltage components require special training, qualifications and tools.


- Work which has not been described and explained may only be performed by correspondingly trained KTM specialists. (Your authorized KTM workshop will be glad to help.)
- Do not open the electric motor or the KTM PowerPack. (Your authorized KTM workshop will be glad to help.)



Note

Environmental hazard A lithium-ion battery (KTM PowerPack) contains components and elements that are harmful to the environment.

- Never throw a KTM PowerPack into the household trash.
- Dispose of the KTM PowerPack properly and in compliance with the applicable regulations. (Your authorized KTM workshop will be glad to help.)

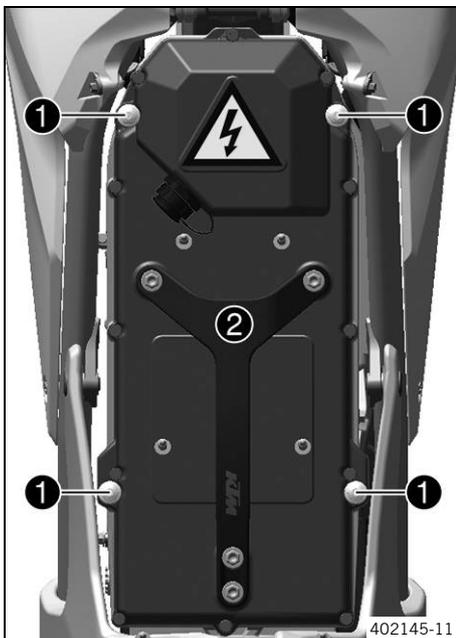

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)

Main work

- Loosen screws ①.

Note

Material damage Components damaged or destroyed by water or dirt.

- Mount the protection cap after you have removed the KTM PowerPack.
- Place the KTM PowerPack on a clean and dry surface.

- Remove KTM PowerPack ②.

Lifting strap (70029022000)



Info

The KTM PowerPack is very heavy. A second person can help with removal.

Finishing work

- Mount the protection cap. (📖 p. 71)

17.2 Installing the KTM PowerPack



Caution

Risk of injury The KTM PowerPack is very heavy.


The KTM PowerPack must rest flush on the electric motor after installation.

- Only lift the KTM PowerPack using the carry handle.
- Make sure that nobody is pinched when the KTM PowerPack is removed or installed.

Note

Material damage Components damaged or destroyed by water or dirt.

- Before installing the KTM PowerPack, check that the battery discharge plug on the electric motor and the battery discharge socket on the KTM PowerPack are clean.
- Check the battery discharge plug form ring.
- Clean the battery discharge plug and the battery discharge socket without using water or compressed air if the battery discharge plug or the battery discharge socket is dirty.
- After cleaning, spray silicone spray onto the battery discharge plug form ring.

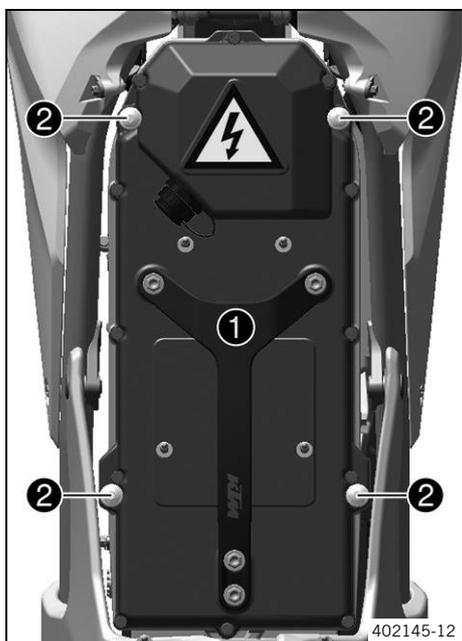

Main work

- Remove the protection cap. (📖 p. 71)
- Check the battery discharge plug form ring. (📖 p. 71)
- Position the KTM PowerPack ① in the vehicle.

Lifting strap (70029022000)

- ✓ The KTM PowerPack is resting flush on the electric motor.



Info

The KTM PowerPack is very heavy. A second person can help with installation.

- Tighten screws ②.

Guideline

KTM PowerPack attachment	M6	10 Nm (7.4 lbf ft)
--------------------------	----	--------------------

Finishing work

- Lock the seat. (📖 p. 69)

17.3 Overview of the KTM PowerPack battery charger



- ① Residual current protection switch
- ② "On" charger switch
- ③ "Off" charger switch
- ④ Battery charger
- ⑤ Charging mode switch
- ⑥ Charge level indicator
- ⑦ Status indicator
- ⑧ LED for KTM PowerPack fault
- ⑨ LED for charger fault

17.4 Positioning the battery charger

Warning
Risk of injury There is a risk of electric shock in a moist environment.
 The battery charger is not waterproof.

- Only use the battery charger in dry conditions.
- Ensure that no fluids flow or drip onto the battery charger.

Warning
Risk of injury If the battery charger is used incorrectly, its intrinsic safety cannot be guaranteed.
 The battery charger is only suitable for use with a KTM PowerPack.

- Only use the battery charger with a KTM PowerPack.
- Only operate the battery charger using household sockets with an earth conductor.
- Do not use any additional adapters or extensions.
- Follow the applicable safety instructions of the power connection.



Warning

Risk of injury There is a risk of electric shock if the battery charger or the cables have been manipulated or damaged.

The battery charger does not contain any parts which require maintenance.

- Do not modify the battery charger or the cables.
- Under no circumstances open the battery charger housing.
- Do not insert any objects into the battery charger housing from the outside.
- Do not use the battery charger if cables, plug or parts of the battery charger have been damaged or are soiled.



Info

The battery charger contains sensitive electronics and must be handled with appropriate care. The battery charger may be damaged or destroyed if it is dropped, knocked or otherwise subject to mechanical overload.

When transporting the battery charger, ensure appropriate means of securing the cargo.

Damage caused due to improper handling or improper transport is excluded from the manufacturer warranty.



- Place the battery charger on a firm, level and horizontal surface.
- Ensure the battery charger is adequately ventilated.

Guideline

Free space at the front and rear side of the battery charger	20 cm (7.9 in)
--	----------------


- Use the battery charger in the temperature range permitted.

Guideline

Ambient temperature	-15 ... 50 °C (5 ... 122 °F)
---------------------	------------------------------

- Ensure that the power plug for the battery charger always remains easily accessible.

17.5 Checking residual current protection switch

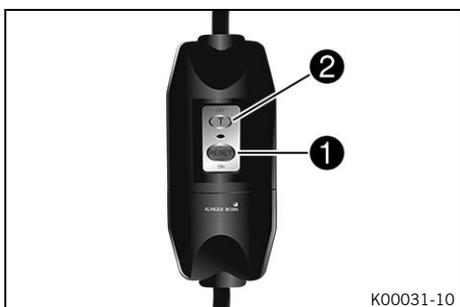

Warning

Risk of injury There is a risk of electric shock with a faulty residual current protection switch.

- Before each use of the charger check the residual current protection switch.
- Do not use the battery charger if the test procedure was not successful.

- Connect the mains plug to the mains connection.
- Press the **1** button.
 - ✓ The operating display lights up red.
- Press the **2** button.
 - ✓ The operating display goes out.
 - ✓ The residual current protection switch can be used.

- Disconnect power plug from mains connection.



17.6 Charging the KTM PowerPack

Note

Material damage The power supply will be damaged in the event of an overload.

In charge mode **Fast**, a steady current of at least 13 A is required.

In charge mode **Normal**, a steady current of at least 10 A is required.

- Ensure that the power outlet can supply the steady current required and is protected by a suitable fuse.



Note

Environmental hazard A lithium-ion battery (KTM PowerPack) contains components and elements that are harmful to the environment.

- Never throw a KTM PowerPack into the household trash.
- Dispose of the KTM PowerPack properly and in compliance with the applicable regulations. (Your authorized KTM workshop will be glad to help.)



Info

The charging procedure is identical regardless of where the KTM PowerPack is charged – while installed in the vehicle or outside of the vehicle. However, the 12 V battery is only recharged when the KTM PowerPack is being recharged in the vehicle.

Recharge the KTM PowerPack regularly while it is inside the vehicle to also charge the 12 V battery.

Do not activate the vehicle while the battery charger is connected to the KTM PowerPack.

If the vehicle is activated while the vehicle is being charged with the KTM PowerPack installed, the vehicle switches to the fault state. The KTM PowerPack will continue to be recharged, however the 12 V battery will stop recharging.



Info

When the left LED in the charging level indicator on the battery charger flashes, the KTM PowerPack is ready for use. However, full capacity is not yet available.

To guarantee the maximum capacity of the KTM PowerPack, discharge the KTM PowerPack completely every 20 charging cycles and then recharge it completely. If this process is not carried out, then the vehicle may switch off due to a charging level which is too low without reducing power beforehand.

The KTM PowerPack is completely discharged when the vehicle switches off with blink code 11.




Info

When the temperature of the KTM PowerPack exceeds the permitted value during charging, the battery charger will stop the charging process. All LEDs and the LEDs for the current charging level alternately light up every second.

As soon the temperature of the KTM PowerPack returns to the permitted range, the charging process continues automatically.

Preparatory work

- Position the battery charger. (📖 p. 109)
- Check residual current protection switch. (📖 p. 110)
- Push the main switch into the position ☒.
- Fold the seat up. (📖 p. 69)

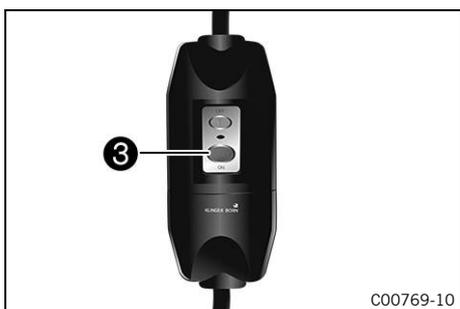

Main work

- Remove ① charging socket protection cap.



Warning

Risk of injury The intrinsic safety of the KTM PowerPack can only be guaranteed if the original battery charger is used.

The KTM PowerPack may only be charged with the original battery charger.

- Only use the original battery charger to charge the KTM PowerPack.

- Connect the battery charger to the KTM PowerPack. Observe plug markings ①.

- Connect the power plug for the battery charger to the mains connection.
- Set the charging mode switch ② to the **Fast** position or **Normal** position.



Info

In charging mode **Fast**, the KTM PowerPack is completely charged after approx. 105 minutes. The power consumption is higher than in charging mode **Normal**. In charging mode **Normal**, the KTM PowerPack is completely charged after approx. 135 minutes.

- Switch on the battery charger using switch ③.
- ✓ Charging starts automatically. The status indicator flashes during the charging process.

- Monitor the charging level of the KTM PowerPack using the LEDs.
- LED 1: 20 %
- LED 2: 40 %

LED 3: 60 %

LED 4: 80 %

LED 5 flashes beginning with approx. 95% until 100% is reached.

Once the charging process is complete, all five LEDs light up and the status indicator goes out.



- Switch off the battery charger using switch ④.
- ✓ After several seconds, all LEDs on the battery charger go out.
- Disconnect the battery charger power plug from the mains connection.
- Disconnect the charging cable from the KTM PowerPack.

Guideline

Pull on the structured part of the connector. Do not pull on the cable.

- Check the seal on the charging socket protection cap.
 - » If the seal is dirty:
 - Clean the seal without using water or compressed air.
 - » If the seal is damaged or worn:
 - Change the seal.
- Mount the charging socket protection cap.

Finishing work

- Lock the seat. (📖 p. 69)



17.7 Charging the KTM PowerPack in the Storage charging mode

Note

Material damage The power supply will be damaged in the event of an overload.

In the **Storage** charging mode, a steady current of at least 10 A is required.

- Ensure that the mains connection can supply the steady current required and is protected by a suitable fuse.



Note

Environmental hazard A lithium-ion battery (KTM PowerPack) contains components and elements that are harmful to the environment.

- Never throw a KTM PowerPack into the household trash.
- Dispose of the KTM PowerPack properly and in compliance with the applicable regulations. (Your authorized KTM workshop will be glad to help.)



Info


The charge level of the KTM PowerPack must be below 50% before the **Storage** charging mode can be used.

If the temperature of the KTM PowerPack exceeds the permissible value while it is being charged, the battery charger stops charging. All LEDs and the LEDs for the current charging level alternately light up every second.

After the temperature of the KTM PowerPack returns to the permissible range, charging is resumed automatically.

Preparatory work

- Position the battery charger. (📖 p. 109)

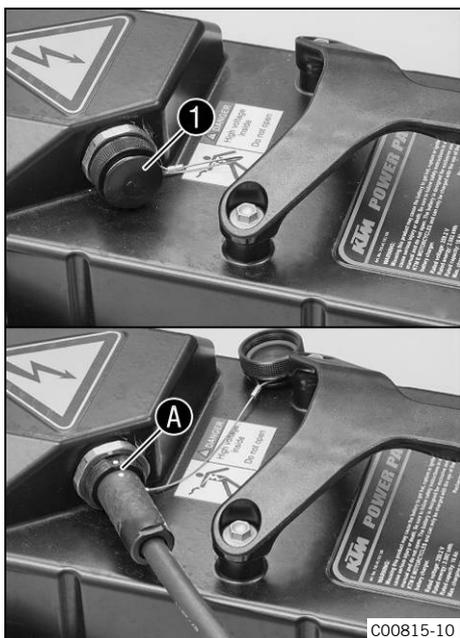

Main work

- Remove **1** charging socket protection cap.



Warning

Risk of injury The intrinsic safety of the KTM PowerPack can only be guaranteed if the original battery charger is used.

The KTM PowerPack may only be charged with the original battery charger.

- Only use the original battery charger to charge the KTM PowerPack.

- Connect the battery charger to the KTM PowerPack. Observe plug markings **A**.

- Connect the power plug for the battery charger to the mains connection.
- Set the charging mode switch **2** to the **Storage** position.

- Switch on the battery charger using switch **3**.
 ✓ Charging starts automatically. The status indicator flashes during the charging process.

- Monitor the charging level of the KTM PowerPack using the LEDs.
 LED 1: 20%
 LED 2: 40 %
 After the charging process is completed to a level of 50%, LEDs 1 and 2 light up and the status indicator goes out.



- Switch off the battery charger using switch ④.
- ✓ After several seconds, all LEDs on the battery charger go out.
- Disconnect the battery charger power plug from the mains connection.
- Disconnect the charging cable from the KTM PowerPack.

Guideline

Pull on the structured part of the connector. Do not pull on the cable.

- Check the seal on the charging socket protection cap.
 - » If the seal is dirty:
 - Clean the seal without using water or compressed air.
 - » If the seal is damaged or worn:
 - Change the seal.
- Mount the charging socket protection cap.

17.8 Changing charging socket protection cap

Warning
Risk of injury There is a risk of electric shock when working on high-voltage components. Work on high-voltage components requires special training, qualifications and tools.

- Have all work that is not described and explained performed by trained KTM mechanics only.
- Do not open the electric motor or the lithium-ion battery (KTM PowerPack).

Info
 If the safety cord or seal ring is damaged or torn off, the charging socket protection cap must be replaced.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)


Main work


- Remove ① charging socket protection cap.

Guideline

Do not loosen A nut.

- Remove residual safety cord.
- Remove screws ②.
- Take off the carry handle.

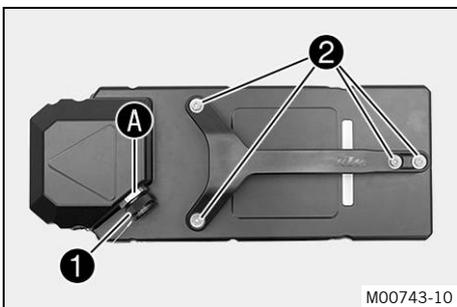


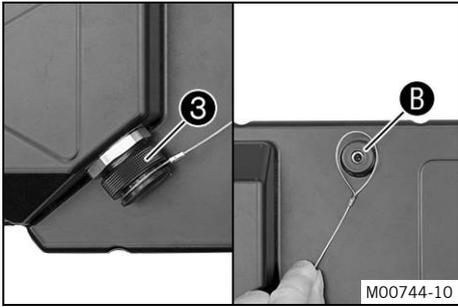

- Install new charging socket **3** protection cap.

Charging socket protection cap (000700000FX01)
--

- Position loop around the right **B** carry handle attachment.

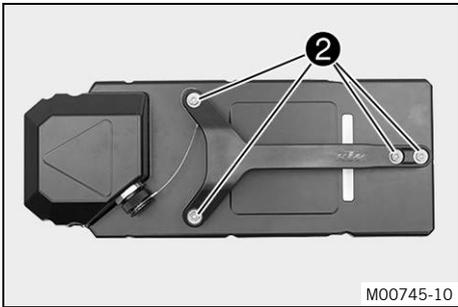

- Position carry handle.

Guideline

Do not pinch the loop between the KTM PowerPack and the carry handle.

- Mount and tighten screws **2**.


Guideline

Screws, carry handle	M6	5 Nm (3.7 lbf ft)
----------------------	----	-------------------

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

18.1 Cooling system

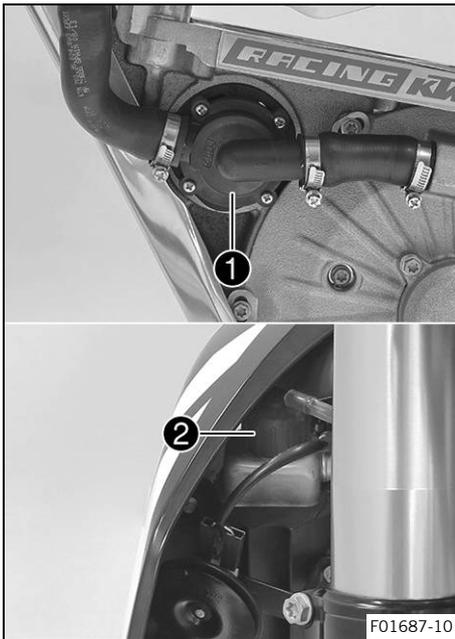

When the vehicle is in standby mode, the water pump ❶ pumps the coolant through the cooling circuit. The pressure in the cooling system increases with the temperature of the coolant. A safety valve is contained in radiator cap ❷. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

65 °C (149 °F)

Cooling is effected by the air stream. The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

18.2 Checking the antifreeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not remove the radiator cap, radiator hoses or other cooling system components when the motor is hot. Allow the motor and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The motor is cold.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Raise the motorcycle with a lift stand. (📖 p. 57)

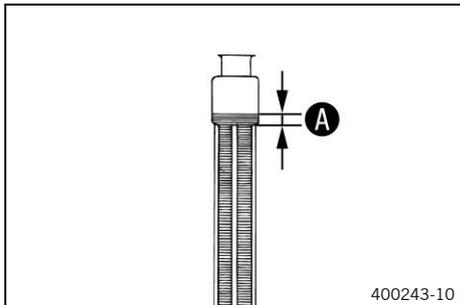

Main work

- Remove the radiator cap.
- Check the antifreeze in the coolant.

-25 ... -45 °C (-13 ... -49 °F)

» If the antifreeze in the coolant does not match the specified value:

- Correct the antifreeze in the coolant.

- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)
--	-----------------

» If the coolant level does not meet specifications:

- Correct the coolant level.

Coolant (📖 p. 137)

- Mount the radiator cap.

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)

18.3 Checking the coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not remove the radiator cap, radiator hoses or other cooling system components when the motor is hot. Allow the motor and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition


The motor is cold.

- Position the vehicle vertically on a level surface with the aid of another person.
- Remove the radiator cap.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)
--	-----------------

» If the coolant level does not match the specified value:

- Correct the coolant level.

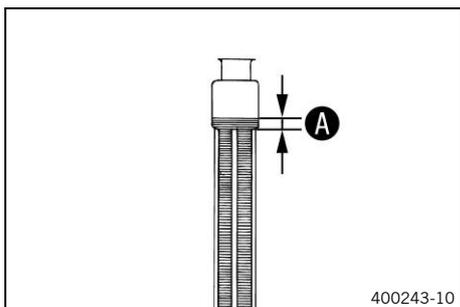

Coolant (📖 p. 137)

- Mount the radiator cap.



18.4 Draining the coolant

Warning
Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not remove the radiator cap, radiator hoses or other cooling system components when the motor is hot. Allow the motor and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.


Warning
Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition
 The engine is cold.

- Preparatory work**
- Deactivate the vehicle. (📖 p. 43)
 - Fold the seat up. (📖 p. 69)
 - Remove the KTM PowerPack. (📖 p. 107)
 - Mount the protection cap. (📖 p. 71)

- Main work**
- Position the motorcycle upright.
 - Place an appropriate container under the motorcycle.
 - Remove screws ① and ②.

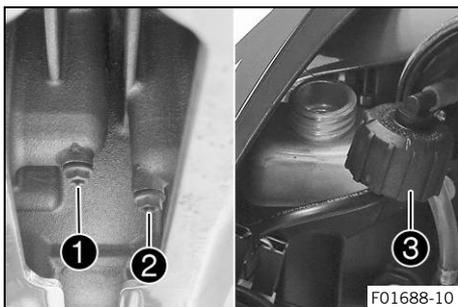

Info
 The screws are located under the electric motor and can be accessed through a recess in the motor guard.

- Remove radiator cap ③.
- Completely drain the coolant.
- Mount screws ① and ② with a new seal ring and tighten.

Guideline

Coolant drain plug	M6	10 Nm (7.4 lbf ft)
--------------------	----	--------------------



18.5 Refilling with coolant



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition


The motor is cold.

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

Main work

- Ensure that the screws ① and ② are tightened.

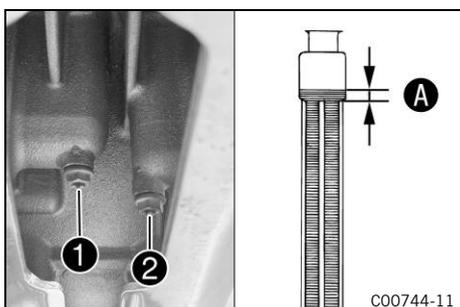

Info

The screws are located under the electric motor and can be accessed through a recess in the motor guard.

- Position the motorcycle upright.
- Pour coolant in up to measurement A above the radiator fins.

Guideline

10 mm (0.39 in)

Coolant	0.7 l (0.7 qt.)	Coolant (📖 p. 137)
---------	-----------------	--------------------

- Mount the radiator cap.

Finishing work

- Remove the protection cap. (📖 p. 71)
- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Go for a short test ride.
- Check the cooling system for leaks.
- Check the coolant level. (📖 p. 118)

19.1 Selecting the driving mode

Condition

Alternative 1


The motorcycle is stationary.
The motorcycle is ready for operation.

Alternative 2


The motorcycle is stationary.
The motorcycle is ready to drive.

Alternative 3

The motorcycle is moving.
≤ 5 km/h (≤ 3.1 mph)
The throttle grip is in the basic position.

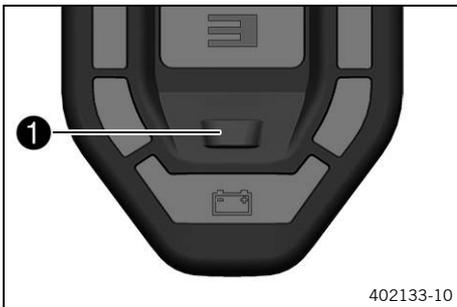

- Press and hold driving mode tip switch **1** for at least one second.
- ✓ Driving mode is activated when the tip switch is let go.

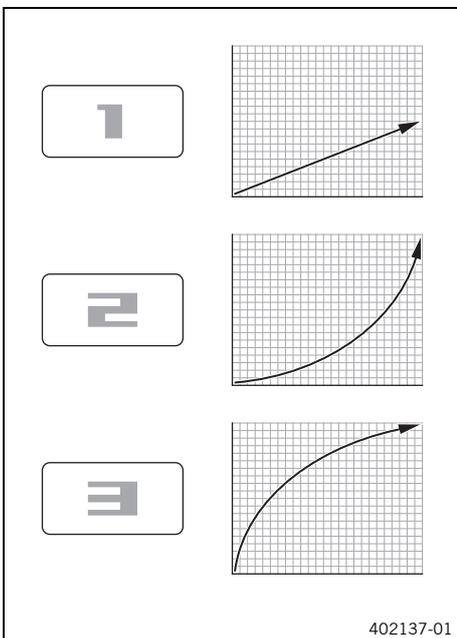

- Select one of the driving modes.
- The driving mode **1** is Economy: the motor torque is reduced by half.
- Driving mode **2** is Standard: the further the throttle grip is twisted open, the more the motor power increases.
- The driving mode **3** is Advanced: the greatest increase in power occurs immediately, after which the motor power increases more slowly.

i Info
A red indicator lamp with the number **1**, **2** or **3** shows the driving mode selected.
Three drive modes are available. The drive modes define how the vehicle will respond to operation of the throttle grip.
The figures contain approximate values for illustration purposes and do not show the actual response.

20.1 Changing the gear oil



Warning

Danger of scalding Gear oil becomes very hot when the motorcycle is operating.

- Wear suitable protective clothing and safety gloves.
- If you have been scalded, hold the burn under lukewarm water immediately.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info


Drain the gear oil while the motor is warm.

Preparatory work


- Stand the motorcycle on its side stand on a horizontal surface.
- Deactivate the vehicle. ( p. 43)
- Fold the seat up. ( p. 69)
- Remove the KTM PowerPack. ( p. 107)
- Mount the protection cap. ( p. 71)

Main work

- Place an appropriate container under the engine.
- Remove oil drain plug .

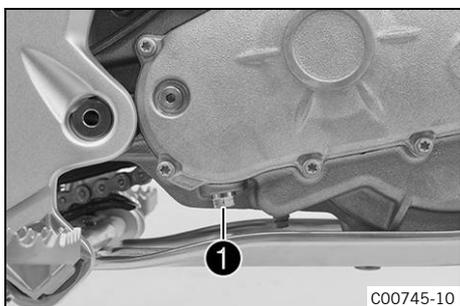

- Remove screw plug .
- Let the gear oil drain fully.

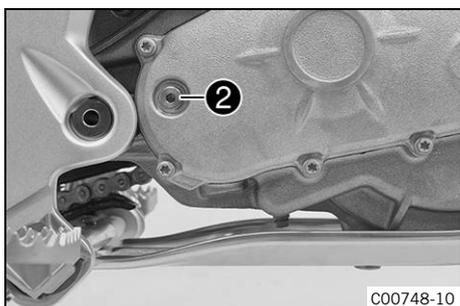



- Mount and tighten oil drain plug .

Guideline

Oil drain plug with magnet	M12x1.5x12	20 Nm (14.8 lbf ft)
----------------------------	------------	---------------------

- Place the motorcycle on its left side with the aid of an assistant.

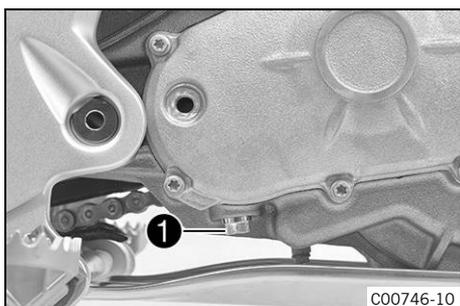

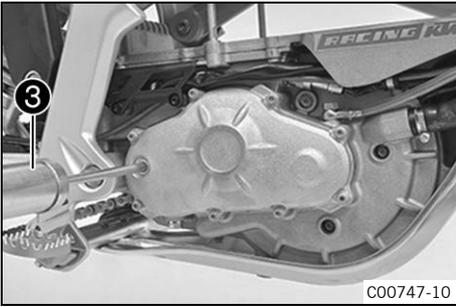


- Fill special tool ③ with the specified quantity of gear oil.

Oil filler syringe (58429048000)		
----------------------------------	--	--

Gear oil	0.2 l (0.2 qt.)	Gear oil (SAE 80W/90) (📖 p. 137)
----------	-----------------	-------------------------------------

- Fill the gear oil using the special tool.
- Wipe away any excess gear oil.

i Info
The screw plug is not used for checking the oil level!

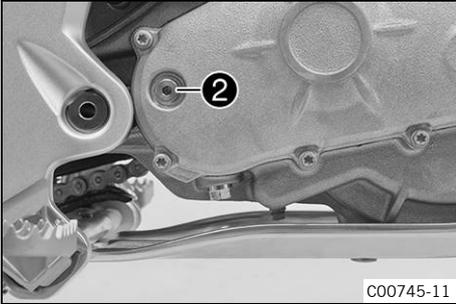

- Mount and tighten screw plug ②.

Guideline

Oil seal plug	M10	8 Nm (5.9 lbf ft)
---------------	-----	-------------------

- Stand the motorcycle upright.

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)
- Go for a short test ride and check the motor has no leaks.



21.1 Cleaning the motorcycle

Note

Material damage The vehicle and the KTM PowerPack are not suitable for high-pressure cleaning. The high pressure allows water to penetrate electrical components, plugs, bearings, etc. This results in components being damaged or destroyed.

- Never clean the vehicle and the KTM PowerPack with high-pressure cleaning equipment or a strong jet of water.

Note

Material damage Water or dirt damage or destroy components.

- Always mount the protection cap after you have removed the KTM PowerPack.
- Do not point the jet of water toward the battery discharge plug, even if the protection cap has been mounted.



Note


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info

To maintain the value and appearance of the motorcycle over a long period, clean it regularly. Avoid direct sunshine when cleaning the motorcycle.

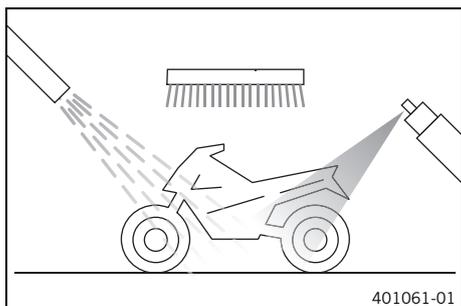

Preparatory work

- Deactivate the vehicle. (📖 p. 43)
- Fold the seat up. (📖 p. 69)
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)

Main work

- Remove coarse dirt particles with a gentle water jet.
- Spray heavily soiled parts with a normal commercial motorcycle cleaner and then brush off with a soft brush.

Motorcycle cleaner (📖 p. 139)



Info

Use warm water containing normal motorcycle cleaner and a soft sponge. Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- Lubricate all sliding points and pivot points.
- Clean the chain. (📖 p. 72)

- Treat bare metal (except for brake discs) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber (📖 p. 139)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (📖 p. 139)

- Oil the steering lock.

Universal oil spray (📖 p. 139)

Finishing work

- Install the KTM PowerPack. (📖 p. 108)
- Lock the seat. (📖 p. 69)




21.2 Checks and maintenance steps for winter operation

i Info

If you use the motorcycle in winter, salt can be expected on the roads. You should therefore take precautions against aggressive road salt.

If the vehicle was operated in road salt, clean it with cold water after riding. Warm water would enhance the corrosive effects of salt.

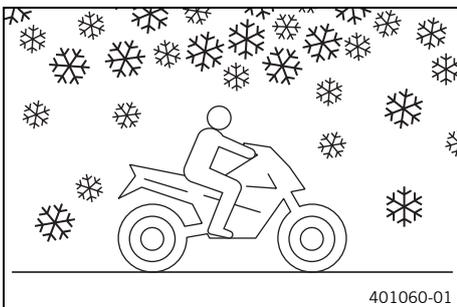

- Clean the motorcycle. (📖 p. 124)
- Clean the brake system.

i Info

After **EVERY** trip on salted roads, thoroughly wash the brake calipers and brake linings with cold water and dry carefully. This should be done after the parts are cooled down and while they are installed.

After riding on salted roads, thoroughly wash the motorcycle with cold water and dry it well.

- Treat the engine, the link fork, and all other bare or zinc-plated parts (except brake discs) with a wax-based corrosion inhibitor.

i Info

Corrosion inhibitor must not come in contact with the brake discs as this would greatly reduce the braking force.


- Clean the chain. (📖 p. 72)



22.1 Storage

i Info

If the motorcycle is not being used for an extended length of time, additional measures are recommended. Have service work, repairs or conversions performed outside the motorcycling season, if possible. This allows you to avoid long waiting periods when the next season starts.

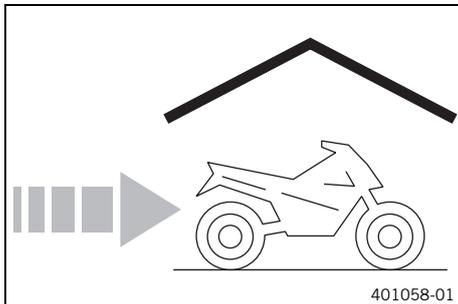

- Discharge the KTM PowerPack to a charging level of 50%.
- Check all motorcycle parts for function and wear.
- Remove the KTM PowerPack. (📖 p. 107)
- Mount the protection cap. (📖 p. 71)
- Remove the 12 V battery. 🛠️ (📖 p. 98)
- Charge the KTM PowerPack in the **Storage** charging mode. (📖 p. 113)

Guideline

The maximum period of inactivity of the KTM PowerPack is 1 year.	
--	--

Ideal storage temperature of the KTM PowerPack without direct sunlight	10 ... 20 °C (50 ... 68 °F)
--	-----------------------------

i Info

Never store the KTM PowerPack at higher temperatures as this would greatly accelerate the aging process.

- Charge the 12 V battery. 🛠️ (📖 p. 99)

Guideline

Storage temperature of the 12-V battery away from direct sunlight	0 ... 35 °C (32 ... 95 °F)
---	----------------------------

- Clean the motorcycle. (📖 p. 124)
- Check the antifreeze and coolant level. (📖 p. 117)
- Check tire pressure. (📖 p. 95)
- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

i Info

If the vehicle is placed on a lift stand, the tires and spring elements will be relieved of weight.

- Raise the motorcycle with a lift stand. (📖 p. 57)
- Cover the vehicle with a tarp or similar cover that is permeable to air.


i Info

Do not use any non-porous materials, as moisture cannot escape and corrosion can occur.

22.2 Preparing for use after storage


i Info

If the KTM PowerPack has not been used for more than six months, start by discharging the KTM PowerPack until the vehicle switches off with blink code 11. Then recharge the KTM PowerPack completely.

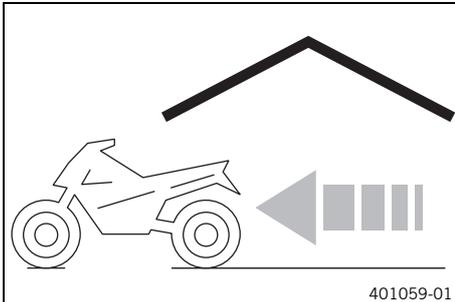

- Remove the motorcycle from the lift stand. (📖 p. 57)
- Install the 12-V battery. 🛠️ (📖 p. 98)
- Install the KTM PowerPack. (📖 p. 108)
- Perform checks and maintenance measures when preparing for use. (📖 p. 40)
- Take a test ride.

23.1 Vehicle troubleshooting

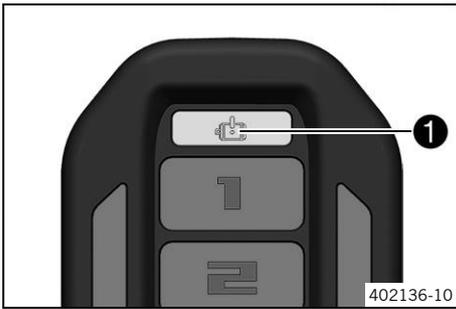

The errors are indicated by the yellow malfunction indicator lamp **1** and by acoustic signals that sound at the same time.

i Tip

The first step to take in case of any error is to switch off the vehicle at the main switch, wait for 15 seconds, and then switch the vehicle back on.
If a fault is not eliminated by the measures specified here, or a blink code is not listed, an authorized KTM workshop will be happy to help you.


i Info

The pause between the signals of the 1st digit is 0.25 seconds.
The pause between the 1st and 2nd digits is 1 second.
The pause between the signals of the 2nd digit is also 0.25 seconds.
The pause until the blink code repeats is 3 seconds.

Faults	Possible cause	Action
Blink code 11 on the vehicle	KTM PowerPack is discharged	<ul style="list-style-type: none"> – Charge the KTM PowerPack. (📖 p. 111) – Use the charged KTM PowerPack.
Blink code 13 on the vehicle	Fault during charging	<ul style="list-style-type: none"> – Stop charging, switch off the main switch, and restart charging.
Blink code 22 on the vehicle	Overtemperature of the control unit	<ul style="list-style-type: none"> – Check the coolant level. (📖 p. 118) – Check the radiator for dirt.
Blink code 23 on the vehicle	Overtemperature of the electric motor	<ul style="list-style-type: none"> – Check the coolant level. (📖 p. 118) – Check the radiator for dirt.
Blink code 24 on the vehicle	Overtemperature of the KTM PowerPack	<ul style="list-style-type: none"> – Let the KTM PowerPack cool down.
Blink code 31 on the vehicle	Fault in the CAN communication	<ul style="list-style-type: none"> – Switch the main switch off and on. – Check the KTM PowerPack for correct positioning. – Check the connection of the multifunction display for loose connectors.
Blink code 33 on the vehicle	Fault in the communication with the KTM PowerPack	<ul style="list-style-type: none"> – Switch the main switch off and on. – Check the KTM PowerPack for correct positioning.
Blink code 34 on the vehicle	Fault in the communication with the multifunction display	<ul style="list-style-type: none"> – Switch the main switch off and on. – Check the connection of the multifunction display for loose connectors.
Blink code 41 on the vehicle	Fault in the throttle grip	<ul style="list-style-type: none"> – Switch the main switch off and on. – Check the throttle grip for external damage.
Blink code 42 on the vehicle	Fault in the rotor position sensor	<ul style="list-style-type: none"> – Switch the main switch off and on.
Blink code 43 on the vehicle	Fault in the KTM PowerPack	<ul style="list-style-type: none"> – Switch the main switch off and on.

Faults	Possible cause	Action
Blink code 44 on the vehicle	Fault in the 12 V supply	<ul style="list-style-type: none"> – Charge the 12 V battery. 📖 (p. 99) – Install a new 12 V battery.
Blink code 45 on the vehicle	Fault in the electric motor	<ul style="list-style-type: none"> – Switch the main switch off and on.
Blink code 46 on the vehicle	Fault in the onboard network wiring harness or in a switch	<ul style="list-style-type: none"> – Switch the main switch off and on. – Check the onboard network wiring harness and plug-in connections for external damage.
Blink code 51 on the vehicle	Electric motor control unit error	<ul style="list-style-type: none"> – Switch the main switch off and on.
Blink code 52 on the vehicle	Fault in the moisture monitor	<ul style="list-style-type: none"> – Switch the main switch off and on.
Blink code 53 on the vehicle	Fault in the KTM PowerPack relay	<ul style="list-style-type: none"> – Switch the main switch off and on.
Blink code 54 on the vehicle	Fault in the insulation monitor	<ul style="list-style-type: none"> – Clean and dry the discharge plug and discharge socket without compressed air.
Speedometer values deleted (time, stop watch, lap times)	The combination instrument battery is empty	<ul style="list-style-type: none"> – Change the combination instrument battery. 📖 (p. 106)
The high beam, low beam, position light, tail light, and license plate lamp are not working	Fuse 3 blown	<ul style="list-style-type: none"> – Change the fuses of individual power consumers. 📖 (p. 100)
The combination instrument, horn, brake light, and turn signal are not working	Fuse 4 blown	<ul style="list-style-type: none"> – Change the fuses of individual power consumers. 📖 (p. 100)

23.2 Troubleshooting of the battery charger

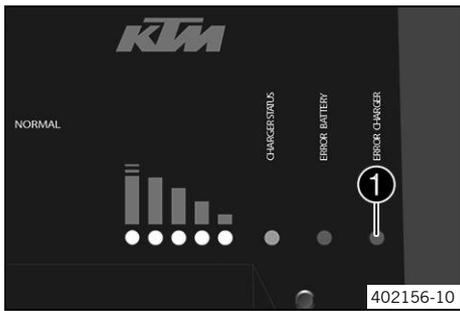


The faults are indicated by LED ❶ on the battery charger. All of the following blink codes are displayed on the charger and refer to the charger itself.

i Tip
The first step to take in case of any fault is to switch off the battery charger, wait for 15 seconds, and then switch it back on.
If a fault is not eliminated by the measures specified here, or a blink code is not listed, an authorized KTM workshop will be happy to help you.

i Info
The pause between the signals of the 1st digit is 0.25 seconds.
The pause between the 1st and 2nd digits is 1 second.
The pause between the signals of the 2nd digit is also 0.25 seconds.
The pause until the blink code repeats is 3 seconds.

Faults	Possible cause	Action
Blink code 11 on battery charger	Fault in the charging cable	– Check the charging plug and charging cable for external damage and dirt and reconnect.
Blink code 12 on battery charger	Fault in the charging cable	– Check the charging plug and charging cable for external damage and dirt and reconnect.
Blink code 13 on battery charger	Fault in the charging cable	– Check the charging plug and charging cable for external damage and dirt and reconnect.
Blink code 51 on battery charger	Overtemperature of the battery charger	– Let the charger cool down. – Continue charging in a cooler location.
Blink code 63 on battery charger	Fault in the supply voltage	– Use the Normal charging mode. – Choose a socket closer to the central supply.
Blink code 65 on battery charger	Fault in the supply voltage	– Use the Normal charging mode. – Choose a socket closer to the central supply.

23.3 Troubleshooting of the KTM PowerPack when connected to the battery charger

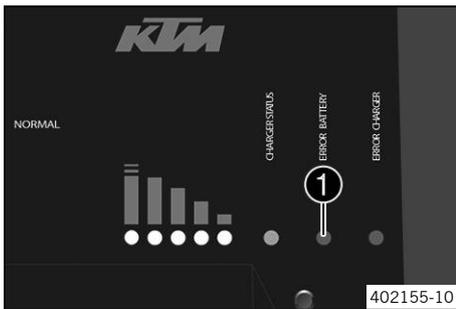

The faults are indicated by LED ❶ on the battery charger. All of the following blink codes are displayed on the charger and refer to the KTM PowerPack.

Tip
 The first step to take in case of any fault is to switch off the battery charger, wait for 15 seconds, and then switch it back on.
 If a fault is not eliminated by the measures specified here, an authorized KTM workshop will be happy to help you.

Info
 The pause between the signals of the 1st digit is 0.25 seconds.
 The pause between the 1st and 2nd digits is 1 second.
 The pause between the signals of the 2nd digit is also 0.25 seconds.
 The pause until the blink code repeats is 3 seconds.

Faults	Possible cause	Action
Blink code 11 on battery charger	Charging fault	– Check the charging plug and charging cable for external damage and dirt and reconnect.
Blink code 33 on battery charger	Overtemperature of the KTM PowerPack	– Let the KTM PowerPack cool down.
Blink code 34 on battery charger	Undertemperature of the KTM PowerPack	– Place the KTM PowerPack in a warmer location and let it warm up. – Continue charging in a warmer location.
Blink code 36 on battery charger	Undertemperature of the KTM PowerPack	– Place the KTM PowerPack in a warmer location and let it warm up. – Continue charging in a warmer location.
Blink code 64 on battery charger	Charging cable detected in activated vehicle	– Switch off the main switch on the vehicle and restart charging.
Blink code 65 on battery charger	Fault in the charging cable	– Check the charging plug and charging cable for external damage and dirt and reconnect.
Blink code 66 on battery charger	The KTM PowerPack charge level is too high for the Storage charging mode	– Ride the vehicle until the KTM PowerPack is depleted to below 50%.
Blink code 73 on battery charger	The KTM PowerPack is not enabled	– Contact an authorized KTM workshop.

24.1 Engine

Design	Permanent magnet synchronous motor with a disc motor design
Primary transmission	1:2.4
Cooling	Water cooling, permanent circulation of coolant by electric water pump

24.2 Engine tightening torques

Coolant drain plug	M6	10 Nm (7.4 lbf ft)
Oil seal plug	M10	8 Nm (5.9 lbf ft)
Oil drain plug with magnet	M12x1.5x12	20 Nm (14.8 lbf ft)

24.3 Capacities

24.3.1 Gear oil

Gear oil	0.2 l (0.2 qt.)	Gear oil (SAE 80W/90) (📖 p. 137)
----------	-----------------	----------------------------------

24.3.2 Coolant

Coolant	0.7 l (0.7 qt.)	Coolant (📖 p. 137)
---------	-----------------	--------------------

24.4 Chassis

Frame	Perimeter, steel-aluminum composite frame	
Fork	WP SuspensionXplor 43	
Suspension travel		
front	250 mm (9.84 in)	
rear	260 mm (10.24 in)	
Fork offset	20 mm (0.79 in)	
Shock absorber	WP SuspensionXplor PDS	
Brake system		
front	Disc brake with radially mounted 4-piston brake caliper	
rear	Disc brake with radially mounted 2-piston brake caliper	
Brake discs - diameter		
front	260 mm (10.24 in)	
rear	230 mm (9.06 in)	
Brake discs - wear limit		
front	3.7 mm (0.146 in)	
rear	3.5 mm (0.138 in)	
Offroad tire pressure		
front	0.9 bar (13 psi)	
rear	0.7 bar (10 psi)	
Street tire pressure		
front	1.5 bar (22 psi)	

rear	1.5 bar (22 psi)
Secondary ratio	11:48
Chain	5/8 x 1/4" X-ring
Rear sprockets available	46, 48
Steering head angle	67°
Wheelbase	1,418 ± 10 mm (55.83 ± 0.39 in)
Ground clearance, unloaded	340 mm (13.39 in)
Seat height, unloaded	910 mm (35.83 in)
Homologated weight with KTM PowerPack approx.	111 kg (245 lb.)
Maximum permissible front axle load	110 kg (243 lb.)
Maximum permissible rear axle load	170 kg (375 lb.)
Maximum permissible overall weight	280 kg (617 lb.)

24.5 Electrical system

12 V battery	70011053000	Battery voltage: 12 V Nominal capacity: 1.2 Ah Maintenance-free
Combination instrument battery	CR 2430	Battery voltage: 3 V
Air-cooled lithium-ion battery (KTM PowerPack)	70145053000	End of charging voltage: 300 V Voltage (nominal): 260 V Capacity: 3.9 kWh Weight: 29 kg (64 lb.) Approx. charging time in charging mode Fast , 0 % to 80 %: 75 min Approx. charging time in charging mode Fast , 0 % to 100 %: 105 min Approx. charging time in charging mode Normal , 0 % to 80 %: 90 min Approx. charging time in charging mode Normal , 0 % to 100 %: 135 min Maintenance-free
Battery charger for KTM PowerPack	70029074000	Nominal voltage: 230 V Grid frequency: 50 Hz Power: 3,000 W
Fuse	75011088010	10 A
Fuse	75011088020	20 A
Headlight	HS1 / socket PX43t	12 V 35/35 W
Position light	W5W / socket W2.1x9.5d	12 V 5 W
Indicator lamps	W2.3W / socket W2x4.6d	12 V 2.3 W
Turn signal	R10W/socket BA15s	12 V 10 W
Brake/tail light	LED	
License plate lamp	W5W/socket W2.1x9.5d	12 V 5 W

24.6 Tires

Front tire	Rear tire
2.75 - 21 M/C 45M TT MAXXIS TRIALMAXX	4.00 R 18 M/C 64M TL MAXXIS TRIALMAXX
The tires specified represent one of the possible series production tires. Additional information is available in the Service section under: http://www.ktm.com	

24.7 Fork

Fork article number	05.18.8S.40	
Fork	WP SuspensionXplor 43	
Compression damping		
Comfort	18 clicks	
Standard	15 clicks	
Sport	12 clicks	
Rebound damping		
Comfort	18 clicks	
Standard	15 clicks	
Sport	12 clicks	
Spring length with spring guide and preload spacer(s)	427 mm (16.81 in)	
Spring rate		
Weight of rider: 65 ... 75 kg (143 ... 165 lb.)	4.6 N/mm (26.3 lb/in)	
Weight of rider: 75 ... 85 kg (165 ... 187 lb.)	4.8 N/mm (27.4 lb/in)	
Weight of rider: 85 ... 95 kg (187 ... 209 lb.)	5.0 N/mm (28.6 lb/in)	
Fork length	845 mm (33.27 in)	
Fork oil per fork leg	383 \pm 5 ml (12.95 \pm 0.17 fl. oz.)	Fork oil (SAE 4) (48601166S1) (📖 p. 137)

24.8 Shock absorber

Shock absorber article number	12.18.7S.40	
Shock absorber	WP SuspensionXplor PDS	
Low-speed compression damping		
Comfort	18 clicks	
Standard	15 clicks	
Sport	12 clicks	
High-speed compression damping		
Comfort	2 turns	
Standard	2 turns	
Sport	1.5 turns	
Rebound damping		
Comfort	18 clicks	
Standard	15 clicks	
Sport	12 clicks	
Spring preload	8 mm (0.31 in)	

Spring rate	
Weight of rider: 65 ... 75 kg (143 ... 165 lb.)	66 N/mm (377 lb/in)
Weight of rider: 75 ... 85 kg (165 ... 187 lb.)	68 N/mm (388 lb/in)
Weight of rider: 85 ... 95 kg (187 ... 209 lb.)	69 N/mm (394 lb/in)
Spring length	200 mm (7.87 in)
Gas pressure	10 bar (145 psi)
Static sag	30 mm (1.18 in)
Riding sag	90 mm (3.54 in)
Fitted length	367 mm (14.45 in)
Damper oil	Shock absorber fluid (SAE 2.5) (50180751S1) (📖 p. 138)

24.9 Chassis tightening torques

Screw for spoiler, top	EJOT PT® K60x20AL	3 Nm (2.2 lbf ft)
Screw, front spoiler	EJOT PT® K60x30-Z	3 Nm (2.2 lbf ft)
Screw, fixed grip	M4	5 Nm (3.7 lbf ft) Loctite®243™
Spoke nipple	M4.5	6 Nm (4.4 lbf ft)
Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)
Screws, throttle grip	M5	3 Nm (2.2 lbf ft)
KTM PowerPack attachment	M6	10 Nm (7.4 lbf ft)
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Screw for spoiler attachment	M6	5 Nm (3.7 lbf ft)
Screw, front brake disc	M6	14 Nm (10.3 lbf ft) Loctite®243™
Screw, radiator bracket	M6	6 Nm (4.4 lbf ft)
Screw, rear brake disc	M6	14 Nm (10.3 lbf ft) Loctite®243™
KTM PowerPack attachment	M8	15 Nm (11.1 lbf ft) Loctite®243™
Nut, rear sprocket screw	M8	35 Nm (25.8 lbf ft) Loctite®2701™
Nut, rim lock	M8	10 Nm (7.4 lbf ft)
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)
Screw, bottom triple clamp	M8	18 Nm (13.3 lbf ft)
Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)
Screw, fork stub	M8	15 Nm (11.1 lbf ft)
Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
Screw, rear brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
Screw, side stand attachment	M8	25 Nm (18.4 lbf ft) Loctite®2701™

24 TECHNICAL DATA

Screw, subframe	M8	30 Nm (22.1 lbf ft) Loctite®243™
Screw, top steering stem	M8	17 Nm (12.5 lbf ft) Loctite®243™
Screw, top triple clamp	M8	22 Nm (16.2 lbf ft)
Motor bracket screw	M10	60 Nm (44.3 lbf ft)
Remaining nuts, chassis	M10	45 Nm (33.2 lbf ft)
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)
Screw, cross bar	M10	45 Nm (33.2 lbf ft)
Screw, footrest bracket	M10	45 Nm (33.2 lbf ft) Loctite®243™
Screw, handlebar support	M10	40 Nm (29.5 lbf ft) Loctite®243™
Screw, motor guard	M10	30 Nm (22.1 lbf ft)
Screw, subframe top	M10	45 Nm (33.2 lbf ft) Loctite®243™
Screw, bottom shock absorber	M12	80 Nm (59 lbf ft) Loctite®2701™
Screw, top shock absorber	M12	80 Nm (59 lbf ft) Loctite®2701™
Nut, swingarm pivot	M14x1.5	75 Nm (55.3 lbf ft)
Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
Screw, front wheel spindle	M20x1.5	35 Nm (25.8 lbf ft)
Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)

Brake fluid DOT 4 / DOT 5.1**Standard/classification**

- DOT

Guideline

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier**Castrol**

- REACT PERFORMANCE DOT 4

MOTOREX®

- Brake Fluid DOT 5.1

Coolant**Guideline**

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

Antifreeze protection to at least	-25 °C (-13 °F)
-----------------------------------	-----------------

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

Recommended supplier**MOTOREX®**

- COOLANT M3.0

Fork oil (SAE 4) (48601166S1)**Standard/classification**

- SAE (📖 p. 140) (SAE 4)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Gear oil (SAE 80W/90)**Standard/classification**

- SAE (📖 p. 140) (SAE 80W/90)

Guideline

- Use only gear oils that comply with the specified standards (see specifications on the container) and that exhibit the required properties.

Semi-synthetic gear oil

Recommended supplier**MOTOREX®**

- Gear Oil

Shock absorber fluid (SAE 2.5) (50180751S1)

Standard/classification

- SAE (📖 p. 140) (SAE 2.5)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Chain cleaner

Recommended supplier
MOTOREX®
– Chain Clean

High viscosity grease

Recommended supplier
SKF®
– LGHB 2

Long-life grease

Recommended supplier
MOTOREX®
– Bike Grease 2000

Motorcycle cleaner

Recommended supplier
MOTOREX®
– Moto Clean

Off-road chain spray

Recommended supplier
MOTOREX®
– Chainlube Offroad

Preserving materials for paints, metal and rubber

Recommended supplier
MOTOREX®
– Moto Protect

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier
MOTOREX®
– Quick Cleaner

Universal oil spray

Recommended supplier
MOTOREX®
– Joker 440 Synthetic

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

BIN	Battery identification number	Serial number of the KTM PowerPack; this is linked to the vehicle's identification number
-----	-------------------------------	---

29 LIST OF ABBREVIATIONS

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

30.1 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	The malfunction indicator lamp flashes – A error is present in the vehicle electronic system.
---	---

30.2 Green and blue symbols

Green and blue symbols reflect information.

	The high beam indicator lamp lights up blue – The high beam is switched on.
	Turn signal indicator lamp flashes green – The turn signal is switched on.

1	
12-V battery	
charging	99
installing	98
removing	98
A	
Accessories	13
Accident	11
Antifreeze	
checking	117
Auxiliary substances	13
B	
Basic chassis setting	
checking with rider's weight	47
Battery charger	
overview	109
positioning	109
Battery discharge plug form ring	
checking	71
Brake discs	
checking	79
Brake fluid	
front brake, adding	81
of rear brake, adding	86
Brake fluid level	
front brake, checking	80
rear brake, checking	86
Brake linings	
front brake, changing	82
front brake, checking	82
of rear brake, changing	88
rear brake, checking	88
Brake system	79-90
C	
Capacity	
coolant	120, 132
gear oil	123, 132
Chain	
checking	75
cleaning	72
dirt, checking for	72
Chain guide	
checking	75
Chain tension	
adjusting	74
checking	73
Charge level indicator	24
Charging socket protection cap	
changing	115
Combination instrument	
combination instrument battery, changing	106
kilometers or miles, setting	27
lap time, viewing	29
overview	27
setting	28
setting the clock	29
Compression damping	
fork, adjusting	54
Coolant	
draining	119
refilling	120
Coolant level	
checking	117-118
Cooling system	117
Customer service	13
D	
Driving mode	
selection	121
Driving mode display	24
Driving mode tip switch	23
E	
Engine sprocket	
checking	75
Environment	12
F	
Fall	11
Figures	13
Fire hazard	12
Fork legs	
basic setting, checking	53
bleeding	58
dust boots, cleaning	59
installing	61
removing	60
Fork protector	
installing	59
removing	58
Frame	
checking	77
Front brake lever	19
free travel, adjusting	79
free travel, checking	79
Front fender	
installing	67
removing	66

Front wheel	
installing	91
removing	91
Fuel, oils, etc.	13
Fuses	
individual power consumers, changing	100
G	
Gear oil	
changing	122
H	
Handlebar position	55
adjusting	55
Headlight	
range, adjusting	105
Headlight bulb	
changing	103
Headlight mask with headlight	
installing	102
removing	101
Headlight setting	
checking	105
High-speed compression damping	
shock absorber, adjusting	48
Horn button	20
I	
Ignition lock	21
Implied warranty	13
Intended use	6
K	
Key number	17
KTM PowerPack	
battery identification number (BIN)	18
charging	111
charging in Storage charging mode	113
installing	108
new	14
removing	107
transport	44
work	11
L	
Light switch	20
Link fork	
checking	77
Lower triple clamp	
installing	62
removing	61
Low-speed compression damping	
shock absorber, adjusting	47
M	
Main switch	19
Malfunction indicator lamp	24
Manufacturer warranty	13
Misuse	6
Motor	
work	11
Motor number	17
Motorcycle	
cleaning	124
lift stand, raising with	57
lift stand, removing from	57
Multifunction display	23
overview	23
O	
Operation	
at low temperatures	14
Overview of indicator lamps	26
Owner's Manual	12
P	
Power reduction	25
Preparing for use	
advice on preparing for first use	39
after storage	127
checks and maintenance measures when	
preparing for use	40
Protection cap	
mounting	71
removing	71
Protective clothing	11
R	
Rear brake lever	19
free travel, adjusting	85
free travel, checking	85
Rear sprocket	
checking	75
Rear wheel	
installing	93
removing	92
Rebound damping	
fork, adjusting	54
shock absorber, adjusting	49
Rechargeable lithium-ion battery	
transport	44
work	11
Recuperation	42
Residual current protection switch	
checking	110

Riding sag	
setting	53
Rubber grip	
checking	78
S	
Safe operation	10
Safety advice	7
Seat	
folding up	69
locking	69
Service	13
Service schedule	45-46
Shock absorber	
installing	68
removing	68
riding sag, checking	51
spring preload, adjusting	52
static sag, checking	51
Side stand	21
Spare parts	13
Spoiler	
installing	70
removing	69
Spoke tension	
checking	96
Start button	20
Starting	40
Steering	
locking	22
unlocking	22
Steering head bearing	
greasing	66
Steering head bearing play	
checking	64
setting	65
Storage	126-127
System voltage	14
T	
Technical data	
capacities	132
chassis	132
chassis tightening torques	135
electrical system	133
engine	132
engine tightening torques	132
fork	134
shock absorber	134
tires	134
Throttle grip	19
Tire condition	
checking	95
Tire pressure	
checking	95
Troubleshooting	128-131
battery charger	130
of KTM PowerPack on battery charger	131
vehicle	128
Turn signal bulb	
changing	104
Turn signal switch	21
Type label	17
U	
Use definition	6
V	
Vehicle	
deactivating	43
transport	44
work	11
Vehicle identification number	17
View of vehicle	
front left	15
rear right	16
W	
Warning labels	7
Winter operation	
checks and maintenance steps	125

READY TO RACE

>> www.ktm.com



3213862en

07/2018



KTM

KTM Sportmotorcycle GmbH
5230 Mattighofen/Austria
<http://www.ktm.com>



Photo: Mitterbauer/KTM



READY TO RACE

>> www.ktm.com

RESCUE CARD

KTM Freeride E 2019




Model example



 112 European emergency number

 Technical emergency number
<http://www.ktm.com/rescuecard>

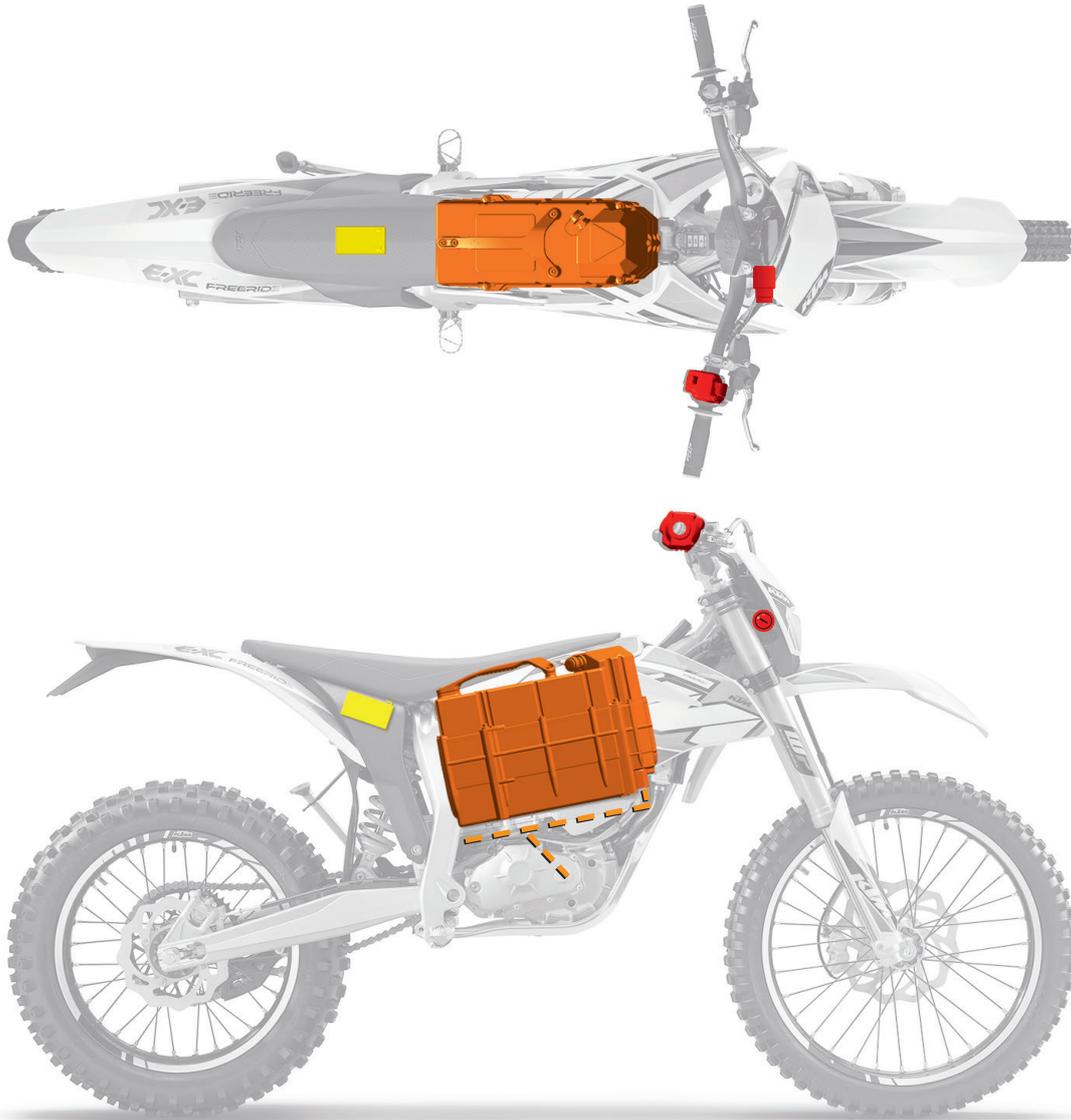

Main switch




Ignition lock



High-voltage cabling
in motor housing



KTM PowerPack
(high-voltage battery,
260 V)

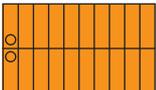


12-V battery
for onboard network




Art. no. 3213984en
07.2018

General information


- The KTM Freeride E is a high-voltage electric motorcycle with a lithium-ion battery (KTM PowerPack, 260 V).
- The high-voltage components in the vehicle are identified by yellow warning labels.
- The high-voltage cables in the motor housing and in the KTM PowerPack can be identified by the orange color of their insulation.
- Before beginning work on the vehicle, switch off main switch ① to the right of the handlebar and ignition lock ② on the right behind the headlight mask ☒.

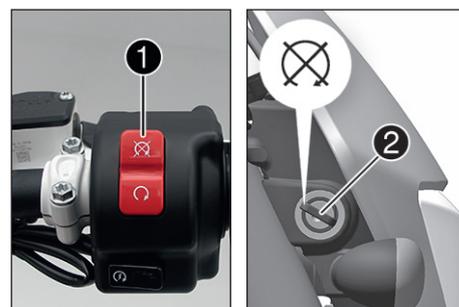

Version 1: Lightly damaged vehicle

(Orange high-voltage cable is not visible, no visible damage to KTM PowerPack)

1. Switch off main switch ① and ignition lock ② ☒.
2. Unlock the seat ③ and fold it up.
3. Disconnect the 12-V battery ④.
4. Loosen the hex screws size 10 ⑤.
5. Remove the KTM PowerPack ⑥.

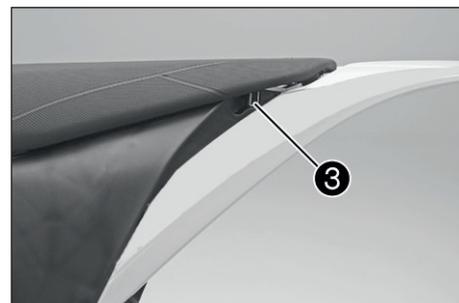

Version 2: Severely damaged vehicle


(Orange high-voltage cable is visible and/or metallic penetration of the KTM PowerPack)

i The intrinsic safety of the high-voltage system of the vehicle cannot be determined from the outside.

⚠ Using suitable high-voltage protective equipment, the vehicle must be de-energized by removing the KTM PowerPack (high-voltage battery).

⚠ The following steps must be performed by persons with high-voltage training only!

1. Switch off main switch ① and ignition lock ② ☒.
2. Unlock the seat ③ and fold it up.
3. Disconnect the 12-V battery ④.
4. Loosen the hex screws size 10 ⑤.
5. Removing the KTM PowerPack (high-voltage battery, 260 V) ⑥.
6. Securing the KTM PowerPack.
7. Contacting KTM Customer Service.

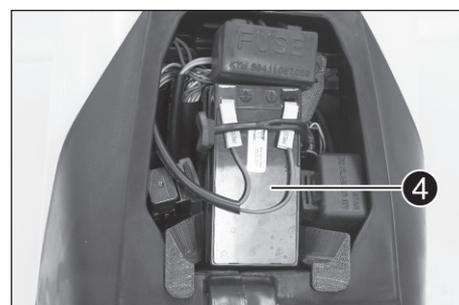

Version 3: Vehicle fire

- Contact the fire rescue service and inform them that a vehicle with a lithium-ion battery is on fire.
- In the event of a vehicle fire, the usual regulations for low-voltage systems apply.
- If the KTM PowerPack was affected by the fire, the extinguishing and cooling process may take up to 24 hours. The surroundings must be protected accordingly.
- To cool a burning KTM PowerPack, use large quantities of water.
- When using branch pipes and water as an extinguishing agent, maintain a safety distance of **1 m for spraying** and **5 m for a full jet of water**.

