

OWNER'S MANUAL 2010

450 SMR

Art. no. 3211516en



KTM

Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it accordingly.

We wish you a lot of enjoyment in riding this vehicle!

Enter the serial numbers of your vehicle below.

Chassis number (☛ p. 9)	Dealer's stamp
Engine number (☛ p. 9)	

The owner's manual corresponded to the latest state of this series at the time of printing. Slight deviations resulting from continuing development and design of our motorcycles can however not be completely excluded.

All specifications are non-binding. KTM Sportmotorcycle AG specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of delivery.

© 2009 by KTM-Sportmotorcycle AG, Mattighofen Austria

All rights reserved

Reproduction, even in part, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

According to the international quality management standard ISO 9001, KTM uses quality assurance processes that lead to the maximum possible quality of the products.

Issued by: TÜV Management Service

KTM-Sportmotorcycle AG
5230 Mattighofen, Austria

MEANS OF REPRESENTATION	4	Adjusting the compression damping of the fork	25
IMPORTANT INFORMATION	5	Adjusting the rebound damping of the fork.....	26
VIEW OF VEHICLE.....	7	Bleeding fork legs.....	26
View of vehicle, front left side.....	7	Cleaning the dust boots of the fork legs	27
View of vehicle, rear right side	8	Removing the fork protector.....	27
LOCATION OF SERIAL NUMBERS	9	Installing the fork protection.....	27
Chassis number.....	9	Checking steering head bearing play.....	27
Type label.....	9	Adjusting play of steering head bearing 🛠️.....	28
Engine number.....	9	Fork offset	28
Fork part number.....	9	Adjusting the fork offset 🛠️	29
Shock absorber part number	9	Removing the fork legs 🛠️	29
CONTROLS	10	Installing the fork legs 🛠️.....	29
Clutch lever	10	Removing the lower triple clamp 🛠️	30
Hot start lever	10	Installing the lower triple clamp 🛠️	30
Hand brake lever	10	Greasing the steering head bearing 🛠️.....	31
Short circuit button	10	Removing the front fender.....	31
Electric starter button	10	Installing the front fender.....	31
Fuel tap.....	11	Dismount the start number plate.....	32
Opening filler cap.....	11	Installing the start number plate	32
Closing filler cap	11	Handlebar position	32
Choke.....	11	Adjusting handlebar position 🛠️.....	32
Shift lever.....	12	Checking throttle cable route.....	33
Foot brake lever.....	12	Checking the play in the throttle cable.....	33
Plug-in stand	12	Adjusting the play in the throttle cable 🛠️	33
GENERAL TIPS AND HINTS ON PUTTING INTO OPERATION.....	13	Checking for chain dirt accumulation	34
Advice on first use.....	13	Cleaning the chain.....	34
Running-in the engine	14	Checking the chain tension	34
RIDING INSTRUCTIONS	15	Checking chain tension when fitting rear wheel	35
Checks before putting into operation	15	Checking the rear sprocket/engine sprocket for wear	35
Starting.....	15	Checking chain wear	35
Starting up	16	Adjusting chain tension.....	36
Shifting, riding.....	16	Adjusting chain tension - after checking	37
Braking	16	Adjusting chain tension - fitting rear wheel	37
Stopping, parking.....	16	Adjusting chain guide 🛠️	38
Refueling.....	17	Checking brake discs	38
SERVICE SCHEDULE.....	18	Checking free travel on hand brake lever.....	38
Important maintenance work to be carried out by an authorized KTM workshop	18	Adjusting the basic position of the hand brake lever.....	39
Important maintenance work to be carried out by an authorized KTM workshop (as an additional order)	19	Checking the front brake fluid level	39
Important checks and maintenance work to be carried out by the rider	19	Adding front brake fluid 🛠️	39
MAINTENANCE WORK ON CHASSIS AND ENGINE.....	21	Checking the front brake linings.....	40
Jacking up the motorcycle.....	21	Removing front brake linings 🛠️	40
Removing the motorcycle from the work stand.....	21	Installing the front brake linings 🛠️.....	41
Checking the basic suspension setting with the rider's weight	21	Changing the front brake linings 🛠️.....	42
Compression damping of shock absorber.....	21	Checking the free travel of the foot brake lever	43
Adjusting the high-speed compression damping of the shock absorber.....	21	Adjusting the basic position of the foot brake lever 🛠️	43
Adjusting the low-speed compression damping of the shock absorber.....	22	Checking rear brake fluid level.....	43
Adjusting the rebound damping of the shock absorber.....	22	Adding brake fluid to the rear brake circuit 🛠️	44
Measuring rear wheel sag unloaded	23	Checking rear brake linings	44
Checking the static sag of the shock absorber	23	Removing rear brake linings 🛠️	45
Checking the riding sag of the shock absorber	23	Mounting rear brake linings 🛠️	45
Adjusting the spring preload of the shock absorber 🛠️	24	Changing the rear brake linings 🛠️.....	46
Adjusting the riding sag 🛠️.....	24	Removing the front wheel 🛠️	46
Removing the shock absorber 🛠️.....	25	Installing the front wheel 🛠️.....	47
Installing the shock absorber 🛠️.....	25	Removing the rear wheel 🛠️	48
Checking basic setting of fork.....	25	Installing the rear wheel 🛠️.....	48
		Checking the tire condition.....	49
		Checking the tire air pressure	50
		Checking spoke tension.....	50
		Removing the battery 🛠️	50
		Installing the battery 🛠️.....	51
		Recharging the battery 🛠️	51

Removing a fuse.....	52	WIRING DIAGRAM	82
Installing the fuse	52	Wiring diagram.....	82
Ignition curve plug connection.....	53	SUBSTANCES.....	84
Changing the ignition curve	53	AUXILIARY SUBSTANCES.....	86
Removing the seat	53	STANDARDS.....	88
Mounting the seat	53	INDEX	89
Removing the fuel tank 🛠️	53		
Installing the fuel tank 🛠️	54		
Cooling system.....	55		
Checking the anti-freeze and coolant level	55		
Checking the coolant level.....	56		
Draining coolant 🛠️	56		
Refilling coolant 🛠️	57		
Removing main silencer	57		
Installing the main silencer	57		
Glass fiber yarn filling of main silencer	58		
Removing the glass fiber yarn filling of the main silencer 🛠️	58		
Installing the glass fiber yarn filling of the main silencer 🛠️	58		
Changing glass fiber yarn filling of main silencer 🛠️	58		
Removing the air filter box lid	58		
Installing the air filter box lid.....	59		
Removing the air filter 🛠️.....	59		
Installing the air filter 🛠️	59		
Cleaning air filter 🛠️	59		
Adjusting basic position of clutch lever.....	60		
Antihopping clutch	60		
Adjusting the antihopping clutch	61		
Checking the fluid level of hydraulic clutch.....	62		
Changing the hydraulic clutch fluid 🛠️	62		
Checking the basic position of the shift lever.....	63		
Adjusting the basic position of the shift lever 🛠️	63		
Carburetor - idle	64		
Carburetor - adjusting the idle speed 🛠️	64		
Emptying the carburetor float chamber 🛠️	65		
Checking engine oil level.....	65		
Changing engine oil and oil filter, cleaning oil screen 🛠️ ...	66		
Draining the engine oil 🛠️	66		
Cleaning the oil screen 🛠️	66		
Removing the oil filter 🛠️	67		
Installing the oil filter 🛠️	67		
Filling up with engine oil 🛠️	68		
Topping up engine oil	68		
TRUBLESHOOTING.....	69		
CLEANING.....	71		
Cleaning the motorcycle.....	71		
STORAGE	72		
Storage.....	72		
Putting into operation after storage	72		
TECHNICAL DATA - ENGINE.....	73		
Capacity - engine oil	73		
Capacity - coolant.....	73		
TECHNICAL DATA - ENGINE TIGHTENING TORQUES.....	74		
TECHNICAL DATA - CARBURETOR.....	76		
TECHNICAL DATA - CHASSIS	77		
Capacity - fuel.....	78		
TECHNICAL DATA - FORK.....	79		
Capacity - fork oil	79		
TECHNICAL DATA - SHOCK ABSORBER	80		
TECHNICAL DATA - CHASSIS TIGHTENING TORQUES	81		

Symbols used

The symbols used are explained in the following.

-
- | | |
|--|---|
|  | Indicates an expected reaction (e.g. of a work step or a function). |
|  | Indicates an unexpected reaction (e.g. of a work step or a function). |
|  | All work marked with this symbol requires specialist knowledge and technical understanding. In the interest of your own safety, have these jobs done in an authorized KTM workshop! There, your motorcycle will be serviced optimally by specially trained experts using the specialist tools required. |
|  | Identifies a page reference (more information is provided on the specified page). |
-

Formats used

The typographical and other formats used are explained below.

-
- | | |
|-------------------------|---|
| Proprietary name | Denotes a proprietary name. |
| Name® | Denotes a protected name. |
| Brand™ | Denotes a brand available on the open market. |
-

Use definition

KTM sport motorcycles are designed and built to withstand the normal stresses and strains of competitive use. The motorcycles comply with currently valid regulations and categories of the top international motorsport organizations.



Info

The motorcycle must be used only in closed off areas remote from public road traffic.

Maintenance

A prerequisite for trouble free operation and avoiding premature wear is that the engine and suspension are maintained and adjusted as described in this manual. Poor adjustment and tuning of the engine and suspension can lead to damage and breakage of components.

Using a motorcycle in difficult conditions such as on sand or very wet and muddy ground can lead to excessive wear of components such as the power train or brakes. For this reason, it may be necessary to service or replace worn parts before the limit specified in the service schedule is reached.

Pay careful attention to the prescribed running-in period, inspection and maintenance intervals. Observing these rules will vastly increase the service life of your motorcycle.

Warranty

The work prescribed in the service schedule must be carried out by an authorized KTM workshop only and confirmed in the customer's service record; otherwise, all warranty claims will be void. No warranty claim can be honored for damage resulting from manipulation and/or other changes to the vehicle.

Fuel, oils, etc.

You should use the fuels, oils and greases according to specifications as listed in the owner's manual.

Spare parts, accessories

For your own safety, only use spare parts and accessory products that have been approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss. Some spare parts and accessories are specified in brackets in the respective descriptions. Your KTM dealer will be happy to advise you.

You will find the current **KTM PowerParts** for your vehicle on the KTM website.
International KTM Website: <http://www.ktm.com>

Work rules

Special tools are necessary for some of the work. These are not included with the vehicle and can be ordered under the number in parentheses. Ex: valve spring compressor (59029019000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

If thread lock (e.g. **Loctite**[®]) is used for screw connections, be sure to comply with the manufacturer's specific instructions on its usage.

Parts that you want to reuse following repairs and servicing should be cleaned and checked for damage and wear. Change damaged or worn parts.

Following repairs or servicing, the vehicle must be checked for roadworthiness.

Transport

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

Note

Fire hazard Some vehicle components become very hot when the vehicle is operated.

- Do not park the vehicle near flammable or explosive substances. Do not place objects on the vehicle while it is still warm from being run. Always let the vehicle cool first.

- Switch off the engine.
- Turn the handle ❶ of the fuel tap to the **OFF** position. (Figure 500178-10 p. 11)
- Use straps or other suitable devices to secure the motorcycle against accidents or falling over.

Environment

Motorcycling is a wonderful sport and we naturally hope that you can enjoy it to the full. However, it is a potential problem for the environment and can lead to conflicts with other persons. But if you use your motorcycle responsibly, you can ensure that such problems and conflicts do not have to occur. To protect the future of motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

Notes/warnings

Pay close attention to the notes/warnings.



Info

Various information and warning labels are affixed to the vehicle. Do not remove information/warning labels. If they are missing, you or others may not recognize potential hazards and may therefore be injured.

Grades of risks



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Identifies a danger that will lead to environmental damage if the appropriate measures are not taken.

Owner's manual

- It is important that you read this owner's manual carefully and completely before making your first trip. It contains useful information and many tips on how to operate and handle your motorcycle. Only then will you find out how to best customize the motorcycle for your own use and how you can protect yourself from injury. The owner's manual also contains important information on servicing the motorcycle.
- The owner's manual is an important component of the motorcycle and should be handed over to the new owner if the vehicle is sold.

View of vehicle, front left side



100821-10

1	Hand brake lever
2	Fork compression adjustment
3	Fork part number
4	Fork rebound adjustment
5	Oil filter cover
6	Plug-in stand
7	Shift lever
8	Choke button
9	Air filter
10	Filler cap
11	Clutch lever
12	Hot start lever


View of vehicle, rear right side



100822-10


- | | |
|---|---------------------------------------|
| 1 | Short circuit button |
| 2 | Shock absorber compression adjustment |
| 3 | Shock absorber rebound adjustment |
| 4 | Foot brake lever |
| 5 | Chassis number/type label |
| 6 | Throttle grip |

Chassis number

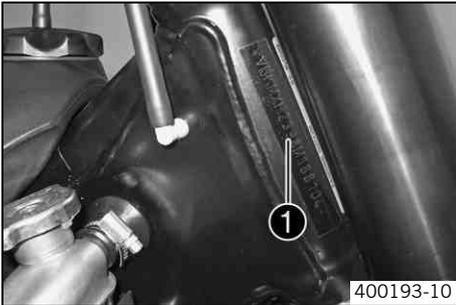


The chassis number ❶ is stamped on the steering head on the right.

Type label

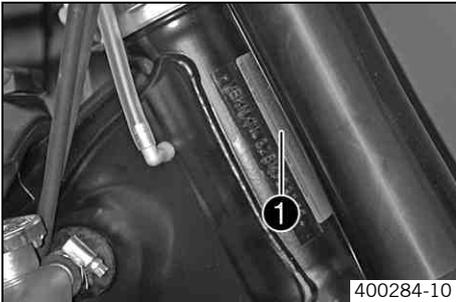


The type label ❶ is fixed to the front of the steering head.

Engine number

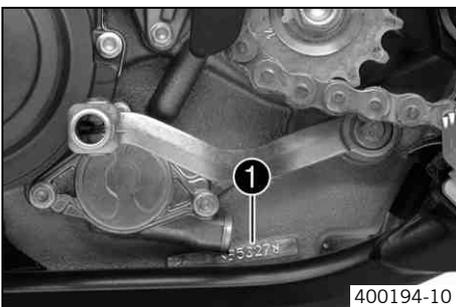

The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

Fork part number

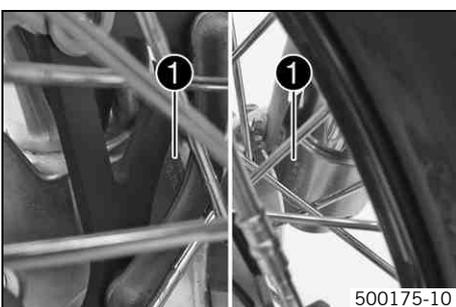


The fork part number ❶ is stamped on the inner side of the fork stub.

Shock absorber part number




The shock absorber part number ❶ is stamped on the top of the shock absorber above the adjusting ring on the engine side.

Clutch lever

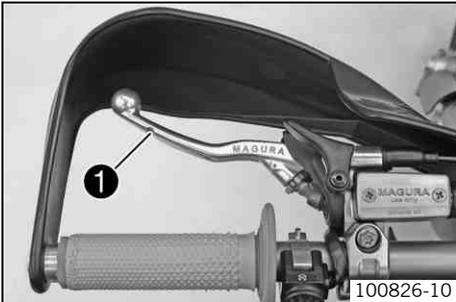

The clutch lever ❶ is fitted on the left side of the handlebar. The clutch is hydraulically operated and self-adjusting.

Hot start lever

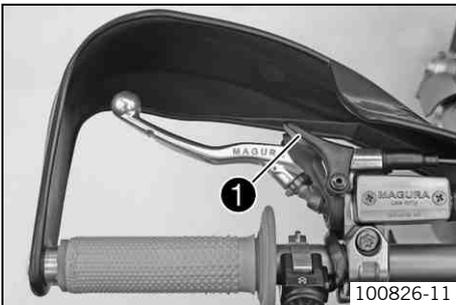


The hot start lever ❶ is fitted on the left side of the handlebar. If you pull the hot start lever to the handlebar during the start procedure, a bore is opened in the carburetor through which the engine can draw in extra air. This gives a leaner fuel-air mixture, which is needed for a hot start.

Possible states


- Hot start function activated – Hot start lever is pulled out to the stop.
- Hot start function deactivated – Hot start lever is pushed back to the stop.

Hand brake lever

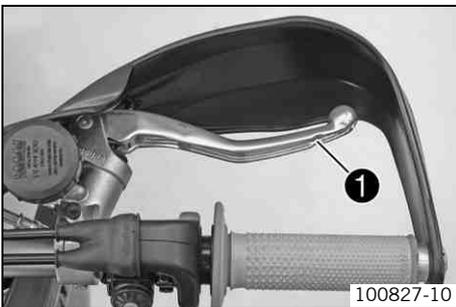

Hand brake lever ❶ is located on the right side of the handlebar. The hand brake lever is used to activate the front brake.

Short circuit button

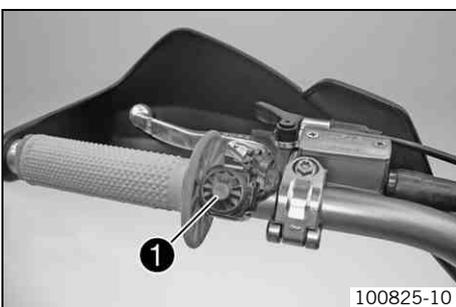


Short circuit button ❶ is fitted on the left side of the handlebar.

Possible states

- Short circuit button ☒ in basic position – In this position, the ignition circuit is closed, and the engine can be started.
- Short circuit button ☒ pressed – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start.

Electric starter button

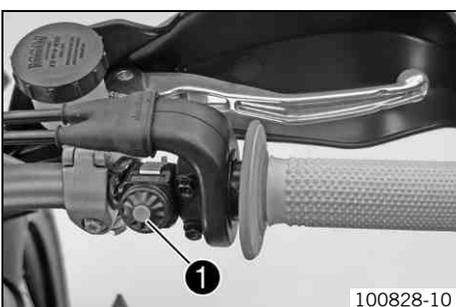

Electric starter button ❶ is fitted on the right side of the handlebar.

Possible states

- Electric starter button ☉ in basic position
- Electric starter button ☉ pressed – In this position, the electric starter is actuated.


Fuel tap



With the tap handle **1** on the fuel tap, you can open or close the supply of fuel to the carburetor.


Possible states

- Fuel supply closed **OFF** – No fuel can flow from the tank to the carburetor.
- Fuel supply open **ON** – Fuel can flow from the tank to the carburetor. The fuel tank empties completely.

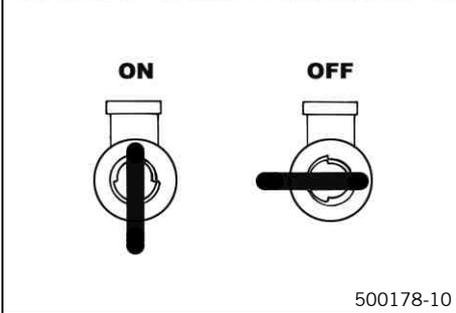

500178-10


Opening filler cap

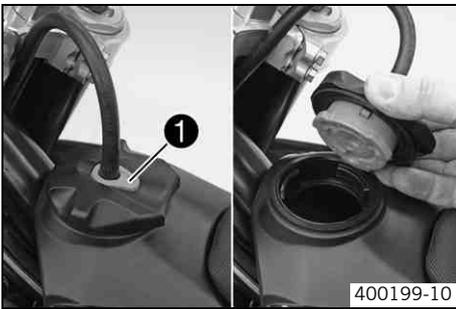

400199-10

- Press release button **1**, turn filler cap counterclockwise and lift it upwards and remove.

Closing filler cap

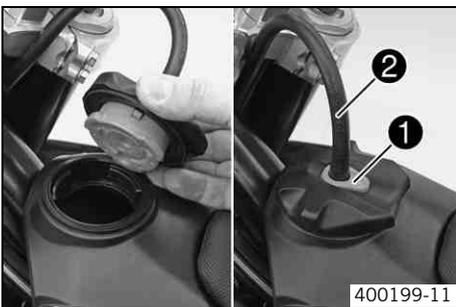


400199-11

- Replace the filler cap and turn clockwise until the release button **1** locks in place.

i Info

Route the fuel tank breather hose **2** without kinking.

Choke

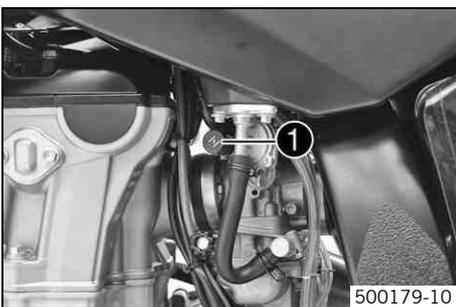

500179-10

Choke **1** is fitted on the left side of the carburetor.

Activating the choke function frees an opening through which the engine can draw extra fuel. This gives a richer fuel-air mixture, which is needed for a cold start.


i Info

If the engine is warm, the choke function must be deactivated.

Possible states


- Choke function activated – The choke lever is pulled out to the stop.
- Choke function deactivated – The choke lever is pushed in to the stop.

Shift lever

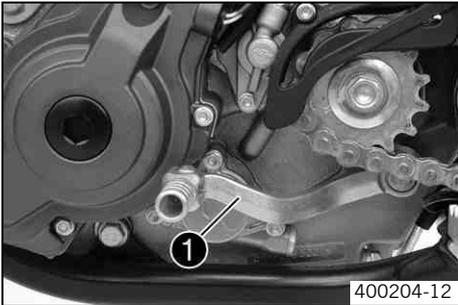

400204-12


The shift lever ❶ is mounted on the left side of the engine.

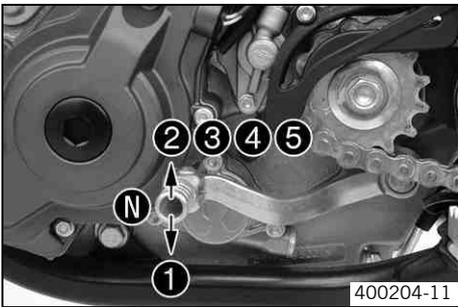

400204-11

The gear positions can be seen in the photograph. The neutral or idle position is between the first and second gears.


Foot brake lever

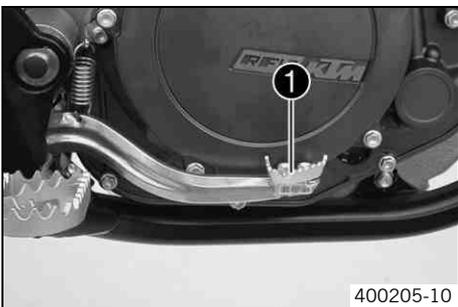

400205-10

Foot brake lever ❶ is located in front of the right footrest. The foot brake lever is used to activate the rear brake.

Plug-in stand

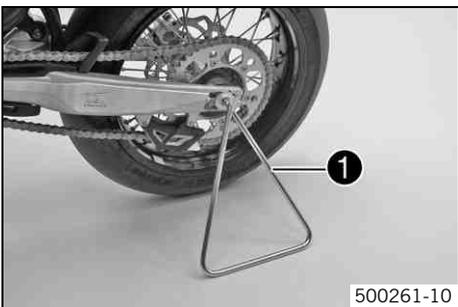

500261-10

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

To stand the motorcycle, plug the plug-in stand ❶ into the left side of the wheel spindle.



Info

Before riding, remove the plug-in stand.

Advice on first use

-  **Danger**
Danger of accidents Danger arising from the rider's judgement being impaired.
 - Do not use the vehicle if you are inexperienced or if you have consumed alcohol or drugs.
-  **Warning**
Risk of injury Missing or poor protective clothing present an increased safety risk.
 - Wear protective clothing (helmet, boots, gloves, pants and jacket with protectors) every time you ride the vehicle. Always wear protective clothing, which must be undamaged and meet legal requirements.
-  **Warning**
Danger of accidents Critical riding behavior due to inappropriate riding.
 - Adapt your riding speed to the road conditions and your riding ability.
-  **Warning**
Danger of accidents Accident risk caused by presence of a passenger.
 - Your vehicle is not designed to carry passengers. Do not ride with a passenger.
-  **Warning**
Danger of accidents Failure of brake system.
 - If the foot brake lever is not released, the brake linings drag permanently. The rear brake can fail due to overheating. Take your foot off the foot brake lever if you do not want to brake.
-  **Warning**
Danger of accidents Unstable riding behavior.
 - Do not exceed the maximum permissible weight and axle loads.
-  **Warning**
Risk of misappropriation Usage by unauthorized persons.
 - Never leave the vehicle while the engine is running. Secure the vehicle against use by unauthorized persons.

 **Info**
When using your motorcycle, remember that others may feel disturbed by excessive noise.

- Make sure that the pre-delivery inspection work has been carried out by an authorized KTM workshop. You receive a delivery certificate and the service record at vehicle handover.
- Before your first trip, read the entire operating instructions carefully.
- Get to know the controls.
- Adjust the basic position of the clutch lever. (☞ p. 60)
- Adjust the basic position of the hand brake lever. (☞ p. 39)
- Adjust the basic position of the foot brake lever. ☞ (☞ p. 43)
- Become accustomed to the handling of the motorcycle on suitable terrain.

 **Info**
Your motorcycle is not authorized for riding on public roads.

- Try also to ride as slowly as possible and in a standing position to get a better feeling for the vehicle.
- Do not make any trips that over-stress your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- Do not transport luggage.

 **Info**
Motorcycles react sensitively to any changes of weight distribution.

- Do not exceed the overall maximum permitted weight and the axle loads.

Guideline

Maximum permissible overall weight	335 kg (739 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)

- Run the engine in.

Running-in the engine

- During the running-in phase, do not exceed the specified engine speed and engine performance.

Guideline

Maximum engine speed	
During the first 3 service hours	7,000 rpm
Maximum engine performance	
During the first 3 service hours	≤ 50 %
During the next 12 service hours	≤ 75 %

- Avoid fully opening the throttle!

Checks before putting into operation

i Info
Make sure that the motorcycle is in a perfect technical condition before use.

i Info
In the interests of riding safety, make a habit of making a general check before you ride.

- Check the engine oil level. (☛ p. 65)
- Check the fuel reserves.
- Check the chain tension. (☛ p. 34)
- Check for chain dirt accumulation. (☛ p. 34)
- Check the tire condition. (☛ p. 49)
- Check the tire air pressure. (☛ p. 50)
- Check the front brake fluid level. (☛ p. 39)
- Check the rear brake fluid level. (☛ p. 43)
- Check the front brake linings. (☛ p. 40)
- Check the rear brake linings. (☛ p. 44)
- Check brake system function.
- Check the coolant level. (☛ p. 56)
- Check the settings of all controls and ensure that they can be operated smoothly.

Starting


⚠ Danger
Danger of poisoning Exhaust gases are poisonous and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

Note
Engine failure High engine speeds in cold engines have a negative effect on the service life of the engine.

- Always warm up the engine at low engine speeds.

i Info
If the motorcycle is unwilling to start, the cause may be old fuel in the float chamber. The flammable elements of the fuel evaporate after a long time of standing.
If the float chamber is filled with fresh fuel, the engine starts immediately.
Press the starter for a maximum of 5 seconds. Wait for a least 5 seconds before trying again.

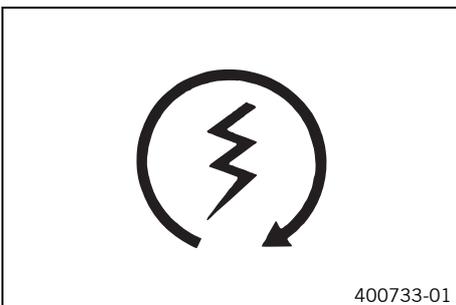

Engine has been out of use for more than 1 week

- Empty the carburetor float chamber. ☛ (☛ p. 65)
- Turn the handle ① of the fuel tap to the **ON** position. (Figure 500178-10☛ p. 11)
- ✓ Fuel can flow from the fuel tank to the carburetor.
- Remove the motorcycle from the stand.
- Shift transmission to neutral.

The engine is cold

- Pull choke lever out as far as possible.

The engine is hot

- Pull the hot start lever out to the stop.
- Press the electric starter button ③.

i Info
Do not open the throttle.

The engine is hot and running

- Push back the hot start lever to the stop with the engine running.

Starting up

- Pull the clutch lever, engage 1st gear, release the clutch lever slowly and simultaneously open the throttle carefully.

Shifting, riding



Warning

Danger of accidents If you change down at high engine speed, the rear wheel can lock up.

- Do not change into a low gear at high engine speed. The engine overspeeds and the rear wheel can block.



Info

If you hear unusual noises while riding, stop immediately, switch off the engine and contact an authorized KTM workshop. First gear is used for starting off or for steep inclines.

- When conditions allow (incline, road situation, etc.), you can shift into a higher gear. To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch and open the throttle.
- If the choke function was activated, deactivate it after the engine has warmed up.
- When you reach maximum speed after fully opening the throttle, turn back the throttle to about $\frac{3}{4}$ of its range. This barely reduces vehicle speed but lowers fuel consumption considerably.
- Always open the throttle only as much as the engine can handle – abrupt throttle opening increases fuel consumption.
- To shift down, brake and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly and open the throttle or shift again.
- Switch off the engine if you expect to be stationary for a long time.

Guideline

≥ 2 min

- Avoid frequent and prolonged slipping of the clutch. This causes heat build-up in the engine oil, the engine and the cooling system.
- Ride at lower engine speeds instead of high revs and a slipping clutch.

Braking



Warning

Danger of accidents If you brake too hard, the wheels can lock.

- Adapt your braking to the traffic situation and the road conditions.



Warning

Danger of accidents Reduced braking efficiency caused by spongy pressure point of front or rear brake.

- Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Reduced braking efficiency due to wet or dirty brakes.

- Clean or dry dirty or wet brakes by riding and braking gently.

- On sandy, wet or slippery surfaces, use the rear brake.
- Braking should always be completed before you go into a bend. Change down to a lower gear appropriate to your road speed.
- On long downhill stretches, use the braking effect of the engine. Change down one or two gears, but do not overstress the engine. In this way, you have to brake far less and the brakes do not overheat.

Stopping, parking



Warning

Danger of burns Some vehicle components get very hot when the vehicle is in use.

- Do not touch hot components such as exhaust system, radiator, engine, shock absorber and brakes. Allow these components to cool down before starting work on them.

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

Note

Fire hazard Some vehicle components become very hot when the vehicle is operated.

- Do not park the vehicle near flammable or explosive substances. Do not place objects on the vehicle while it is still warm from being run. Always let the vehicle cool first.

- Brake the motorcycle.
- Shift transmission to neutral.
- Press the Press and hold the short circuit button ☒ while the engine is idling until the engine stops.
- Turn the handle ❶ of the fuel tap to the **OFF** position. (Figure 500178-10 ☞ p. 11)
- Park the motorcycle on firm ground.

Refueling

 **Danger**
Fire hazard Fuel is highly flammable.


- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.

 **Warning**
Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact of the fuel with skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel.

 **Warning**
Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

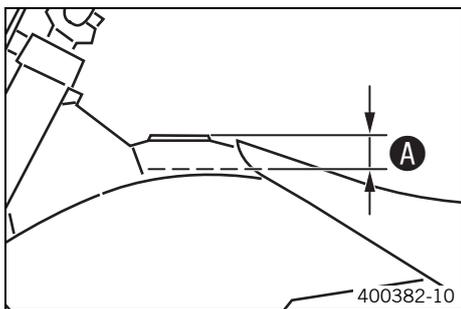

- Switch off engine.
- Open the filler cap. (☞ p. 11)
- Fill the fuel tank with fuel up to measurement **A**.

Guideline

Measurement of A	35 mm (1.38 in)	
Total fuel tank capacity, approx.	8.2 l (2.17 US gal)	Super unleaded (ROZ 95 / RON 95 / PON 91) (☞ p. 85)

- Close the filler cap. (☞ p. 11)

Important maintenance work to be carried out by an authorized KTM workshop

		S1N	S3N	S10A	S30A
Engine	Change the engine oil and oil filter, and clean the oil screen. 🛠️ (📖 p. 66)	•	•	•	•
	Replace spark plug.				•
	Check and adjust valve clearance. 🛠️		•	•	•
	Check engine mounting screws for tightness.		•	•	•
	Clean spark plug connectors and check for tightness.		•	•	•
	Check screw of shift lever for tightness.		•	•	•
Carburetor	Check carburetor connection boots for cracks and leakage.			•	•
	Check vent hoses for damage and routing without sharp bends.		•	•	•
	Check idle.		•	•	•
Attachments	Check the cooling system for leakage.		•	•	•
	Check the anti-freeze and coolant level. (📖 p. 55)		•	•	•
	Check the exhaust system for leakage and looseness.			•	•
	Check the control cables for damage, smooth operation and routing without sharp bends.		•	•	•
	Check the fluid level of the hydraulic clutch. (📖 p. 62)		•	•	•
	Clean the air filter. 🛠️ (📖 p. 59)		•	•	•
	Check cables for damage and routing without sharp bends.			•	•
Brakes	Check the front brake linings. (📖 p. 40)		•	•	•
	Check the rear brake linings. (📖 p. 44)		•	•	•
	Check the brake discs. (📖 p. 38)		•	•	•
	Check the front brake fluid level. (📖 p. 39)		•	•	•
	Check the rear brake fluid level. (📖 p. 43)		•	•	•
	Check brake lines for damage and leakage.		•	•	•
	Check the free travel on the hand brake lever. (📖 p. 38)		•	•	•
	Check the free travel of the foot brake lever. (📖 p. 43)		•	•	•
	Check brake system function.		•	•	•
	Check screws and guide bolts of brake system for tightness.		•	•	•
Chassis	Check shock absorber and fork for leakage and functioning.		•	•	•
	Clean the dust boots of the fork legs. (📖 p. 27)			•	•
	Bleed fork legs. (📖 p. 26)			•	•
	Check the frame and swingarm for damage.			•	•
	Check swingarm bearing.			•	•
	Check the steering head bearing play. (📖 p. 27)		•	•	•
	Check all screws to see if they are tight.		•	•	•
Wheels	Check the spoke tension. (📖 p. 50)		•	•	•
	Check the wheel hubs for damage.			•	•
	Check rim run-out.		•	•	•
	Check the tire condition. (📖 p. 49)		•	•	•
	Check the tire air pressure. (📖 p. 50)		•	•	•
	Check the chain wear. (📖 p. 35)		•	•	•
	Check the chain tension. (📖 p. 34)		•	•	•
	Clean the chain. (📖 p. 34)		•	•	•
	Check wheel bearing for play.		•	•	•
	Clean and grease adjusting screws of chain adjuster.		•	•	•

S1N: Once after 1 service hour - corresponds to about 7 liters of fuel (1.8 US gal)

S3N: Once after 3 service hours - corresponds to about 21 liters of fuel (5.5 US gal)

S10A: Every 10 service hours - corresponds to about 70 liters of fuel (18.5 US gal) / after every race

S30A: Every 30 service hours - corresponds to about 210 liters of fuel (55.5 US gal)

Important maintenance work to be carried out by an authorized KTM workshop (as an additional order)

	S10A	S20N	S20A	S30A	S40A	J1A
Conduct a major fork service. 🛠️				•		
Conduct a minor fork service. 🛠️	•		•	•	•	
Perform a shock absorber service. 🛠️		•			•	
Grease the steering head bearing. 🛠️ (📖 p. 31)						•
Treat electric contacts with contact spray.						•
Change the hydraulic clutch fluid. 🛠️ (📖 p. 62)						•
Change the front brake fluid. 🛠️						•
Change the rear brake fluid. 🛠️						•
Check the clutch. 🛠️			•		•	
Check/measure the cylinder. 🛠️					•	
Change the piston. 🛠️					•	
Check the camshafts. 🛠️					•	
Check the valve spring seat. 🛠️					•	
Check the cylinder head. 🛠️					•	
Change the valves. 🛠️					•	
Change the valve springs. 🛠️					•	
Check the timing-chain tensioner function. 🛠️					•	
Check the crankshaft run-out at the bearing pin. 🛠️					•	
Change the connecting rod, conrod bearing and crank pin. 🛠️					•	
Check the seating of the piston pin. 🛠️					•	
Change the crankshaft main bearing. 🛠️					•	
Check the transmission. 🛠️					•	
Check the shift mechanism. 🛠️					•	
Check the spring length of the oil pressure regulator valve. 🛠️					•	
Change glass fiber yarn filling of main silencer. 🛠️ (📖 p. 58)	•		•	•	•	
Change the foot brake cylinder seals. 🛠️			•		•	
Check/adjust the carburetor components. 🛠️					•	•

- S10A:** Every 10 service hours - corresponds to about 70 liters of fuel (18.5 US gal)
- S20N:** Once after 20 service hours - corresponds to about 140 liters of fuel (37 US gal)
- S20A:** Every 20 service hours - corresponds to about 140 liters of fuel (37 US gal)
- S30A:** Every 30 service hours - corresponds to about 210 liters of fuel (55.5 US gal)
- S40A:** Every 40 service hours - corresponds to about 280 liters of fuel (74 US gal)
- J1A:** Annually


Important checks and maintenance work to be carried out by the rider

	NB1A
Check the engine oil level. (📖 p. 65)	•
Check the front brake fluid level. (📖 p. 39)	•
Check the rear brake fluid level. (📖 p. 43)	•
Check the front brake linings. (📖 p. 40)	•
Check the rear brake linings. (📖 p. 44)	•
Check and adjust the throttle cables.	•
Bleed fork legs. (📖 p. 26)	•
Clean the dust boots of the fork legs. (📖 p. 27)	•
Clean the chain. (📖 p. 34)	•
Check the chain tension. (📖 p. 34)	•
Check the chain wear. (📖 p. 35)	•
Check rear sprocket/engine sprocket for wear. (📖 p. 35)	•
Clean the air filter. 🛠️ (📖 p. 59)	•
Check the tire air pressure. (📖 p. 50)	•

	NB1A
Check the tire condition. (☞ p. 49)	•
Check the coolant level. (☞ p. 56)	•
Empty the carburetor float chamber. ☞ (☞ p. 65)	•
Check all controls for smooth operation.	•
Check braking.	•
Check all screws, nuts and hose clamps regularly for tightness.	•

NB1A: Depending on conditions of use according to requirements.

Jacking up the motorcycle

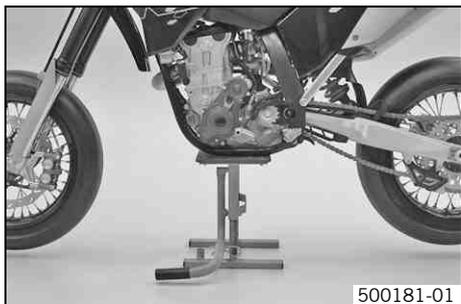

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

- Jack up the motorcycle underneath the engine. The wheels must no longer touch the ground.

Work stand (59229055000)

- Secure the motorcycle against falling over.

Removing the motorcycle from the work stand

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

- Remove the motorcycle from the work stand.
- Remove the work stand.

Checking the basic suspension setting with the rider's weight



Info

When adjusting the basic suspension setting, first adjust the shock absorber and then the fork.

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, swing arm and frame, the basic settings of the suspension components must match your body weight.
- As delivered, KTM off-road motorcycles are adjusted for a standard rider weight (with full protective clothing).

Guideline

Standard rider weight	75... 85 kg (165... 187 lb.)
-----------------------	------------------------------

- If your weight is above or below the standard range, you have to adjust the basic setting of the suspension components accordingly.
- Small weight differences can be compensated by adjusting the spring preload, but in the case of large weight differences, the springs must be replaced.

Compression damping of shock absorber

The shock absorber can regulate compression damping separately in the low-speed and high-speed ranges (Dual Compression Control). The terms low-speed and high-speed refers to the movement of the shock absorber during compression and not to the riding speed of the motorcycle.

Changes in the settings in the low-speed range have an impact on the high-speed range and vice versa.

Adjusting the high-speed compression damping of the shock absorber



Danger


Danger of accidents Disassembly of pressurized parts can lead to injury.

- The shock absorber is filled with high density nitrogen. Adhere to the description provided. (Your authorized KTM workshop will be glad to help.)



Info

The high-speed setting can be seen during the fast compression of the shock absorber.

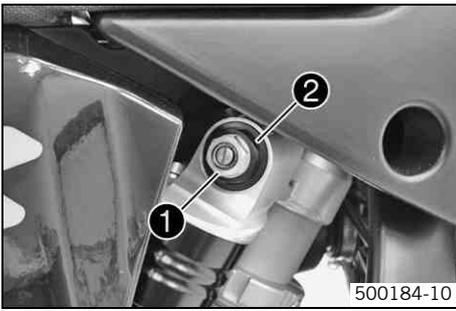

- Turn adjusting screw ❶ clockwise with a socket wrench until it stops.

i Info
Do not loosen nut ❷!

- Turn back counterclockwise by the number of turns corresponding to the shock absorber type.

Guideline

Compression damping, high-speed	
Standard	1.5 turns


i Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.

Adjusting the low-speed compression damping of the shock absorber

! Danger
Danger of accidents Disassembly of pressurized parts can lead to injury.

- The shock absorber is filled with high density nitrogen. Adhere to the description provided. (Your authorized KTM workshop will be glad to help.)

i Info
The low-speed setting can be seen during the slow to normal compression of the shock absorber.

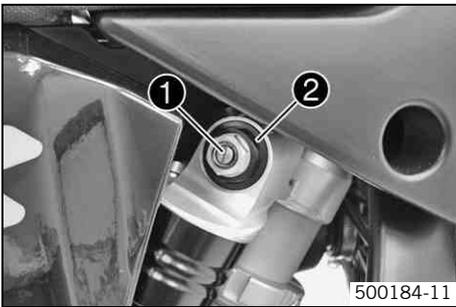

- Turn adjusting screw ❶ clockwise with a screwdriver up to the last perceptible click.

i Info
Do not loosen nut ❷!

- Turn back counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline


Compression damping, low-speed	
Standard	10 clicks

i Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.

Adjusting the rebound damping of the shock absorber

! Danger
Danger of accidents Disassembly of pressurized parts can lead to injury.

- The shock absorber is filled with high density nitrogen. Adhere to the description provided. (Your authorized KTM workshop will be glad to help.)

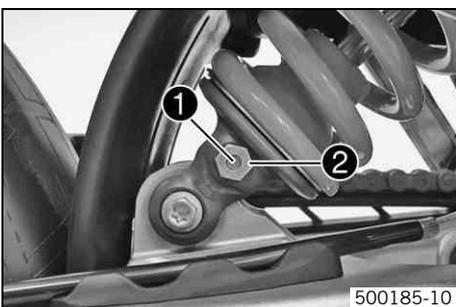

- Turn adjusting screw ❶ clockwise up to the last perceptible click.

i Info
Do not loosen nut ❷!

- Turn back counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline


Rebound damping	
Standard	20 clicks



Info


Turn clockwise to increase damping; turn counterclockwise to reduce damping.

Measuring rear wheel sag unloaded

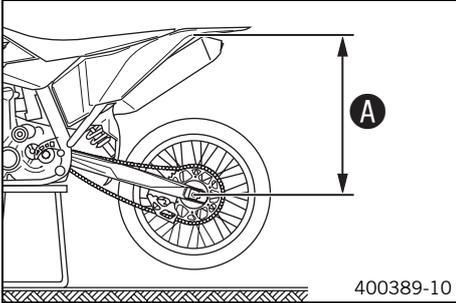

- Jack up the motorcycle. (☞ p. 21)
- Measure the distance – as vertical as possible – between the rear axle and a fixed point, for example, a mark on the side cover.
- Make a note of the value as measurement **A**.
- Remove the motorcycle from the work stand. (☞ p. 21)

Checking the static sag of the shock absorber

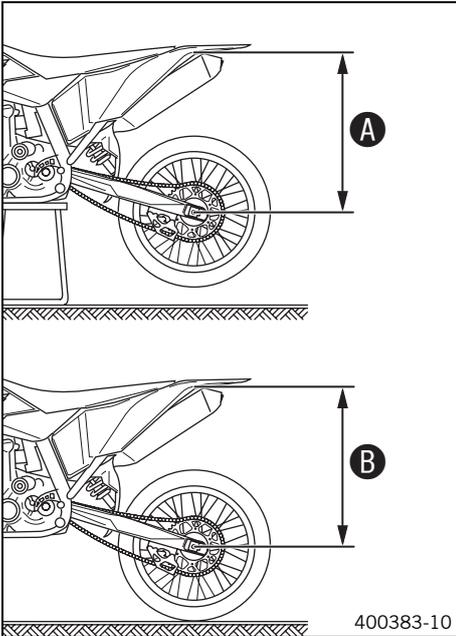

- Measure distance **A** of rear wheel unloaded. (☞ p. 23)
- Ask someone to help you by holding the motorcycle upright.
- Measure the distance between the rear axle and the fixed point again.
- Make a note of the value as measurement **B**.



Info


The static sag is the difference between measurements **A** and **B**.

- Check the static sag.

Static sag	15... 20 mm (0.59... 0.79 in)
------------	-------------------------------

- » If the static sag is less or more than the specified value:
 - Adjust the spring preload of the shock absorber. ☞ (☞ p. 24)

Checking the riding sag of the shock absorber

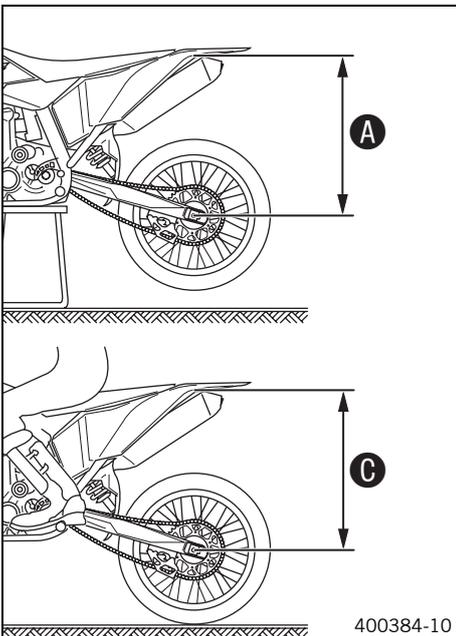

- Measure distance **A** of rear wheel unloaded. (☞ p. 23)
- With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal sitting position (feet on footrests) and bounces up and down a few times until the rear suspension levels out.
- The other person now measures the distance between the rear axle and a fixed point.
- Make a note of the value as measurement **C**.



Info

The riding sag is the difference between measurements **A** and **C**.

- Check the riding sag.

Riding sag	80... 90 mm (3.15... 3.54 in)
------------	-------------------------------


- » If the riding sag differs from the specified measurement:
 - Adjust the riding sag. ☞ (☞ p. 24)

Adjusting the spring preload of the shock absorber 🛠️

Danger
Danger of accidents Disassembly of pressurized parts can lead to injury.

- The shock absorber is filled with high density nitrogen. Adhere to the description provided. (Your authorized KTM workshop will be glad to help.)

i Info
 Before changing the spring preload, make a note of the present setting, e.g., by measuring the length of the spring.

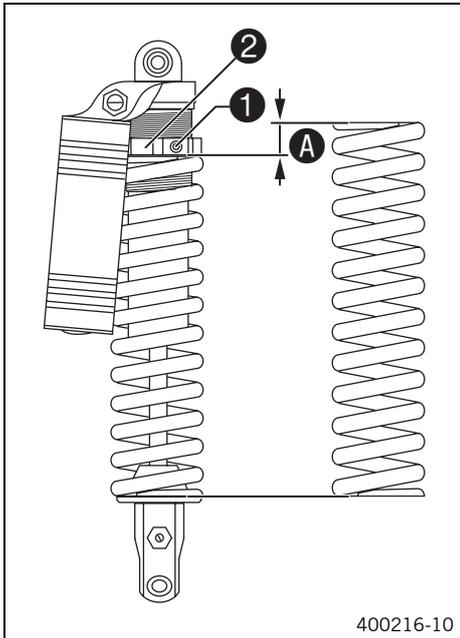

- Remove shock absorber. 🛠️ (☞ p. 25)
- After removing the shock absorber, clean it thoroughly.
- Loosen screw ❶.
- Turn adjusting ring ❷ until the spring is no longer under tension.

Combination wrench (50329080000)
Hook wrench (T106S)

- Measure the overall spring length when not under tension.
- Tighten the spring by turning adjusting ring ❶ to measurement A.

Guideline

Spring preload	11 mm (0.43 in)
----------------	-----------------

- Tighten screw ❷.

Guideline

Screw, shock absorber adjusting ring	M6	5 Nm (3.7 lbf ft)
--------------------------------------	----	-------------------

- Install the shock absorber. 🛠️ (☞ p. 25)

Adjusting the riding sag 🛠️

- Remove shock absorber. 🛠️ (☞ p. 25)
- After removing the shock absorber, clean it thoroughly.
- Choose and mount a suitable spring.


Guideline

Spring rate	
Weight of rider: 75... 85 kg (165... 187 lb.)	76 N/mm (434 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	80 N/mm (457 lb/in)

i Info
 The spring rate is shown on the outside of the spring.


- Install the shock absorber. 🛠️ (☞ p. 25)
- Check the static sag of the shock absorber. (☞ p. 23)
- Adjust the rebound damping of the shock absorber. (☞ p. 22)

Removing the shock absorber ↩

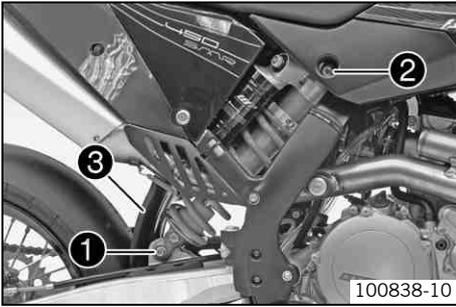

- Jack up the motorcycle. (↩ p. 21)
- Remove screw ❶ and lower the rear wheel with the swing arm as far as possible without blocking the rear wheel. Fix the rear wheel in this position.
- Remove screw ❷, push splash protector ❸ to the side, and remove the shock absorber.

Installing the shock absorber ↩

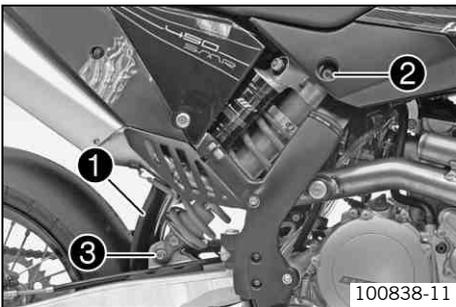

- Push splash protector ❶ to the side and position the shock absorber. Mount and tighten screw ❷.

Guideline

Screw, top shock absorber	M12	80 Nm (59 lbf ft)	Loctite® 243™
---------------------------	-----	----------------------	----------------------

- Mount and tighten screw ❸.

Guideline

Screw, bottom shock absorber	M12	80 Nm (59 lbf ft)	Loctite® 243™
------------------------------	-----	----------------------	----------------------



Info

The heim joint for the shock absorber at the swing arm is Teflon coated. It must not be greased with grease or with other lubricants. Lubricants dissolve the Teflon coating, thereby drastically reducing the service life.


- Remove the motorcycle from the work stand. (↩ p. 21)

Checking basic setting of fork



Info

For various reasons, no exact riding sag can be determined for the forks.

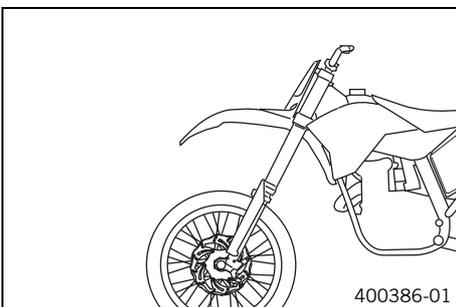


- As with the shock absorber, smaller weight differences can be compensated by the spring preload.
- However, if your fork is often overloaded (hits the bump stops on compression), it is recommended to fit stiffer springs to avoid damage to the fork and frame.

Adjusting the compression damping of the fork



Info

The hydraulic compression damping determines the fork suspension behavior.

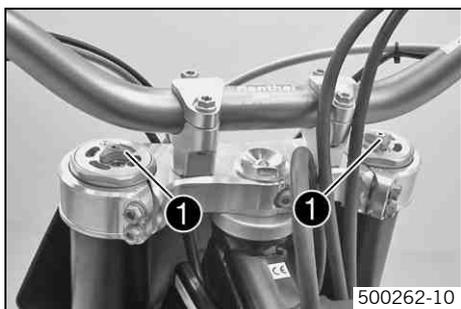

- Turn adjusting screws ❶ clockwise all the way.

i Info
Adjusting screws ❶ are located at the top end of the fork legs. Make the same adjustment on both fork legs.


- Turn back counterclockwise by the number of clicks corresponding to the fork type.
- Guideline

Compression damping	
Standard	12 clicks

i Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.

Adjusting the rebound damping of the fork

i Info
The hydraulic rebound damping determines the fork suspension behavior.

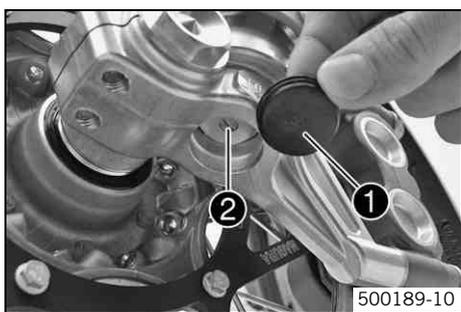

- Remove protection caps ❶.
- Turn adjusting screws ❷ clockwise all the way.

i Info
Adjusting screws ❷ are located at the bottom end of the fork legs. Make the same adjustment on both fork legs.

- Turn back counterclockwise by the number of clicks corresponding to the fork type.
- Guideline

Rebound damping	
Standard	12 clicks

i Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.

- Mount protection covers ❶.

Bleeding fork legs



- Jack up the motorcycle. (☛ p. 21)
- Remove bleeder screws ❶ briefly.
 - ✓ Any excess pressure escapes from the interior of the fork.
- Mount and tighten bleeder screws.
- Remove the motorcycle from the work stand. (☛ p. 21)

Cleaning the dust boots of the fork legs



- Jack up the motorcycle. (☛ p. 21)
- Remove the fork protector. (☛ p. 27)
- Push dust boots ❶ of both fork legs downwards.



Info

The dust boots should remove dust and coarse dirt particles from the fork tubes. Over time, there is an ingress of dirt inside the boots. If this dirt is not removed, it may cause the oil seals to leak.



Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.


- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

- Clean and oil the dust boots and inner fork tube of both fork legs.

Universal oil spray (☛ p. 87)


- Press the dust boots back into their normal position.
- Remove excess oil.
- Install the fork protection. (☛ p. 27)
- Remove the motorcycle from the work stand. (☛ p. 21)

Removing the fork protector

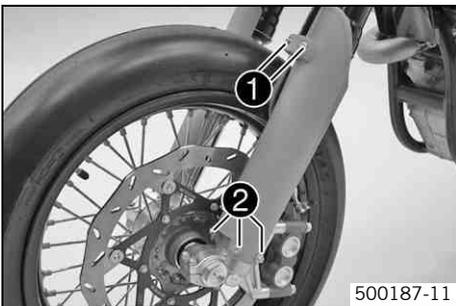

- Remove screws ❶ and take off clamp.
- Remove screws ❷ on left fork leg. Remove the fork protector.
- Remove the screws on the right fork leg. Remove the fork protector.

Installing the fork protection

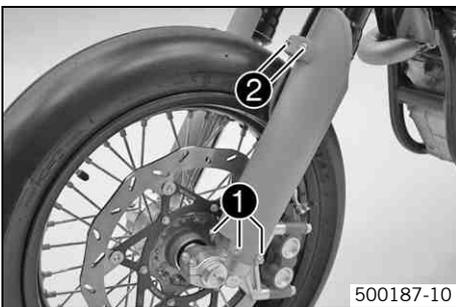

- Position the fork protection on the left fork leg. Mount and tighten screws ❶.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Position the brake line. Put the clamp on, and mount and tighten screws ❷.
- Position the fork protection on the right fork leg. Mount and tighten the screws.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

Checking steering head bearing play



Warning

Danger of accidents Unstable vehicle handling from incorrect steering head bearing play.


- Adjust the steering head bearing play without delay. (Your authorized KTM workshop will be glad to help.)



Info

If the bike is ridden for a longer time with play in the steering head bearing, the bearing and the bearing seats in the frame can be damaged after time.

- Jack up the motorcycle. (☛ p. 21)

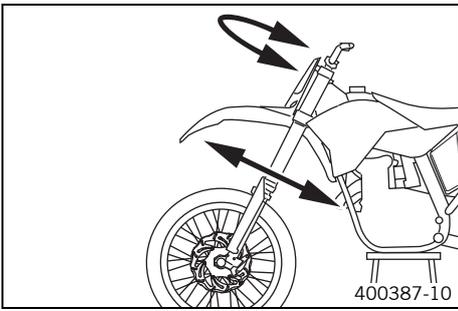

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.


No play should be noticeable in the steering head bearing.

- » If there is noticeable play present:
 - Adjust play of the steering head bearing (☛ p. 28)
- Move the handlebar to and fro over the entire steering range.

The handlebar must be able to move easily over the entire steering range. No resting locations should be noticeable.

- » If click positions are noticeable:
 - Adjust play of the steering head bearing (☛ p. 28)
 - Check the steering head bearing and replace if required.
- Remove the motorcycle from the work stand. (☛ p. 21)

Adjusting play of steering head bearing ☛

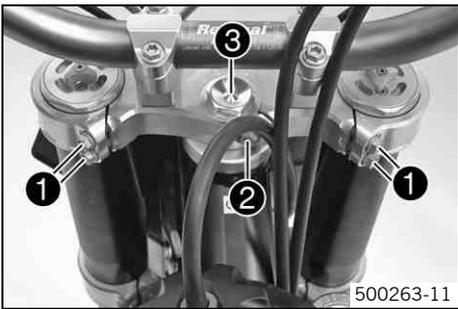

- Jack up the motorcycle. (☛ p. 21)
- Loosen screw ❶. Remove screw ❷.
- Loosen and retighten screw ❸.

Guideline

Screw, top steering head	M20x1.5	10 Nm (7.4 lbf ft)
--------------------------	---------	--------------------

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid strains.
- Fully tighten screw ❶.

Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	---------------------


- Mount and tighten screw ❷.

Guideline

Screw, top steering stem	M8	17 Nm (12.5 lbf ft)	Loctite® 243™
--------------------------	----	---------------------	----------------------

- Check the steering head bearing play. (☛ p. 27)

Fork offset

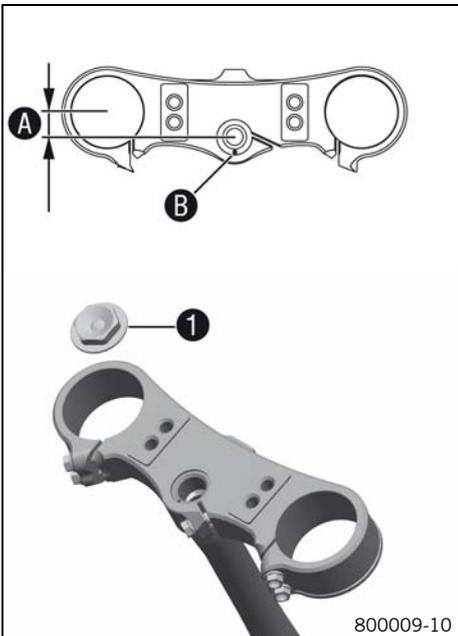


You can see the currently set offset if you remove screw ❶. The fork offset **A** has an impact on the handling of the vehicle. It is calculated from the center of the fork leg to the center of the steering head bearing. The fork offset can optionally be adjusted. Marking **B** to the front gives greater stability on fast racetracks.

Fork offset	
Front marking	14 mm (0.55 in)

Marking **B** to the rear gives better handling in bends.

Fork offset	
Rear marking	16 mm (0.63 in)

Adjusting the fork offset ↩

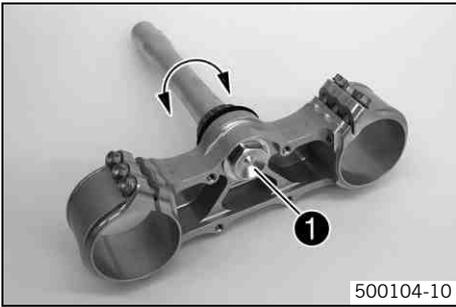


- Remove the lower triple clamp. ↩ (☞ p. 30)
- Remove screw ❶. Remove the steering stem.
- Rotate the steering stem 180° and insert into the triple clamp. Mount and tighten screw ❶.

Guideline


Screw, bottom steering head	M20x1.5	60 Nm (44.3 lbf ft)	Loctite® 243™
-----------------------------	---------	------------------------	----------------------

- Install the lower triple clamp. ↩ (☞ p. 30)

Removing the fork legs ↩

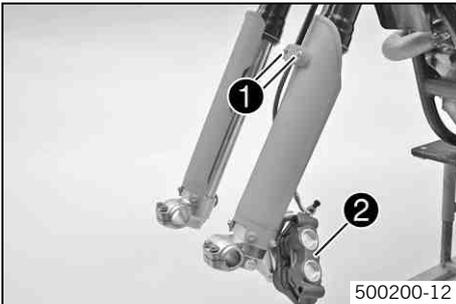

- Remove the front wheel. ↩ (☞ p. 46)
- Remove screws ❶ and take off clamp.
- Hang the brake caliper ❷ and the brake line loosely to the side.

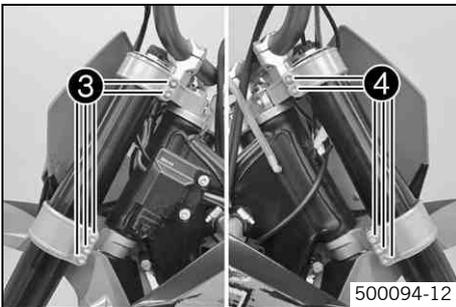

- Loosen screw ❸. Remove the fork leg on the left.
- Loosen screw ❹. Remove the fork leg on the right.

Installing the fork legs ↩




- Position the fork legs.



Info

The upper milled groove in the fork leg must be flush with the top edge of the upper triple clamp.

Position bleeder screws ❶ toward the front.

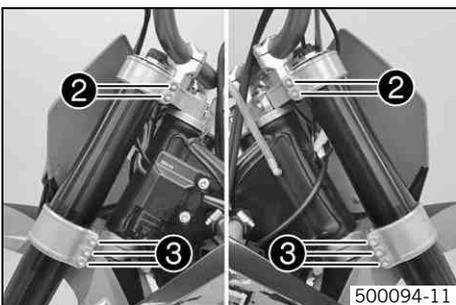

- Tighten screws ❷.


Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	------------------------

- Fully tighten screws ❸.


Guideline

Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
----------------------------	----	--------------------

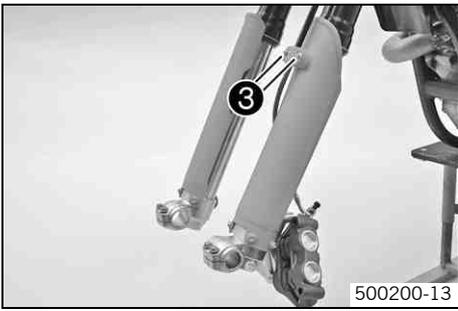

- Position the brake line. Put the clamp on, and mount and tighten screws ③.
- Install the front wheel. (☞ p. 47)

Removing the lower triple clamp ☞

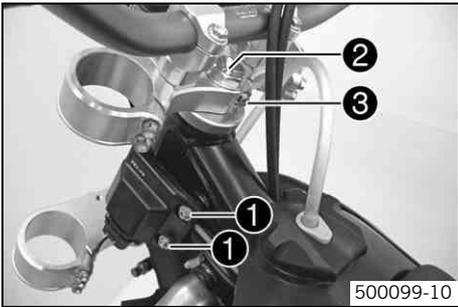


- Remove the fork legs. (☞ p. 29)
- Dismount the start number plate (☞ p. 32)
- Remove the front fender. (☞ p. 31)
- Remove screws ① and hang the CDI control unit to the side.

i Info
Do not unplug the CDI control unit.


- Remove screw ②. Remove screw ③, take off top triple clamp with the handlebar and place it on one side.

i Info
Protect the motorcycle and its attachments from damage by covering them. Do not bend the cables and lines.

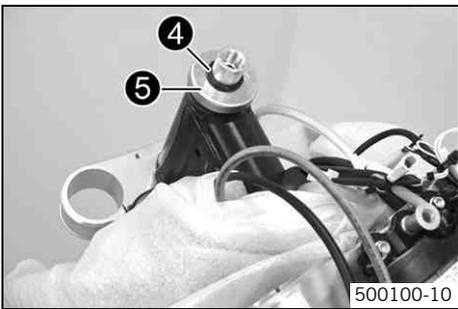

- Remove o-ring ④. Remove protector ring ⑤.
- Remove the lower triple clamp with the steering stem.
- Remove the upper steering head bearing.

Installing the lower triple clamp ☞

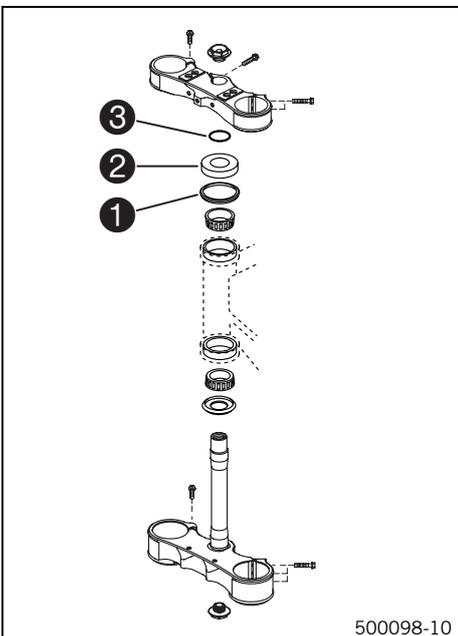


- Clean the bearing and sealing elements, check for damage, and grease.

Long-life grease (☞ p. 86)

- Insert the lower triple clamp with the steering stem. Mount the upper steering head bearing.

i Info
Check whether the top steering head seal ① is correctly positioned.

- Push up protective ring ② and O-ring ③.

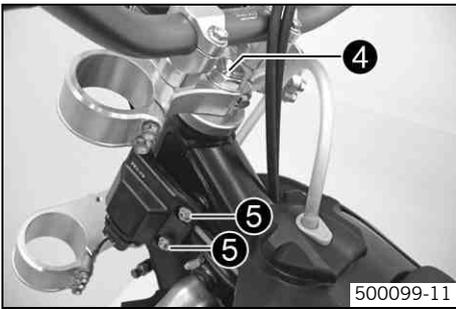

- Position the upper triple clamp with the steering.
- Mount and tighten screw 4.

Guideline

Screw, top steering head	M20x1.5	10 Nm (7.4 lbf ft)
--------------------------	---------	--------------------

- Position the clutch line, wiring harness and CDI control unit. Mount and tighten screws 5.

Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Install the front fender. (☛ p. 31)
- Install the start number plate. (☛ p. 32)
- Install the fork legs. ☛ (☛ p. 29)
- Mount and tighten screw 6.


Guideline

Screw, top steering stem	M8	17 Nm (12.5 lbf ft)	Loctite® 243™
--------------------------	----	---------------------	----------------------

- Check the wiring harness, cable, brake and clutch line for free movement and free laying.
- Check the steering head bearing play. (☛ p. 27)

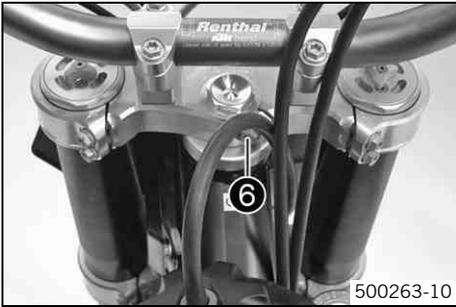


Greasing the steering head bearing ☛

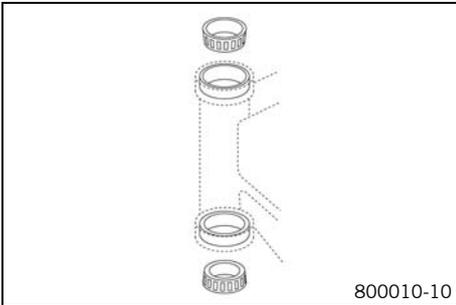


- Remove the lower triple clamp. ☛ (☛ p. 30)
- Install the lower triple clamp. ☛ (☛ p. 30)

Removing the front fender

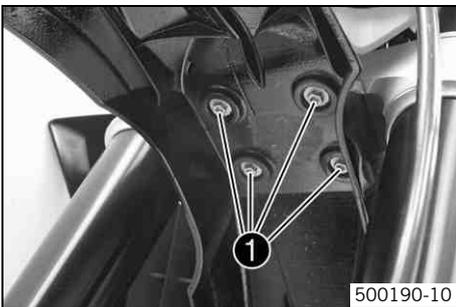

- Remove screws 1. Remove the front fender.
- Make sure the spacers remain in place.

Installing the front fender

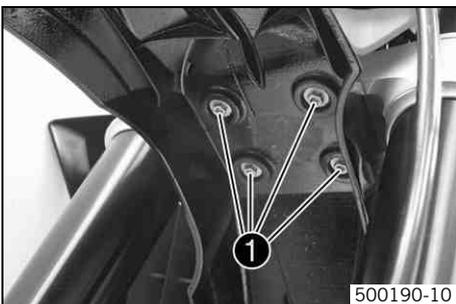

- Ensure that the spacing sleeves are mounted in the fender.
- Position the front fender. Mount and tighten screws 1.

Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------



Info


Make sure the holding lugs engage in the start number plate.

Dismount the start number plate

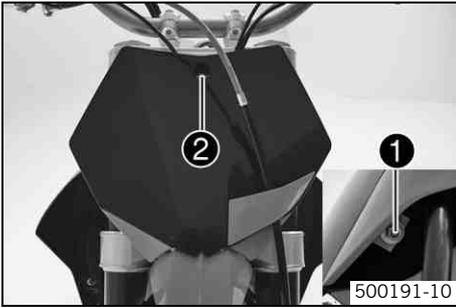

- Remove screw ❶ and take off clamp.
- Remove screw ❷. Remove the start number plate.

Installing the start number plate

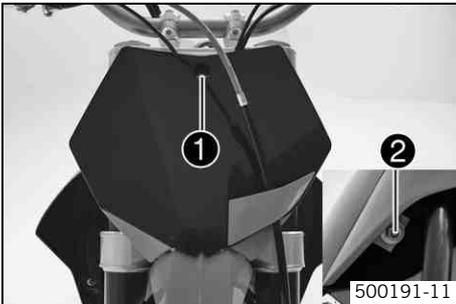

- Position the start number plate. Mount and tighten screw ❶.


Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

i Info
Take care with the contact of the holding lug at the fender.

- Position the brake line. Put the clamp on, and mount and tighten screw ❷.

Handlebar position

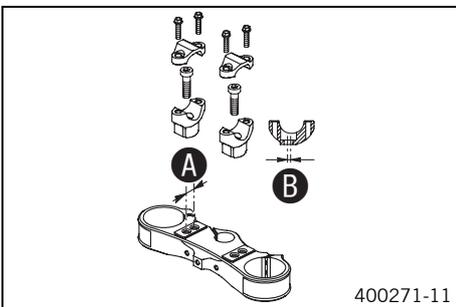

On the upper triple clamp, there are 2 holes at a distance of **A** to each other.


Hole distance A	15 mm (0.59 in)
-----------------	-----------------

The holes on the handlebar support are placed at a distance of **B** from the center.

Hole distance B	3.5 mm (0.138 in)
-----------------	-------------------

The handlebar can be mounted in four different positions. In this way, the handlebar can be mounted in the position that is most comfortable for the rider.

Adjusting handlebar position ↩

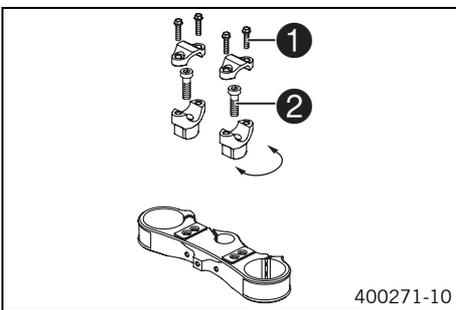

- Remove the four screws ❶. Remove the handlebar clamp. Remove the handlebar and lay it to one side.

i Info
Protect the motorcycle and its attachments from damage by covering them. Do not bend the cables and lines.

- Remove the two screws ❷. Remove the handlebar support.
- Place the handlebar support in the required position. Fit and tighten the two screws ❷.

Guideline

Screw, handlebar support	M10	40 Nm (29.5 lbf ft)	Loctite® 243™
--------------------------	-----	---------------------	----------------------

i Info
Position the left and right handlebar supports evenly.

- Position the handlebar.


i Info
Make sure cables and wiring are positioned correctly.

- Position the handlebar clamp. Fit and evenly tighten the four screws ❶.

Guideline


Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
------------------------	----	------------------------

Checking throttle cable route

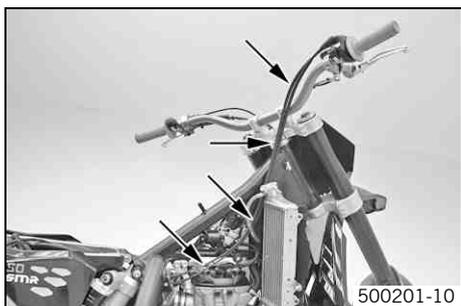

- The two throttle cables must run parallel behind the handlebar down to the frame. They must be routed directly to the right of the frame above the tank bracket towards the carburetor.

Checking the play in the throttle cable

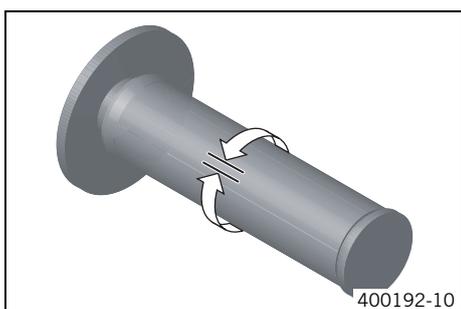

- Move the handlebar to the straight-ahead position. Move the throttle grip backwards and forwards to ascertain the play in the throttle cable.

Play in throttle cable	3... 5 mm (0.12... 0.2 in)
------------------------	----------------------------

- » If the throttle cable play does not meet specifications:
 - Adjust the play in the throttle cable. 🛠️ (👉 p. 33)



Danger

Danger of poisoning Exhaust gases are poisonous and inhaling them may result in unconsciousness and/or death.


- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

- Start the engine and let it run idle. Move the handlebar to and fro over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
 - Adjust the play in the throttle cable. 🛠️ (👉 p. 33)

Adjusting the play in the throttle cable 🛠️

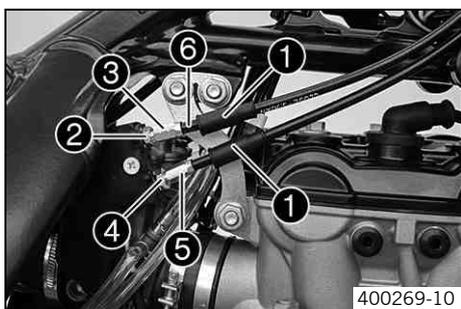


- Remove the fuel tank. 🛠️ (👉 p. 53)
- Check throttle cable route. (👉 p. 33)
- Move the handlebar to the straight-ahead position.
- Push back bellows ①.
- Loosen nut ②. Turn adjusting screw ③ in as far as possible.
- Loosen nut ④. Turn adjusting screw ⑤ so that there is play in the gas throttle cable at the throttle grip.

Guideline

Play in throttle cable	3... 5 mm (0.12... 0.2 in)
------------------------	----------------------------

- Tighten nut ④.
- Press and hold the throttle grip in the closed setting. Turn adjusting screw ③ out until there is no play in the throttle cable ⑥.
- Tighten nut ②.
- Push bellows ① on. Check the throttle grip for smooth operation.
- Install the fuel tank. 🛠️ (👉 p. 54)
- Check the play in the throttle cable. (👉 p. 33)

Checking for chain dirt accumulation

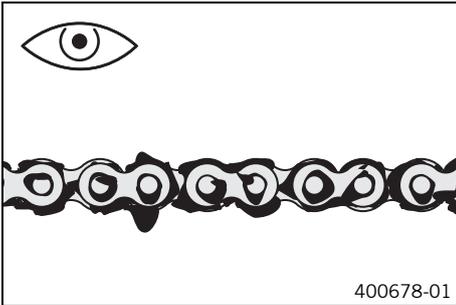

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain. (☛ p. 34)

Cleaning the chain

Warning
Danger of accidents Oil or grease on the tires reduces their grip.

- Remove oil and grease with a suitable cleaning material.


Warning
Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

Warning
Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

i Info
 The service life of the chain depends largely on its maintenance.

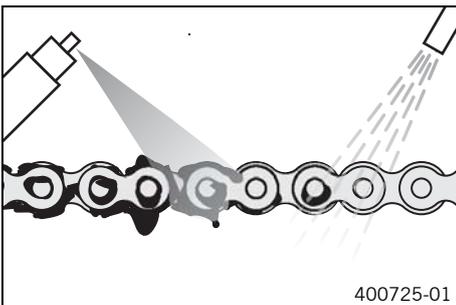


- Clean the chain regularly and then treat with chain spray.

Chain cleaner (☛ p. 86)
Off-road chain spray (☛ p. 86)

Checking the chain tension

Warning
Danger of accidents Danger caused by incorrect chain tension.

- If the chain tension is too high, the components of the secondary power train (chain, engine sprocket, rear sprocket, bearings in transmission and rear wheel) are under additional load. Apart from premature wear, in extreme cases the chain can rupture or the countershaft of the transmission can break. On the other hand, if the chain is loose, it can fall off the engine sprocket or the rear sprocket and block the rear wheel or damage the engine. Check the chain tension and correct if necessary.

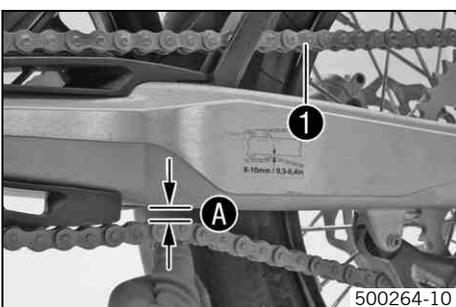

- Jack up the motorcycle. (☛ p. 21)
- Push the chain up at the rear edge of the chain guide to measure the chain tension **A**.

i Info
 The upper chain section **1** must be taut.
 Chain wear is not always even, so you should repeat this measurement at different chain positions.


Chain tension	8... 10 mm (0.31... 0.39 in)
---------------	------------------------------

- » If the chain tension does not meet specifications:
 - Adjusting chain tension - after checking. (☛ p. 37)
 - Remove the motorcycle from the work stand. (☛ p. 21)

Checking chain tension when fitting rear wheel

Warning
Danger of accidents Danger caused by incorrect chain tension.

- If the chain tension is too high, the components of the secondary power train (chain, engine sprocket, rear sprocket, bearings in transmission and rear wheel) are under additional load. Apart from premature wear, in extreme cases the chain can rupture or the countershaft of the transmission can break. On the other hand, if the chain is loose, it can fall off the engine sprocket or the rear sprocket and block the rear wheel or damage the engine. Check the chain tension and correct if necessary.

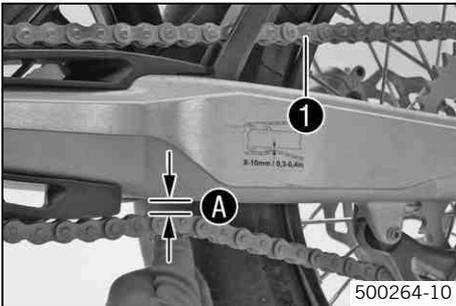


- Make sure that the chain adjusters are fitted correctly on the adjusting screws.
- Push the chain up at the rear edge of the chain guide to measure the chain tension **A**.

i Info
 The upper chain section **1** must be taut.
 Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension	8... 10 mm (0.31... 0.39 in)
---------------	------------------------------

- » If the chain tension does not meet specifications:
 - Adjust the chain tension when fitting rear wheel. (☛ p. 37)

Checking the rear sprocket/engine sprocket for wear

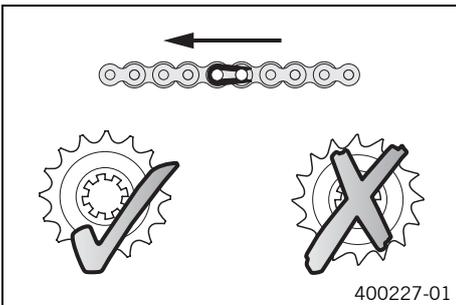


- Check rear sprocket/engine sprocket for wear.
- » If the rear sprocket / engine sprocket are worn:
 - Replace the rear sprocket/engine sprocket.

i Info
 When fitting the split link, always make sure that the closed side of the locking clip faces forward (riding direction).
 The engine sprocket, rear sprocket and chain should always be replaced together.

- Check the chain guide for tightness and wear.

Checking chain wear

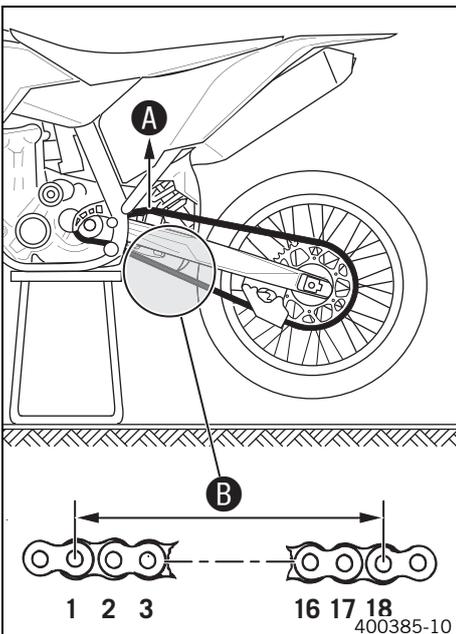

- Jack up the motorcycle. (☛ p. 21)
- Shift transmission to neutral.
- Pull on the upper part of the chain with the specified weight **A**.

Guideline

Weight of chain wear measurement	10... 15 kg (22... 33 lb.)
----------------------------------	----------------------------

- Measure the distance **B** of 18 chain links in the lower chain section.

i Info
 Chain wear is not always even, so you should repeat this measurement at different chain positions.

Maximum distance B at the longest chain section	272 mm (10.71 in)
--	-------------------


- » If the distance **B** is greater than the specified measurement:
 - Replace the chain.

i Info
 When you replace the chain, you should also replace rear sprocket and engine sprocket.
 New chains wear out faster on old, worn sprockets.

- Remove the motorcycle from the work stand. (🔧 p. 21)

Adjusting chain tension


- Warning**
Danger of accidents Danger caused by incorrect chain tension.
- If the chain tension is too high, the components of the secondary power train (chain, engine sprocket, rear sprocket, bearings in transmission and rear wheel) are under additional load. Apart from premature wear, in extreme cases the chain can rupture or the countershaft of the transmission can break. On the other hand, if the chain is loose, it can fall off the engine sprocket or the rear sprocket and block the rear wheel or damage the engine. Check the chain tension and correct if necessary.

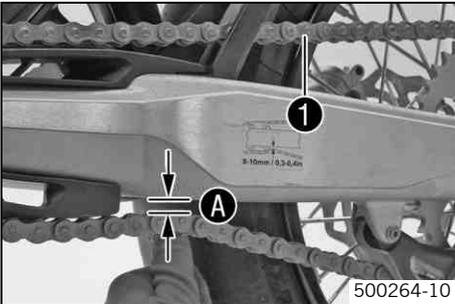

500264-10

- Jack up the motorcycle. (🔧 p. 21)
- Push the chain up at the rear edge of the chain guide to measure the chain tension **A**.

i Info
 The upper chain section **1** must be taut.
 Chain wear is not always even, so you should repeat this measurement at different chain positions.

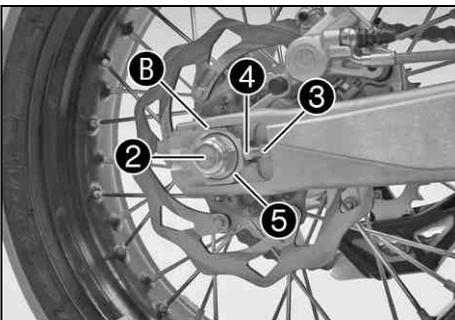

- Loosen nut **2**.
- Loosen nuts **3**.
- Adjust the chain tension by turning the adjusting screws **4** left and right.

Guideline


Chain tension	8... 10 mm (0.31... 0.39 in)
Turn adjusting screws 4 on the left and right so that the markings on the left and right chain adjusters are in the same position relative to the reference marks B . The rear wheel is then correctly aligned.	

- Tighten nuts **3**.
- Make sure that chain adjusters **5** are fitted correctly on adjusting screws **4**.
- Tighten nut **2**.

Guideline

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------


i Info
 The wide adjustment range of the chain adjusters (32 mm) enables different secondary transmissions with the same chain length.
 Chain adjusters **5** can be turned by 180°.

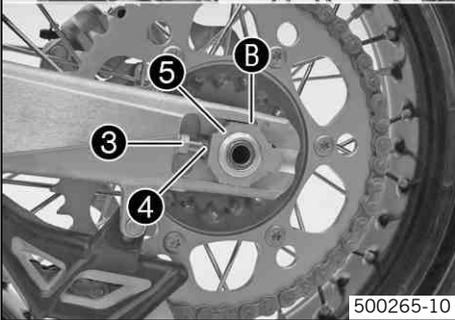

500265-10

- Remove the motorcycle from the work stand. (🔧 p. 21)

Adjusting chain tension - after checking

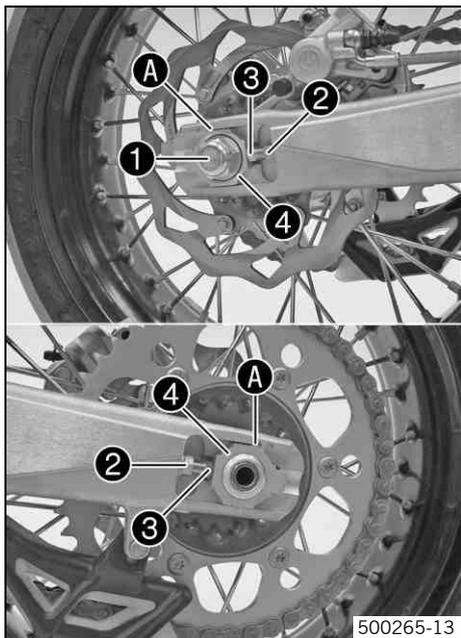

- Loosen nut ❶.
- Loosen nuts ❷.
- Adjust the chain tension by turning the adjusting screws ❸ left and right.

Guideline

Chain tension	8... 10 mm (0.31... 0.39 in)	
Turn the adjusting screws ❸ left and right so that the markings on the left and right chain adjusters are in the same position relative to the reference marks ❶. The rear wheel is then correctly aligned.		


- Tighten nuts ❷.
- Make sure that the chain adjusters ❹ are fitted correctly on the adjusting screws ❸.
- Tighten nut ❶.

Guideline

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------

i Info
The wide adjustment range of the chain adjusters (32 mm) enables different secondary transmissions with the same chain length. The chain adjusters ❹ can be turned by 180°.

Adjusting chain tension - fitting rear wheel

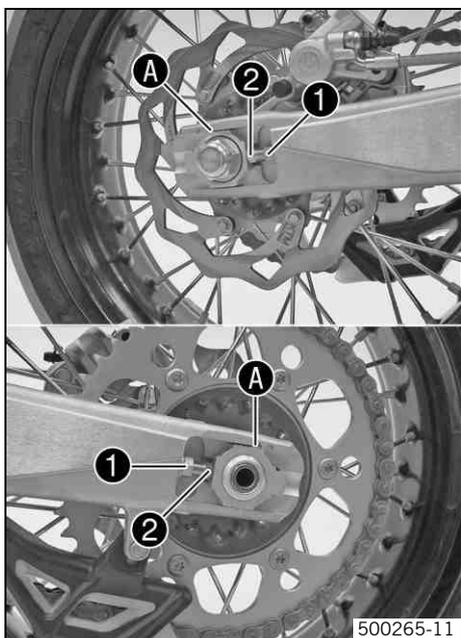


- Loosen nuts ❶.
- Adjust the chain tension by turning the adjusting screws ❷ left and right.

Guideline

Chain tension	8... 10 mm (0.31... 0.39 in)	
Turn the adjusting screws ❷ left and right so that the markings on the left and right chain adjusters are in the same position relative to the reference marks ❶. The rear wheel is then correctly aligned.		

- Tighten nuts ❶.

Adjusting chain guide ↩

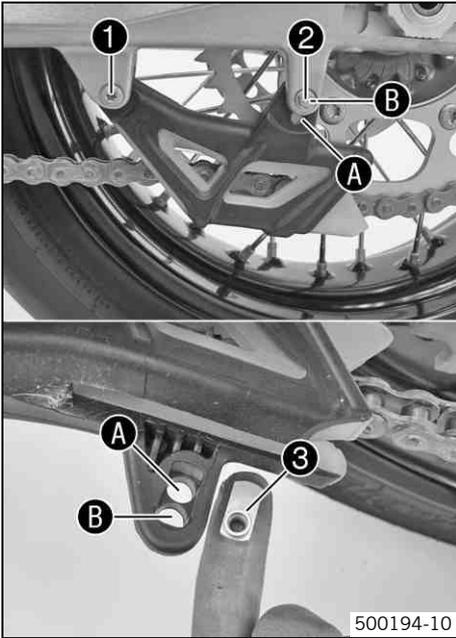

- Remove screws ❶ and ❷. Take off the chain guide.

Condition

Number of teeth: ≤ 44 teeth

- Insert nut ❸ in hole ❶. Position the chain guide.
- Mount and tighten screws ❶ and ❷.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	-----------------------

Condition

Number of teeth: ≥ 45 teeth

- Insert nut ❸ in hole ❷. Position the chain guide.
- Mount and tighten screws ❶ and ❷.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	-----------------------


Checking brake discs



Warning

Danger of accidents Reduced braking efficiency due to worn brake disc(s).

- Change the worn brake disc(s) without delay. (Your authorized KTM workshop will be glad to help.)

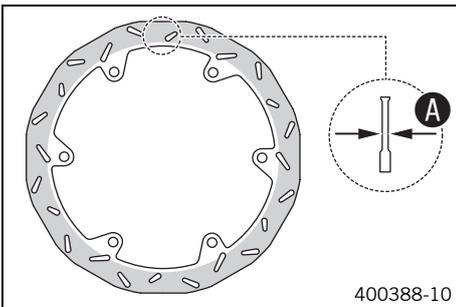

- Check the thickness of the front and rear brake discs at several places on the disk to see if it conforms to measurement ❶.



Info

Wear reduces the thickness of the brake disc around the area used by the brake linings.

Brake discs - wear limit	
Front	4.5 mm (0.177 in)
Rear	3.5 mm (0.138 in)

- » If the brake disc thickness is less than the specified value:
 - Change the brake disc.
- Check the front and rear brake discs for damage, cracking and deformation.
 - » If the brake disc shows signs of damage, cracking or deformation:
 - Change the brake disc.


Checking free travel on hand brake lever



Warning

Danger of accidents Brake system failure.

- If there is no free travel on the hand brake lever, pressure builds up in the front brake circuit. The front brake can fail due to overheating. Adjust free travel on hand brake lever according to specifications.

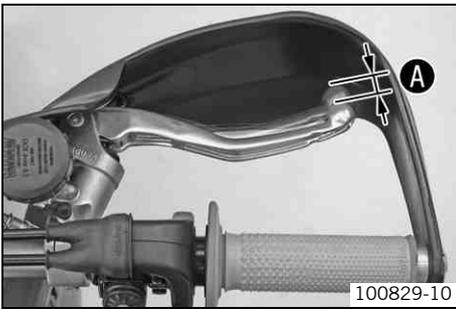


- Push the hand brake lever forwards and check the free travel **A**.

Free travel of hand brake lever	≥ 3 mm (≥ 0.12 in)
---------------------------------	--------------------

- » If the free travel does not meet specifications:
 - Adjust the basic position of the hand brake lever. (☛ p. 39)

Adjusting the basic position of the hand brake lever

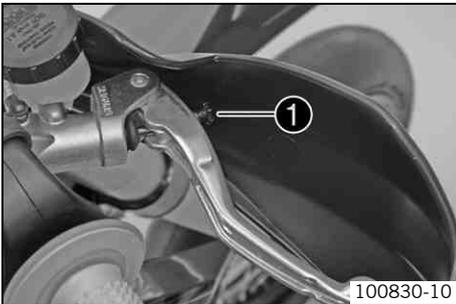

- Check the free travel on the hand brake lever. (☛ p. 38)
- Adjust the basic setting of the hand brake lever to your hand size by turning adjusting screw **1**.

i Info

If you turn the adjusting screw clockwise (as seen in the direction of travel), the hand brake lever moves nearer to the handlebar.
 If you turn the adjusting screw counterclockwise (as seen in the direction of travel), the hand brake lever moves away from the handlebar.
 The range of adjustment is limited.
 Turn the adjusting screw by hand only, and do not apply any force.
 Do not make any adjustments while riding!


Checking the front brake fluid level

Warning
Danger of accidents Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)

Warning
Danger of accidents Reduced braking effect caused by old brake fluid.

- Change the brake fluid of the front and rear brakes according to the service schedule. (Your authorized KTM workshop will be glad to help.)

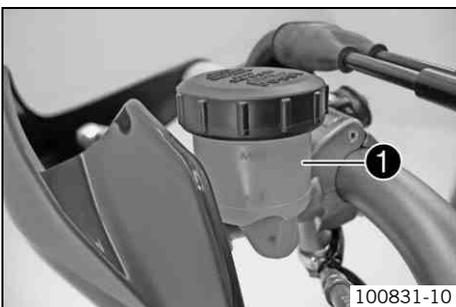

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in the brake fluid reservoir **1**.
 - » If the brake fluid is below the **MIN** marking:
 - Top up the brake fluid of the front brake. ☛ (☛ p. 39)

Adding front brake fluid ☛

Warning
Danger of accidents Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)


Warning
Skin irritation Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid gets into your eyes, rinse thoroughly with water and contact a doctor immediately.

- Warning**
Danger of accidents Reduced braking effect caused by old brake fluid.
- Change the brake fluid of the front and rear brakes according to the service schedule. (Your authorized KTM workshop will be glad to help.)

- Warning**
Environmental hazard Hazardous substances cause environmental damage.
- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

i Info
 Never use DOT 5 brake fluid! This is based on silicone oil and is colored purple. Oil seals and brake lines are not designed for DOT 5 brake fluid.
 Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!
 Use only clean brake fluid from a sealed container!

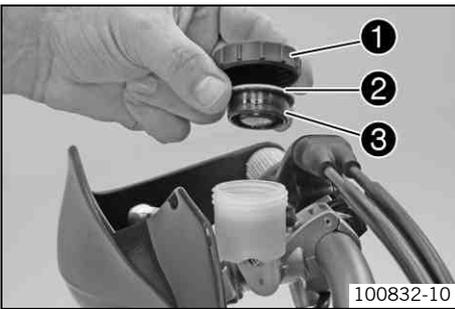

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screw cap ❶.
- Remove plastic ring ❷ with membrane ❸.
- Add brake fluid to level **MAX**.


Brake fluid DOT 4 / DOT 5.1 (☞ p. 84)

- Insert the membrane and plastic ring. Mount and tighten the screw cover.

i Info
 Clean up overflowed or spilt brake fluid immediately with water.

Checking the front brake linings

- Warning**
Danger of accidents Reduced braking efficiency caused by worn brake linings.
- Change worn brake linings immediately. (Your authorized KTM workshop will be glad to help.)

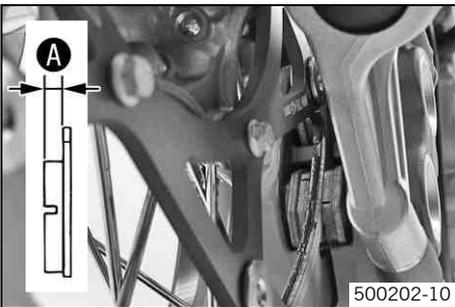

- Check the brake linings for minimum thickness **A**.

Minimum thickness A	≥ 1 mm (≥ 0.04 in)
----------------------------	--------------------


- » If the minimum thickness is less than specified:
 - Change the front brake linings. ☞ (☞ p. 42)
- Check the brake linings for damage and cracking.
 - » If damage or cracking is visible:
 - Change the front brake linings. ☞ (☞ p. 42)

Removing front brake linings ☞


- Warning**
Danger of accident Brake system failure.
- Maintenance work and repairs must be carried out professionally. (Your authorized KTM workshop will be glad to help.)



- Remove locking split pins ❶.

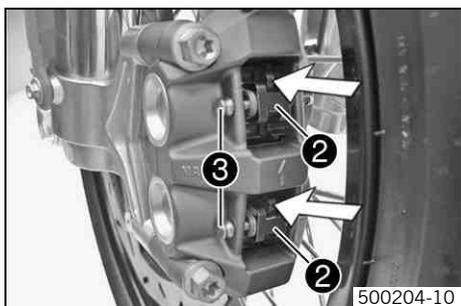

- Press the spring hanger of the spring ② forwards and withdraw the bolt ③.
- Take off the springs ②. Remove brake linings.

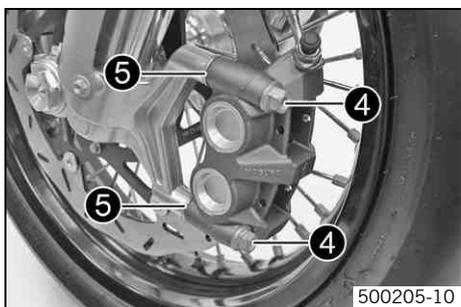

- Remove screws ④ with washers ⑤ and take off the brake caliper.
- Clean the brake caliper.

Installing the front brake linings 🛠️



Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.


- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.




Warning

Danger of accidents Reduced braking efficiency due to use of non-approved brake linings.

- Brake linings available from accessory suppliers are often not tested and approved for use on KTM vehicles. The construction and friction factor of the brake linings and therefore the brake power can differ considerably from the original KTM brake linings. If brake linings are used that differ from the originals, there is no guarantee that they comply with the original license. The vehicle no longer corresponds to the condition at delivery, and the warranty is no longer valid.

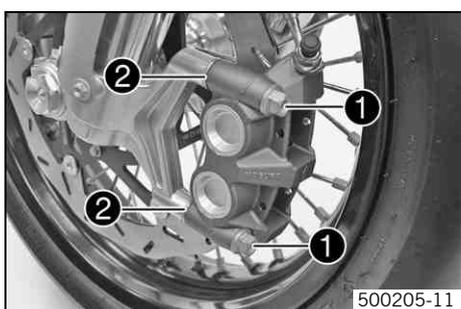

- Check the brake discs. (🔧 p. 38)
- Position the brake caliper. Mount screws ① with washers ② but do not tighten.

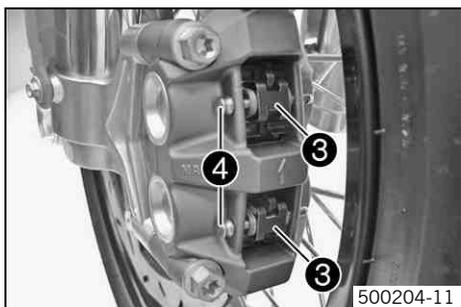

- Insert the brake linings. Position springs ③ and mount bolts ④.



Info

The spring hanger of springs ③ should be positioned at the top.



- Mount locking split pins ⑤.
- Operate the hand brake lever repeatedly until the brake linings lie on the brake disc and there is a pressure point. Fix the hand brake lever while it is activated.
 - ✓ The brake caliper aligns itself.
- Fully tighten screws ①.

Guideline

Screw, front brake caliper	M10x1.25	40 Nm (29.5 lbf ft)	Loctite® 243™
----------------------------	----------	------------------------	----------------------

- Remove the fixation of the hand brake lever.

Changing the front brake linings 🛠️



Warning

Skin irritation Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid gets into your eyes, rinse thoroughly with water and contact a doctor immediately.



Warning

Danger of accidents Reduced braking effect caused by old brake fluid.

- Change the brake fluid of the front and rear brakes according to the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

Never use DOT 5 brake fluid! This is based on silicone oil and is colored purple. Oil seals and brake lines are not designed for DOT 5 brake fluid.
 Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!
 Use only clean brake fluid from a sealed container!

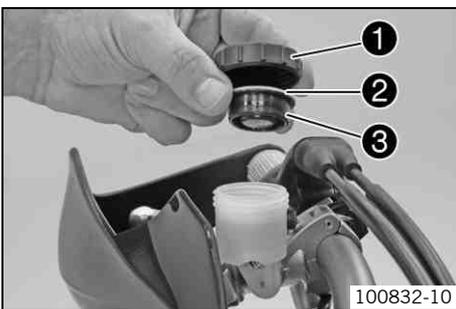

- Remove the front brake linings. 🛠️ (📄 p. 40)
- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screw cap ①.
- Remove plastic ring ② with membrane ③.
- Push the brake piston back to its basic position and ensure that brake fluid does not flow out of the brake fluid reservoir, sucking it away if it does.
- Install the front brake linings. 🛠️ (📄 p. 41)
- Add brake fluid to level **MAX**.

Brake fluid DOT 4 / DOT 5.1 (📄 p. 84)

- Insert the membrane and plastic ring. Mount and tighten the screw cover.




Info

Clean up overflowed or spilt brake fluid immediately with water.

Checking the free travel of the foot brake lever

Warning
Danger of accidents Brake system failure.

- If there is no free travel on the foot brake lever, pressure builds up on the rear brake circuit. The rear brake can fail due to overheating. Adjust free travel on foot brake lever according to specifications.

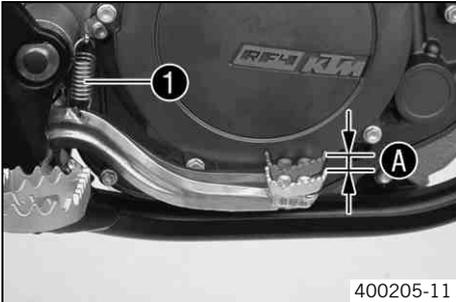

- Disconnect spring ①.
- Move the foot brake lever backwards and forwards between the end stop and the foot brake cylinder piston bracket and check free travel ④.

Guideline


Free travel at foot brake lever	3... 5 mm (0.12... 0.2 in)
---------------------------------	----------------------------

- » If the free travel does not meet specifications:
 - Adjust the basic position of the foot brake lever. ↪ (↪ p. 43)
- Reconnect spring ①.

Adjusting the basic position of the foot brake lever ↪

Warning
Danger of accidents Brake system failure.

- If there is no free travel on the foot brake lever, pressure builds up on the rear brake circuit. The rear brake can fail due to overheating. Adjust free travel on foot brake lever according to specifications.

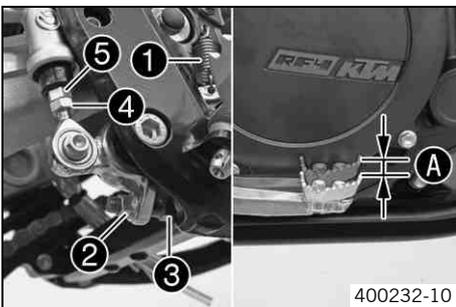

- Disconnect spring ①.
- Loosen nut ④, and with push rod ⑤, turn it back until you have maximum free travel.
- To adjust the basic position of the foot brake lever individually, loosen nut ② and turn screw ③ accordingly.

i Info
 The range of adjustment is limited.

- Turn push rod ⑤ accordingly until you have free travel ④. If necessary, adjust the basic position of the foot brake lever.

Guideline

Free travel at foot brake lever	3... 5 mm (0.12... 0.2 in)
---------------------------------	----------------------------

- Hold screw ③ and tighten nut ②.

Guideline

Remaining nuts, chassis	M8	30 Nm (22.1 lbf ft)
-------------------------	----	------------------------

- Hold push rod ⑤ and tighten nut ④.

Guideline

Remaining nuts, chassis	M6	15 Nm (11.1 lbf ft)
-------------------------	----	------------------------

- Reconnect spring ①.


Checking rear brake fluid level

Warning
Danger of accidents Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)

Warning
Danger of accidents Reduced braking effect caused by old brake fluid.

- Change the brake fluid of the front and rear brakes according to the service schedule. (Your authorized KTM workshop will be glad to help.)

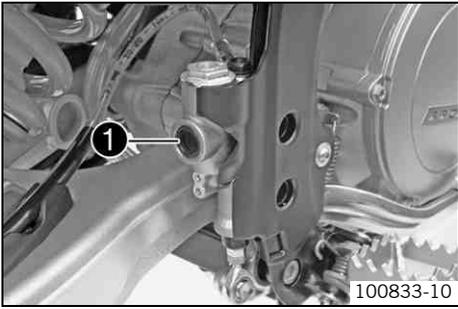

- Stand the vehicle upright.
- Check the brake fluid level in the sight glass ❶.
 - » If there is an air bubble in the sight glass ❶ visible:
 - Add brake fluid to the rear brake circuit. 🛠️ (📖 p. 44)

Adding brake fluid to the rear brake circuit 🛠️

Warning
Danger of accidents Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)

Warning
Skin irritation Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid gets into your eyes, rinse thoroughly with water and contact a doctor immediately.


Warning
Danger of accidents Reduced braking effect caused by old brake fluid.

- Change the brake fluid of the front and rear brakes according to the service schedule. (Your authorized KTM workshop will be glad to help.)

Warning
Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

i Info
 Never use DOT 5 brake fluid! This is based on silicone oil and is colored purple. Oil seals and brake lines are not designed for DOT 5 brake fluid.
 Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!
 Use only clean brake fluid from a sealed container!

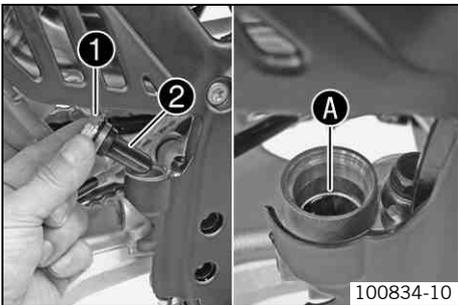


- Stand the vehicle upright.
 - Remove screw cap ❶ with membrane ❷ and the O-ring.
 - Add brake fluid to level A.
- Brake fluid DOT 4 / DOT 5.1 (📖 p. 84)
- Mount the screw cap with the membrane and the O-ring.

i Info
 Clean up overflowed or spilt brake fluid immediately with water.

Checking rear brake linings

Warning
Danger of accidents Reduced braking efficiency caused by worn brake linings.

- Change worn brake linings immediately. (Your authorized KTM workshop will be glad to help.)

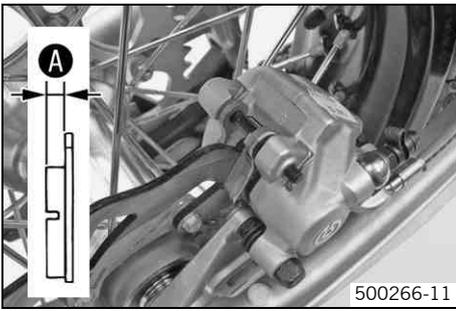

- Check the brake linings for minimum thickness **A**.


Minimum thickness A	≥ 1 mm (≥ 0.04 in)
----------------------------	--------------------

- » If the minimum thickness is less than specified:
 - Change the rear brake linings. (🔧 p. 46)
- Check the brake linings for damage and cracking.
 - » If damage or cracking is visible:
 - Change the rear brake linings. (🔧 p. 46)

Removing rear brake linings 🛠️

Warning
Danger of accident Brake system failure.

- Maintenance work and repairs must be carried out professionally. (Your authorized KTM workshop will be glad to help.)

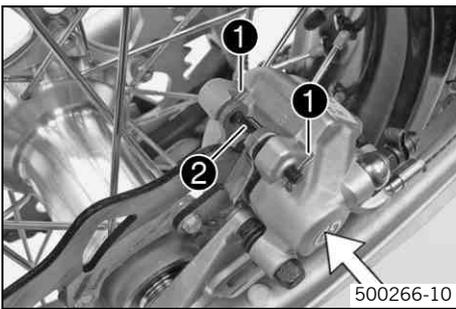

- Press the brake caliper by hand on to the brake disc in order to press back the brake piston.

i Info
 Make sure when pushing back the brake piston that you do not press the brake caliper against the spokes.

- Remove locking split pins **1**, withdraw bolt **2**, and take out the brake linings.
- Clean brake caliper and brake caliper support.


Mounting rear brake linings 🛠️

Warning
Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.


Warning
Danger of accidents Reduced braking efficiency due to use of non-approved brake linings.

- Brake linings available from accessory suppliers are often not tested and approved for use on KTM vehicles. The construction and friction factor of the brake linings and therefore the brake power can differ considerably from the original KTM brake linings. If brake linings are used that differ from the originals, there is no guarantee that they comply with the original license. The vehicle no longer corresponds to the condition at delivery, and the warranty is no longer valid.

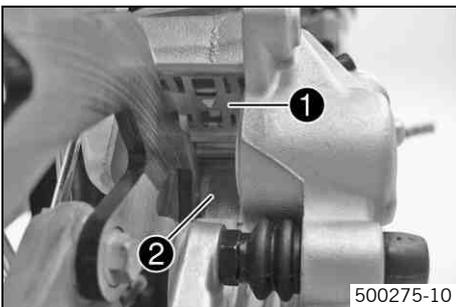

- Check the brake discs. (🔧 p. 38)
- Check that leaf spring **1** in the brake caliper and sliding plate **2** in the brake caliper support are seated correctly.

i Info
 The arrow on the leaf spring points in the rotation direction of the brake disc.

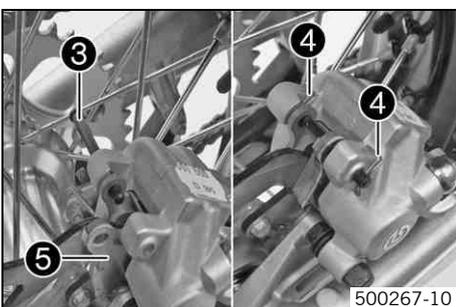

- Insert the brake linings, insert bolt **3**, and mount locking split pins **4**.


i Info
 Make sure that the decoupling plate **5** is mounted on the piston side of the brake lining.

- Operate the foot brake lever repeatedly until the brake linings lie on the brake disc and there is a pressure point.

Changing the rear brake linings

- Warning**
Skin irritation Brake fluid can cause skin irritation on contact.
- Avoid contact with skin and eyes, and keep out of the reach of children.
 - Wear suitable protective clothing and goggles.
 - If brake fluid gets into your eyes, rinse thoroughly with water and contact a doctor immediately.
- Warning**
Danger of accidents Reduced braking effect caused by old brake fluid.
- Change the brake fluid of the front and rear brakes according to the service schedule. (Your authorized KTM workshop will be glad to help.)
- Warning**
Environmental hazard Hazardous substances cause environmental damage.
- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

i Info
 Never use DOT 5 brake fluid! This is based on silicone oil and is colored purple. Oil seals and brake lines are not designed for DOT 5 brake fluid.
 Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!
 Use only clean brake fluid from a sealed container!

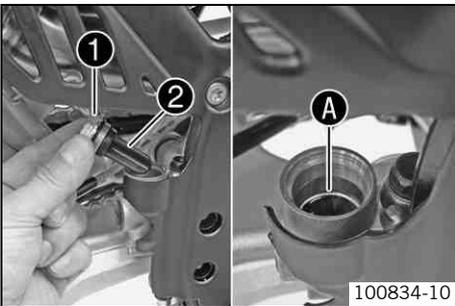


- Remove the rear brake linings. (p. 45)
- Stand the vehicle upright.
- Remove screw cap 1 with membrane 2 and the O-ring.
- Push the brake piston back to its basic position and ensure that brake fluid does not flow out of the brake fluid reservoir, sucking it away if it does.
- Mount the rear brake linings. (p. 45)
- Top up the brake fluid to level A.

Brake fluid DOT 4 / DOT 5.1 (p. 84)


- Mount the screw cap with the membrane and the O-ring.

i Info
 Clean up overflowed or spilled brake fluid immediately with water.

Removing the front wheel

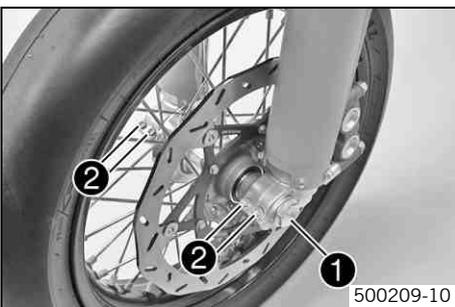


- Jack up the motorcycle. (p. 21)
- Remove screw 1.
- Loosen screw 2.

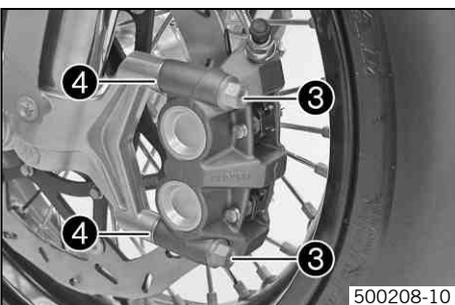

- Remove screws 3 with washers 4 and take off the brake caliper.

i Info
 Do not pull the hand brake lever when the brake caliper is removed.

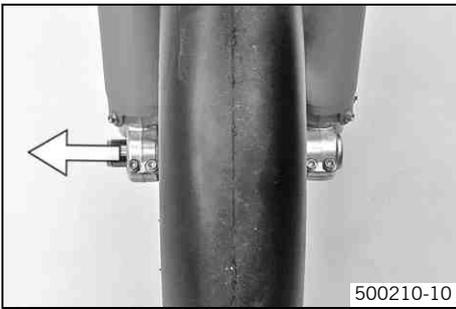


500210-10

- Holding the front wheel, withdraw the wheel spindle. Take the front wheel out of the fork.



Info

Always lay the wheel down in such a way that the brake disc is not damaged.

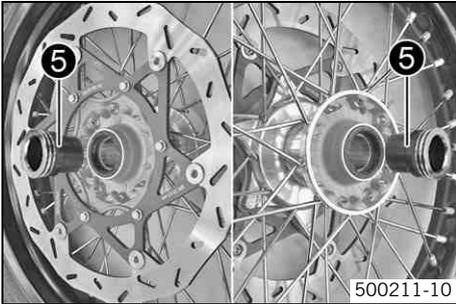

500211-10

- Remove spacing sleeves 5.


Installing the front wheel



Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

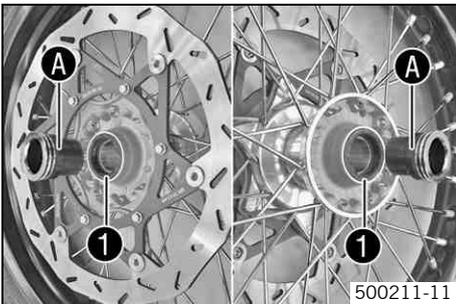

500211-11

- Clean and grease shaft seal rings 1 and bearing surface A of the spacers.

Long-life grease (☛ p. 86)

- Insert the spacers.




500212-10

- Lift the front wheel into the fork, position it, and insert the wheel spindle.
- Mount and tighten screw 2.

Guideline

Screw, front wheel spindle	M24x1.5	45 Nm (33.2 lbf ft)
----------------------------	---------	------------------------

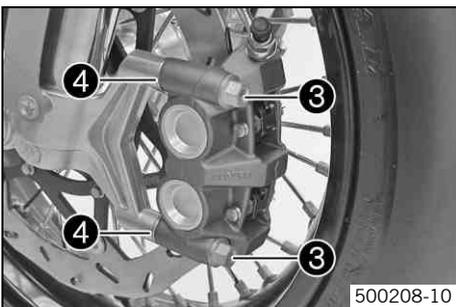

500208-10

- Position the brake caliper. Mount screws 3 with washers 4 but do not tighten.
- Operate the hand brake lever repeatedly until the brake linings lie on the brake disc and there is a pressure point. Fix the hand brake lever while it is activated.


✓ The brake caliper aligns itself.

- Fully tighten screws 3.

Guideline

Screw, front brake caliper	M10x1.25	40 Nm (29.5 lbf ft)	Loctite® 243™
----------------------------	----------	------------------------	----------------------

- Remove the fixation of the hand brake lever.

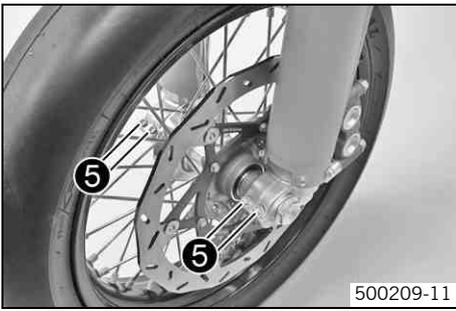



500209-11

- Remove the motorcycle from the work stand. (☛ p. 21)
- Pull the front wheel brake and push down hard on the fork several times to align the fork legs.
- Fully tighten screws 5.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	------------------------

Removing the rear wheel ☛

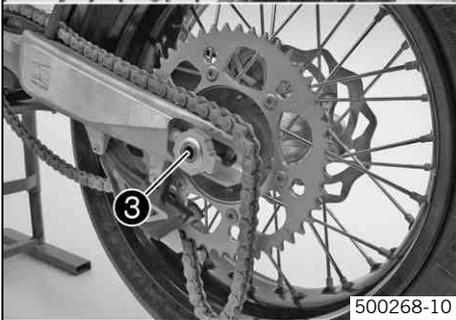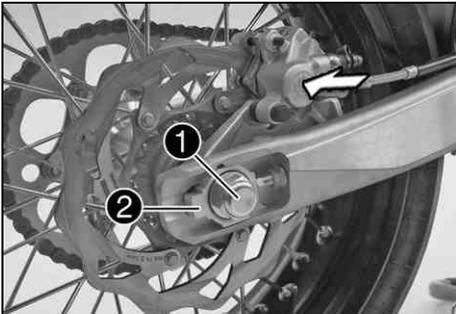


500268-10

- Jack up the motorcycle. (☛ p. 21)
- Press the brake caliper by hand on to the brake disc in order to press back the brake piston.

i Info
Make sure when pushing back the brake piston that you do not press the brake caliper against the spokes.

- Remove nut 1.
- Remove chain adjuster 2. Withdraw wheel spindle 3 only enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.
- Holding the rear wheel, withdraw the wheel spindle. Take the rear wheel out of the swingarm.

i Info
Do not operate the foot brake when the rear wheel is removed. Always lay the wheel down in such a way that the brake disc is not damaged.

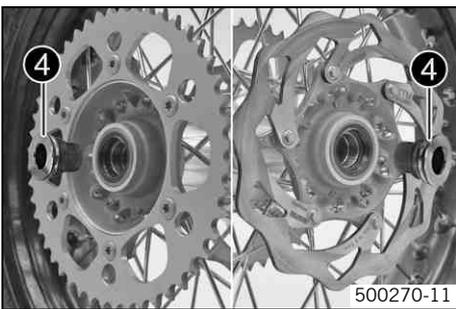


500270-11

- Remove spacers 4.

Installing the rear wheel ☛

Warning
Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

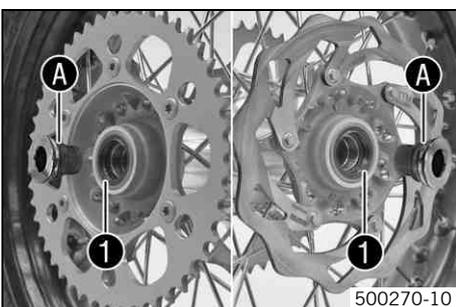


500270-10


- Clean and grease shaft seal rings 1 and bearing surface A of the spacers.

Long-life grease (☛ p. 86)

- Insert the spacers.

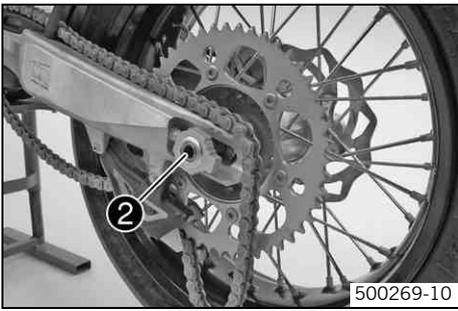

- Lift the rear wheel into the swing arm, position it, and insert the wheel spindle ②.
- Put the chain on.

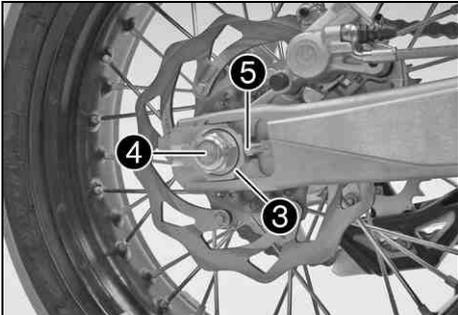


- Position the chain adjuster ③. Mount nut ④, but do not tighten it yet.
- Check chain tension when fitting rear wheel. (☛ p. 35)
- Make sure that the chain adjusters ③ are fitted correctly on the adjusting screws ⑤.
- Tighten nut ④.

Guideline

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------


i Info
 The wide adjustment range of the chain adjusters (32 mm) enables different secondary transmissions with the same chain length.
 The chain adjusters ③ can be turned by 180°.

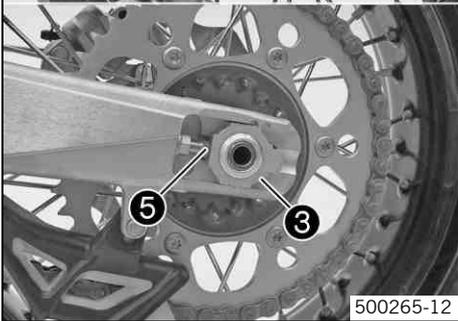

- Operate the foot brake lever repeatedly until the brake linings lie on the brake disc and there is a pressure point.
- Remove the motorcycle from the work stand. (☛ p. 21)

Checking the tire condition

i Info
 Only mount tires approved and/or recommended by KTM.
 Other tires could have a negative effect on vehicle handling.
 The type, condition and air pressure of the tires all have an important impact on the riding behavior of the motorcycle.
 The tires mounted on the front and rear wheels must have a similar profile.
 Worn tires have a negative effect on riding behavior, especially on wet surfaces.

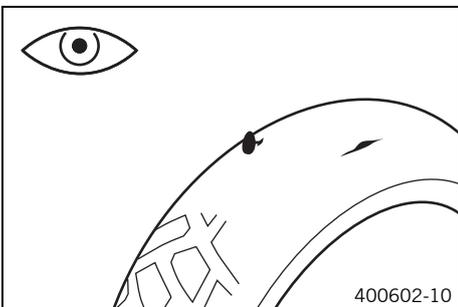


- Examine the front and rear tires for cuts, foreign bodies and other damage.
 - » If you find cuts, foreign bodies or other damage on a tire:
 - Change the tire.
- Check the tire age.

i Info
 The tire manufacture date is usually included in the tire identification number and comprises the last four digits of the **DOT** code. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.
 KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tire is older than five years:
 - Change the tire.

Checking the tire air pressure

i Info
 Low tire air pressure leads to abnormal wear and overheating of the tire.
 Correct tire air pressure ensures optimal riding comfort and maximum tire service life.

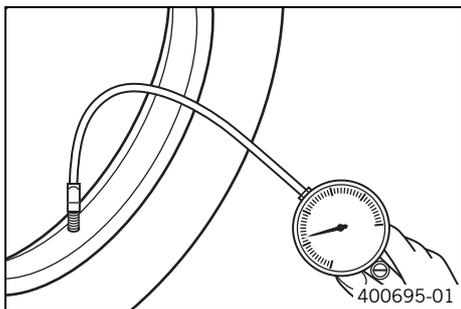

- Remove the dust cap.
- Check tire air pressure when tires are cold.


Tire air pressure	
Front	1.6 bar (23 psi)
Rear	1.6 bar (23 psi)

- » If the tire pressure does not meet specifications:
 - Correct the tire pressure.
- Mount the dust cap.

Checking spoke tension

! Warning
Danger of accidents Instable handling due to incorrect spoke tension.
 - Ensure that the spoke tension is correct. (Your authorized KTM workshop will be glad to help.)

i Info
 A loose spoke can cause wheel imbalance, which leads to more loose spokes in a short time.
 If the spokes are too tight, they can break due to local overload.
 Check the spoke tension regularly, especially on a new motorcycle.

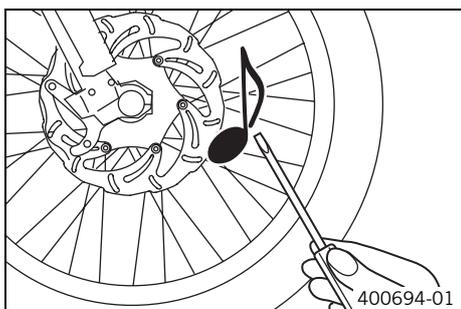

- Tap each spoke with a screwdriver.

i Info
 The sound frequency depends on the length and thickness of the spoke.
 If there are different sound frequencies in spokes with the same length and thickness, this indicates different spoke tensions.

You should hear a high note.

- » If the spoke tension varies:
 - Correct the spoke tension. 🛠️
- Check the spoke torque.

Guideline

Spoke nipple, front wheel	M4.5	5... 6 Nm (3.7... 4.4 lbf ft)
Spoke nipple, rear wheel	M5	5... 6 Nm (3.7... 4.4 lbf ft)


Torque wrench with various accessories in set (58429094000)

Removing the battery 🛠️


! Warning
Risk of injury Battery acid and battery gases cause serious cauterization.

- Keep batteries out of the reach of children.
- Wear suitable protective clothing and goggles.
- Avoid contact with battery acid and battery gases.
- Keep the battery away from sparks or open fire. Charge only in well ventilated rooms.
- In the event of skin contact, rinse with large amounts of water. If battery acid gets in the eyes, rinse with water for at least 15 minutes and contact a doctor.

- Switch off all power-consuming components and switch off the engine.
- Remove the seat. (☛ p. 53)
- Disconnect the negative (minus) cable ❶ of the battery.
- Pull back the plus pole cover ❷ and disconnect the positive (plus) cable of the battery.
- Hang the rubber band ❸ out to the bottom.
- Lift the battery up.

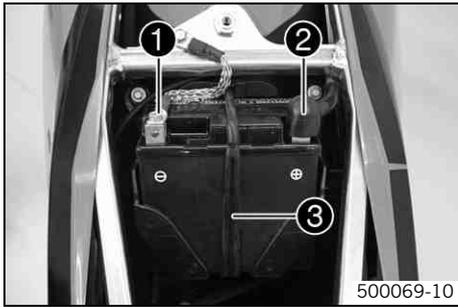

Installing the battery ☛

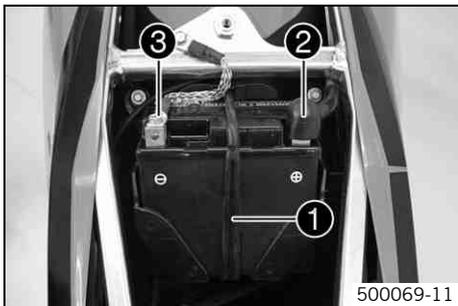

- Place the battery in the battery holder.

Condition

External temperature: $\geq 10\text{ }^{\circ}\text{C}$ ($\geq 50\text{ }^{\circ}\text{F}$)

3Ah battery (YTX4L-BS) (☛ p. 77)

Condition

External temperature: $\leq 10\text{ }^{\circ}\text{C}$ ($\leq 50\text{ }^{\circ}\text{F}$)

Battery (YTX5L-BS) (☛ p. 77)

- Reconnect the rubber band ❶.
- Attach the plus cable and replace the plus pole cover ❷.
- Attach the minus cable ❸.
- Mount the seat. (☛ p. 53)

Recharging the battery ☛



Warning

Risk of injury Battery acid and battery gases cause serious cauterization.

- Keep batteries out of the reach of children.
- Wear suitable protective clothing and goggles.
- Avoid contact with battery acid and battery gases.
- Keep the battery away from sparks or open fire. Charge only in well ventilated rooms.
- In the event of skin contact, rinse with large amounts of water. If battery acid gets in the eyes, rinse with water for at least 15 minutes and contact a doctor.



Warning

Environmental hazard Battery parts and acid are harmful to the environment.

- Do not discard batteries with the household trash. Dispose of a defective battery in an environmentally compatible manner. Give the battery to your KTM dealer or to a recycling center that accepts used batteries.



Warning

Environmental hazard Hazardous substances cause environmental damage.


- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

Even if there is no load on the battery, it loses power every day. The charge state and the type of charge are very important for the service life of the battery. Fast recharging with a high charge current shortens the battery's service life. If the charge current, the charge voltage and the charge time are exceeded, electrolyte escapes through the breathing holes. The battery capacity is then reduced. If the battery is discharged from starting, it must be recharged immediately. If it stands for a long time in a discharged state, the battery becomes over-discharged and sulfated, and then it is destroyed. The battery is maintenance-free, i.e., the acid level does not have to be checked.

- Switch off all consumers and the engine.
- Remove the seat. (☛ p. 53)
- Disconnect the minus (negative) cable of the battery to avoid damage to the motorcycle's electronics.
- Connect the battery charger to the battery. Switch on the battery charger.

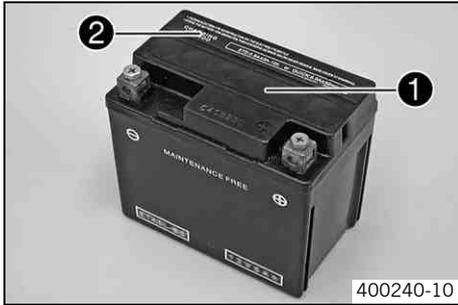

Battery charger (58429074000)

You can also use the battery charger to test the open-circuit voltage and cranking power of the battery, and to test the generator. With this device, you cannot over-charge the battery.

i Info
 Never remove the lid ❶.
 Charge the battery with at most 10% of the capacity specified on the battery ❷.

- Switch off the charger after charging. Disconnect the battery.


Guideline

The charge current, charge voltage and charge time must not be exceeded.

Charge the battery regularly when the motorcycle is not in use	3 months
--	----------

- Mount the seat. (☛ p. 53)

Removing a fuse

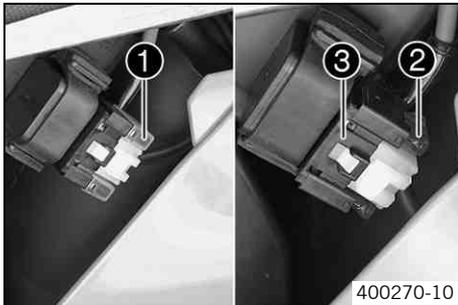

- Switch off all consumers and the engine.
- Remove the air filter box lid. (☛ p. 58)
- Remove protective cover ❶.


i Info
 The fuse ❷ is located in the starter relay ❸ under the filter box cover.

- Remove the fuse ❷.

Installing the fuse

⚠ Warning
Fire hazard The electrical system can be overloaded by the use of incorrect fuses.

- Use only fuses with the prescribed amperage. Never by-pass or repair fuses.

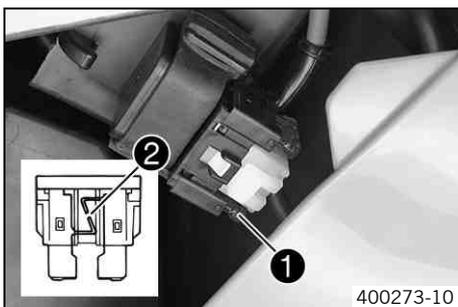


- Insert the fuse.

Fuse (58011109110)

i Info
 A reserve fuse ❶ is located in the starter relay.
 Replace a blown fuse ❷ only by an equivalent fuse.

- Replace the protection cover.
- Install the air filter box lid. (☛ p. 59)

Ignition curve plug connection

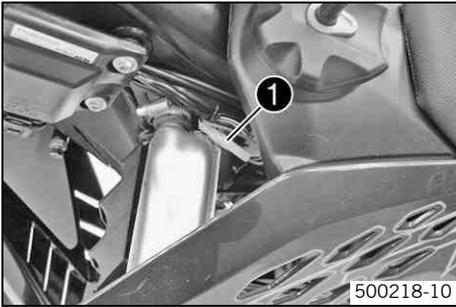

Plug connection ❶ is located in front of the fuel tank on the left side of the frame.

Possible states

- Soft – The plug connection is disconnected to achieve better driveability.
- Performance – The plug connection is connected to achieve better performance.

Changing the ignition curve


Change the ignition curve from Performance to Soft.

- Disconnect plug connection ❶. (Figure 500218-10 p. 53)
- ✓ Soft – better driveability

Change the ignition curve from Soft to Performance.

- Connect plug connection ❶. (Figure 500218-10 p. 53)
- ✓ Performance – higher performance

Removing the seat

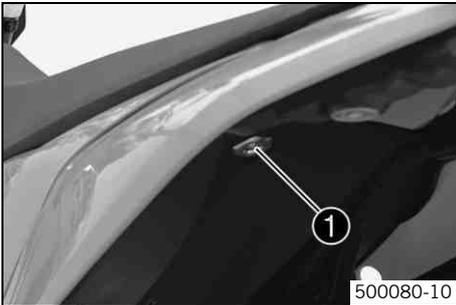

- Remove screw ❶. Lift up the seat at the rear, pull it back and then remove from above.

Mounting the seat



- Hook in the front of the seat at the collar sleeve of the fuel tank, lower it at the rear and simultaneously push it forward.
- Make sure that the seat is correctly locked in.
- Mount and tighten the screw of the seat fixing.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

Removing the fuel tank



Danger

Fire hazard Fuel is highly flammable.

- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.




Warning


Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact between fuel and skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel. Store fuel in a suitable canister according to regulations and keep it out of the reach of children.


- Remove the seat. (p. 53)

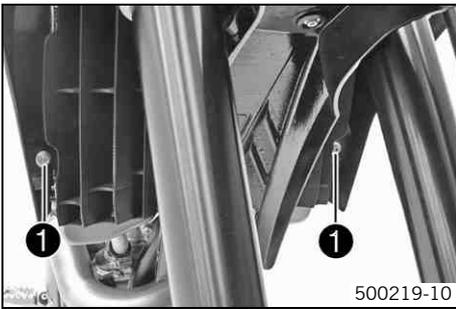

- Turn the handle ❶ of the fuel tap to the **OFF** position. (Figure 500178-10 p. 11)
- Remove screws ❶ with the collar sleeve.

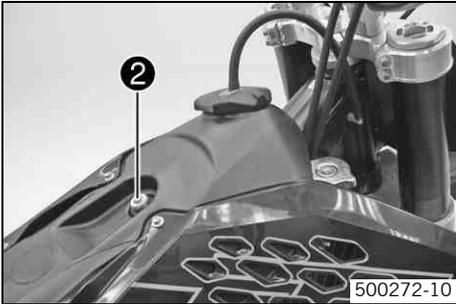

- Remove screw ❷ with the collar sleeve.
- Remove the tube from the fuel tank vent line.

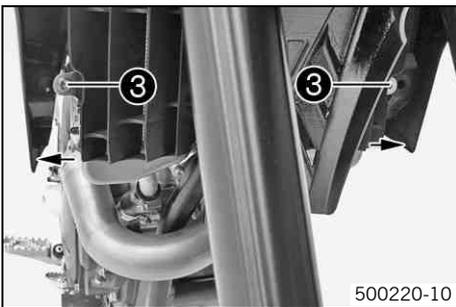

- Pull both spoilers laterally off the radiator bracket ❸ and lift off the fuel tank.

Installing the fuel tank ↩

! Danger
Fire hazard Fuel is highly flammable.


- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.

! Warning
Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact of the fuel with skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel.




- Position the fuel tank and mount the two spoilers to the side of the radiator fixing.
- Make sure that no cables or throttle cables are trapped or damaged.

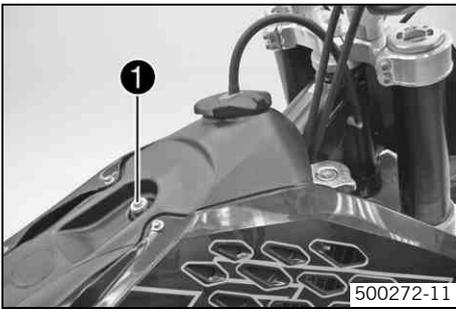

- Mount the fuel tank vent hose.
- Mount and tighten 1 with the collar sleeve.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

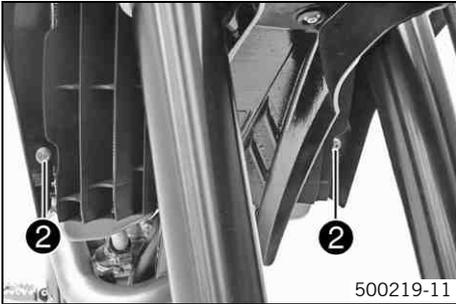


- Mount and tighten screws 2 with the collar sleeve.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Connect the fuel hose.
- Mount the seat. (☛ p. 53)

Cooling system

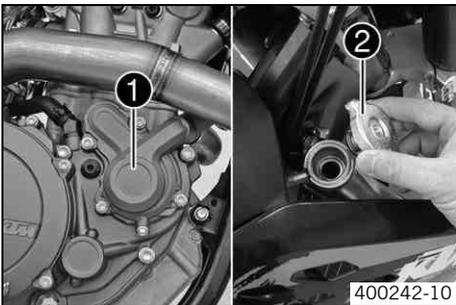

Water pump 1 in the engine circulates the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap 2. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C (248 °F)

Cooling is effected by the air stream.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

Checking the anti-freeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.



Warning

Danger of poisoning Coolant is poisonous and a health hazard.

- Avoid contact between coolant and skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come into contact with coolants. Keep coolant out of the reach of children.

Condition

Engine is cold.

- Stand the motorcycle upright on a horizontal surface.
- Remove radiator cap.
- Check the anti-freeze of the coolant.


-25... -45 °C (-13... -49 °F)

- » If the anti-freeze of the coolant does not meet specifications:
 - Correct the anti-freeze of the coolant.

- Check the coolant level in the radiator.

Coolant level A above radiator fins.	10 mm (0.39 in)
--------------------------------------	-----------------

- » If the level of the coolant does not meet specifications:

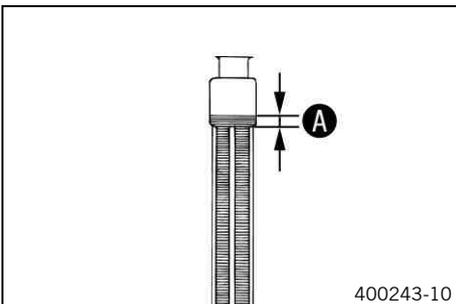

- Correct the coolant level.

Alternative 1

Coolant (☛ p. 84)

Alternative 2

Coolant (mixed ready to use) (☛ p. 84)
--

- Refit the radiator cap.

Checking the coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.


- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.



Warning

Danger of poisoning Coolant is poisonous and a health hazard.

- Avoid contact between coolant and skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come into contact with coolants. Keep coolant out of the reach of children.

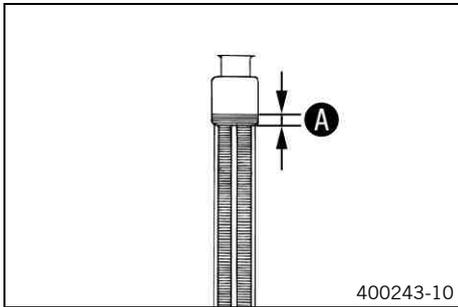

Condition

The engine is cold.

- Stand the motorcycle upright on a horizontal surface.
- Remove radiator cap.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins.	10 mm (0.39 in)
---	-----------------

- » If the coolant level does not meet specifications:
 - Correct the coolant level.

Alternative 1

Coolant (☛ p. 84)

Alternative 2

Coolant (mixed ready to use) (☛ p. 84)
--

- Mount the radiator cap.

Draining coolant ☛



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.


- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.



Warning

Danger of poisoning Coolant is poisonous and a health hazard.

- Avoid contact between coolant and skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come into contact with coolants. Keep coolant out of the reach of children.

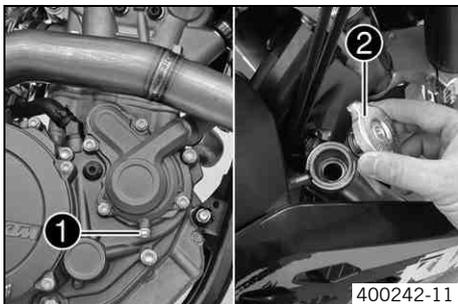

- Stand the motorcycle upright.
- Place a suitable container under the water pump cover.
- Remove screw **1**. Remove radiator cap **2**.
- Completely drain the coolant.
- Mount and tighten screw **1** with a new seal ring.


Guideline

Screw, water pump cover	M6	10 Nm (7.4 lbf ft)
-------------------------	----	--------------------

Refilling coolant

Warning
Danger of poisoning Coolant is poisonous and a health hazard.

- Avoid contact between coolant and skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come into contact with coolants. Keep coolant out of the reach of children.

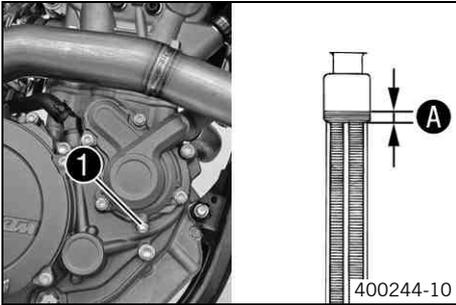

- Make sure that the screw ❶ is tightened.
- Stand the vehicle upright.
- Pour coolant in up to measurement A above the radiator fins.

Guideline

10 mm (0.39 in)


Coolant	1.2 l (1.3 qt.)	Coolant ( p. 84)
		Coolant (mixed ready to use) ( p. 84)

- Refit the radiator cap.
- Make a short test ride.
- Check the coolant level. ( p. 56)

Removing main silencer


Warning
Danger of burns The exhaust system gets very hot when the vehicle is driven.

- Allow the exhaust system to cool down. Do not touch hot components.

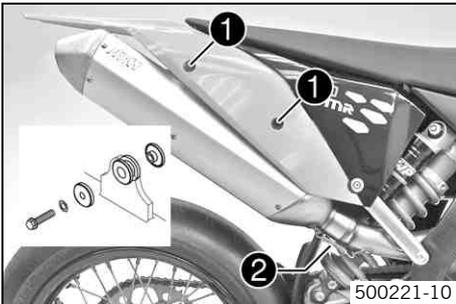

- Disconnect spring ❶.
- Remove screws ❷ and take off main silencer.

Installing the main silencer

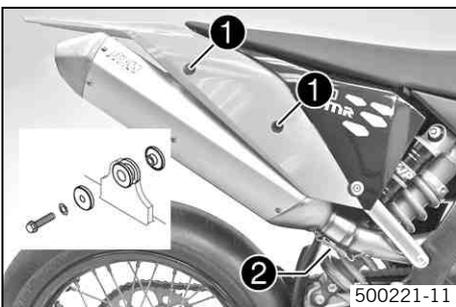

- Mount the main silencer. Mount and tighten screws ❶.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Reconnect spring ❷.

Glass fiber yarn filling of main silencer

The main silencer is filled with glass fiber yarn.

Over a period, the fibers of the insulating material vanish into the air, and the silencer "burns out". Not only is the noise level higher, the performance characteristic changes.


Removing the glass fiber yarn filling of the main silencer



Warning


Danger of burns The exhaust system gets very hot when the vehicle is driven.

- Allow the exhaust system to cool down. Do not touch hot components.

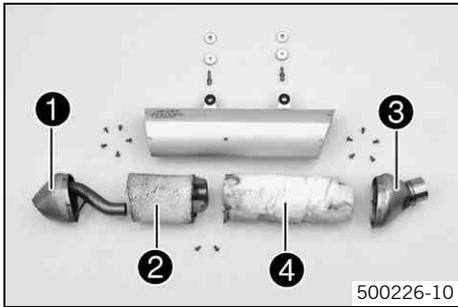

- Remove the main silencer. (☞ p. 57)
- Remove screws of end cap ①. Remove the end cap.
- Remove screws of insert ②. Remove insert.
- Remove screws of connecting cap ③. Remove cap.
- Remove inner-tube ④.
- Remove glass fiber yarn filling from insert ③ and inner-tube ④.
- Clean the parts you want to use again.

Installing the glass fiber yarn filling of the main silencer

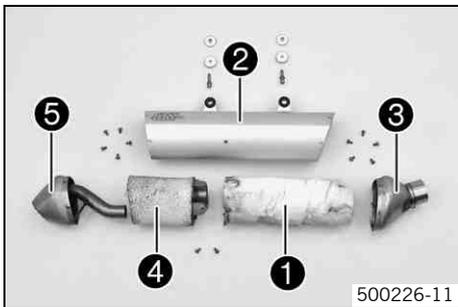

- Attach the glass fiber yarn filling to inner tube ①. Mount the inner tube in outer tube ②.
- Mount connecting cap ③. Mount and tighten the screws.
- Attach the glass fiber yarn filling to insert ④. Mount the insert into outer tube ②. Mount and tighten the screws.
- Mount locking cap ⑤. Mount and tighten the screws.
- Install the main silencer. (☞ p. 57)

Changing glass fiber yarn filling of main silencer




- Remove the glass fiber yarn filling of the main silencer. (☞ p. 58)
- Install the glass fiber yarn filling of the main silencer. (☞ p. 58)

Removing the air filter box lid



- Pull off the air filter box lid in area ① to the side and remove to the front.

Installing the air filter box lid

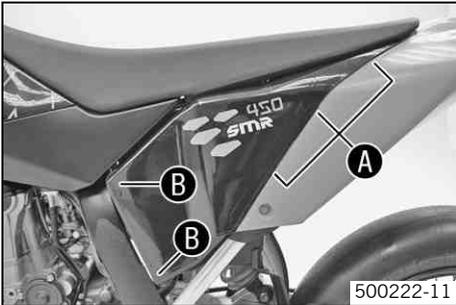

- Insert the air filter box lid into the rear area **A** and clip it into the front area **B**.

Removing the air filter

Note

Engine failure Unfiltered intake air has a negative effect on the service life of the engine.


- Never ride the vehicle without an air filter since dust and dirt can get into the engine and result in increased wear.



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

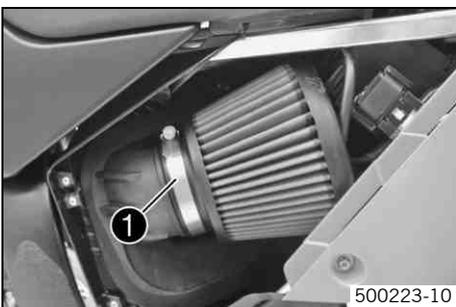

- Remove the air filter box lid. (☞ p. 58)
- Undo the hose clip **1**.
- Remove the air filter.

Installing the air filter

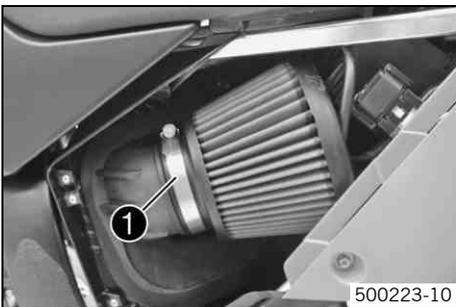

- Mount a clean air filter.



Info

If the air filter is not correctly mounted, dust and dirt can penetrate into the engine and can cause damage.

- Position and tighten hose clamp **1**.
- Install the air filter box lid. (☞ p. 59)

Cleaning air filter



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

Do not use fuel or kerosene for cleaning the air filter.

- Remove the air filter. ☞ (☞ p. 59)



- Remove large pieces of dirt by shaking. Use a soft brush to clean the air filter.
- Spray on the cleaner and let it penetrate for 10 minutes.

Air filter cleaner (☞ p. 86)

- Rinse the air filter from the inside with a soft jet of water.
- Shake off remaining water. Allow the air filter to dry.



Info

Do not use compressed air for drying!

- Spray the dry air filter carefully with filter oil.

Air filter oil (☞ p. 86)

- Allow the filter oil to penetrate for 20 minutes.
- Clean the air filter box.
- Check the distribution of the filter oil.
 - » If unoiled areas are visible:
 - Oil the air filter again.
- Wipe off excess filter oil.




Info

Do not over-oil the air filter.

- Check carburetor connection boot for damage and tightness.
- Install the air filter. ☞ (☞ p. 59)

Adjusting basic position of clutch lever

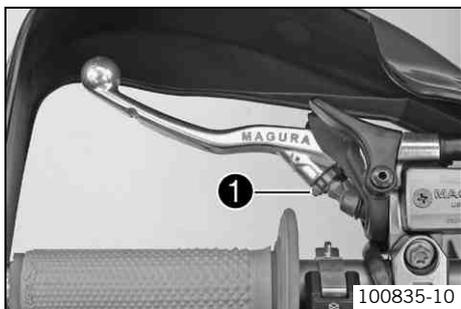

- Adjust the basic setting of the clutch lever to your hand size by turning adjusting screw ①.



Info

Turn the adjusting screw counterclockwise to increase the distance between the clutch lever and the handlebar.


Turn the adjusting screw clockwise to decrease the distance between the clutch lever and the handlebar.

The range of adjustment is limited.


Turn the adjusting screw by hand only, and do not apply any force.

Do not make any adjustments while riding!

Antihopping clutch

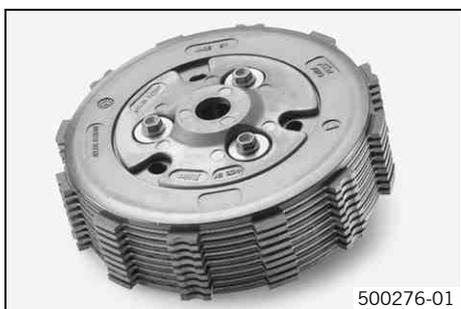

The antihopping system reduces the force required to activate the clutch and improves clutch handling; in addition, it increases riding stability by reducing slippage of the rear wheel by means of engine braking action during downshifting.

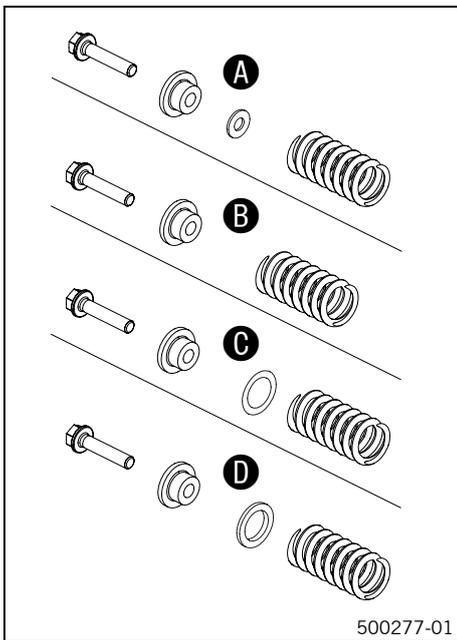


The antihopping system uses a two-part inner clutch hub that is connected to a helical gear.
 The clutch spring preload can be adjusted if necessary.
 The upper illustration shows the lowest and the lower illustration the highest preload of the clutch springs.

With small shim A	-1.0 mm (-0.039 in)
Without shim B	0 mm (0 in)
With large thin shim C	1.0 mm (0.039 in)
With large thick shim D (as delivered)	1.5 mm (0.059 in)


When the engine load is high (large engine torque), the turning action presses the two parts of the inner clutch hub against each other, corresponding to the helical gearing, thereby pressing the clutch facings against each other in addition to the clutch springs. This additional press force means that the clutch springs require less preloading; as a result, when downshifting, slippage arises briefly at the clutch and prevents rear wheel hopping.

Adjusting the antihopping clutch

i Info
 The characteristic can be influenced by the spring preload force but is strongly dependent on how the vehicle is used and on the riding style of the rider.
 Increasing the spring preload force causes the clutch to open later when braking (more engine braking force). The clutch also engages differently when starting, but the differences are considerably less pronounced than when braking. The clutch behaves somewhat more aggressively.

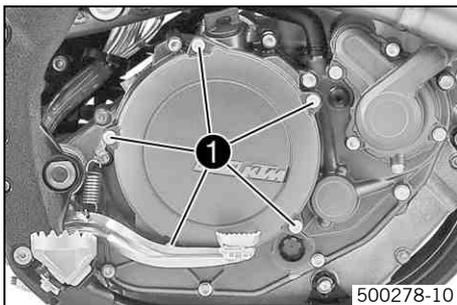

- Rest the vehicle on the plug-in stand.
- Remove screws **1**. Remove the outer clutch cover.

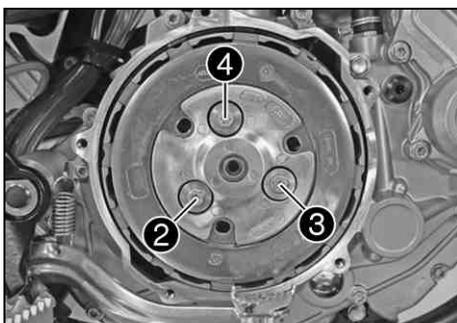

- Remove screw **2** together with the spring retainer and the clutch spring.

i Info
 Do not remove all screws at once!

- Remove or add the desired washer. Mount and tighten screw **2** together with the spring retainer and the clutch spring.

Guideline


Screw, clutch spring	M5	6.5 Nm (4.79 lbf ft)
----------------------	----	-------------------------

i Info
 No more than one washer may be used!

- Remove screw **3** together with the spring retainer and the clutch spring.
- Remove or add the desired washer. Mount and tighten screw **3** together with the spring retainer and the clutch spring.

Guideline

Screw, clutch spring	M5	6.5 Nm (4.79 lbf ft)
----------------------	----	-------------------------

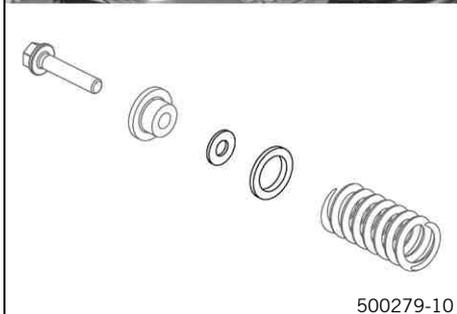



Info

The number and thickness of washers must be the same on all screws!

- Remove screw ④ together with the spring retainer and the clutch spring.
- Remove or add the desired washer. Mount and tighten screw ④ together with the spring retainer and the clutch spring.

Guideline

Screw, clutch spring	M5	6.5 Nm (4.79 lbf ft)
----------------------	----	-------------------------




Info

The number and thickness of washers must be the same on all screws!

- Position the outer clutch cover. Mount and tighten screws ①.

Guideline

Screw, clutch cover	M6	10 Nm (7.4 lbf ft)
---------------------	----	--------------------

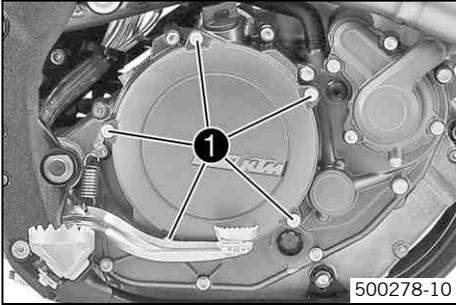


Checking the fluid level of hydraulic clutch



Info

The fluid level rises with increasing wear of the clutch lining disc.
Do not use brake fluid.

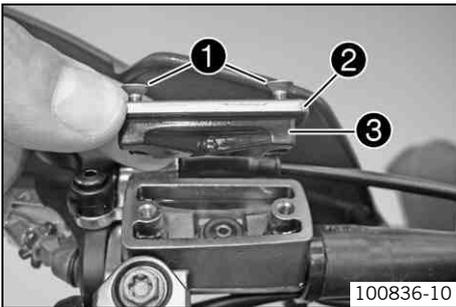

- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Remove cover ② with membrane ③.
- Check the fluid level.

Fluid level below container rim	4 mm (0.16 in)
---------------------------------	----------------

- » If the level of the fluid does not meet specifications:
 - Correct the fluid level of the hydraulic clutch.

Hydraulic fluid (15) (☛ p. 84)

- Position the cover with the membrane. Mount and tighten the screws.


Changing the hydraulic clutch fluid ☞




Warning

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

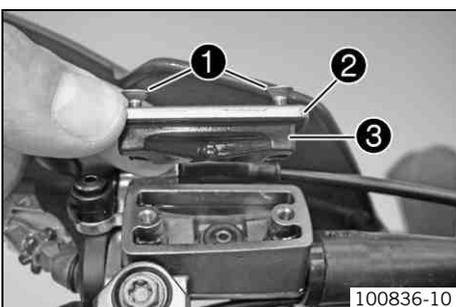

- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Remove cover ② with membrane ③.

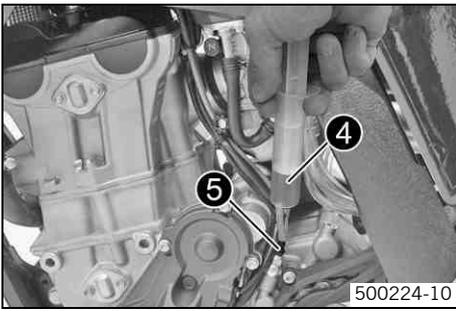


500224-10

- Fill bleeding syringe ④ with the appropriate hydraulic fluid.

Bleed syringe (50329050000)

Hydraulic fluid (15) (☛ p. 84)

- On the slave cylinder, remove bleeder screw ⑤ and mount bleeding syringe ④.

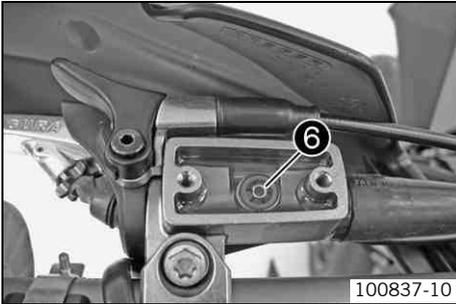

100837-10


- Inject the liquid into the system until it escapes from bore hole ⑥ of the master cylinder without bubbles.
- To prevent overflow, drain fluid occasionally from the master cylinder reservoir.
- Remove the bleeding syringe. Mount and tighten the bleeder screw.
- Correct the fluid level of the hydraulic clutch.

Guideline

Fluid level below container rim	4 mm (0.16 in)
---------------------------------	----------------

- Position the cover with the membrane. Mount and tighten the screws.

Checking the basic position of the shift lever

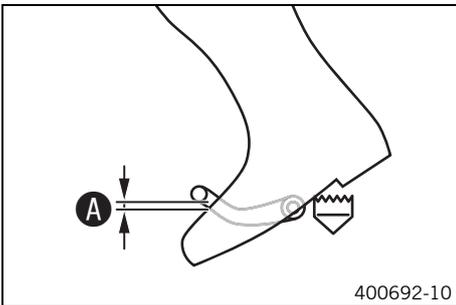


400692-10

- Sit on the vehicle (facing the direction of travel) and measure the gap between the top of the boot and shift lever ①.

Gap between the shift lever and the top of the boot	10... 20 mm (0.39... 0.79 in)
---	-------------------------------


- » If the distance does not meet the specifications:
 - Adjust the basic position of the shift lever. ☛ (☛ p. 63)

Adjusting the basic position of the shift lever ☛

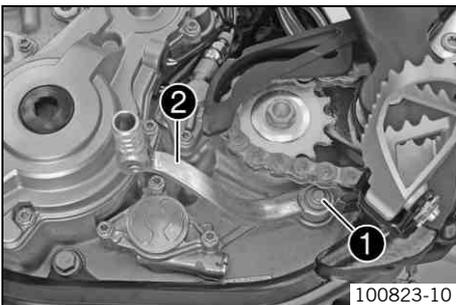

100823-10

- Remove screw ① and take off shift lever ②.

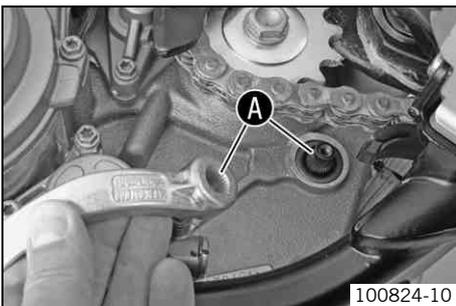

100824-10

- Clean gear teeth ① of the shift lever and shift shaft.
- Mount the shift lever on the shift shaft in the required position and engage the gearing.

i Info


The range of adjustment is limited.
The shift lever must not come into contact with any other vehicle components during the shift procedure.

- Mount and tighten screw.

Guideline

Screw, shift lever	M6	14 Nm (10.3 lbf ft)	Loctite® 243™
--------------------	----	---------------------	----------------------

Carburetor - idle

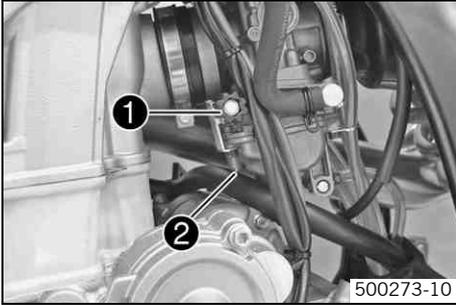


The idle setting of the carburetor has a big influence on the starting behavior, stable idling and the response to throttle opening. That means that an engine with a correctly set idle speed is easier to start than if the idle is set wrongly.

i Info

The carburetor and its components are subject to increased wear caused by engine vibration. Wear can result in malfunctioning.

The idle speed is adjusted with the adjustment screw ❶.
The idle mixture is adjusted with the idle mixture adjustment screw ❷.

Carburetor - adjusting the idle speed ↩

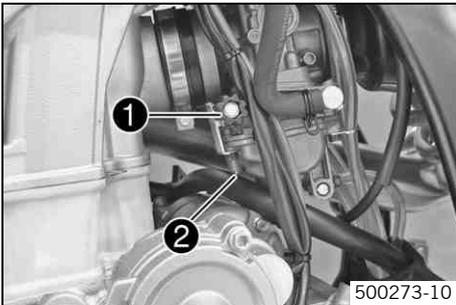

- Screw in idle adjusting screw ❷ all the way and then turn it to the prescribed basic setting.

Guideline

Idle mixture adjusting screw	
Open	1.5 turns

Adjustment tool for mixture control screw (77329034000)	
---	--

- Run the engine until warm.

Guideline

Warm-up time	≥ 5 min
--------------	---------

- Adjust the idle speed using adjusting screw ❶.

Guideline

Choke function deactivated – The choke lever is pushed in to the stop. (↩ p. 11)	
Idle speed	1,550... 1,650 rpm

- Turn idle adjusting screw ❷ slowly clockwise until the idle speed begins to fall.
- Note the position and turn the idle adjusting screw slowly counterclockwise until the idle speed falls.
- Adjust to the point between these two positions with the highest idle speed.

i Info

If there is a large engine speed rise, reduce the idle speed to a normal level and repeat the above steps.

The extreme sport motorcyclist will set the mixture about 1/4 of a turn back from this ideal value (leaner, in a clockwise direction) since the engine becomes hotter in sporting use.

If the procedure described here does not lead to satisfactory results, the cause may be a wrongly dimensioned idling jet.

If you can turn the idle adjusting screw to the end without any change of engine speed, you need to fit a smaller idling jet.

The idle adjusting screw must not be opened more than two turns. If more than two turns are necessary (rich mixture), use a larger idling jet.

After changing the idling jet, repeat the adjusting steps from the beginning.

- Adjust the idle speed using adjusting screw ❶.

Guideline

Choke function deactivated – The choke lever is pushed in to the stop. (↩ p. 11)	
Idle speed	1,550... 1,650 rpm

i Info

Following extreme air temperature or altitude changes, adjust the idle speed again.

Emptying the carburetor float chamber ↩



Danger

Fire hazard Fuel is highly flammable.

- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact between fuel and skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel. Store fuel in a suitable canister according to regulations and keep it out of the reach of children.



Warning


Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.



Info

Carry out this work with a cold engine.

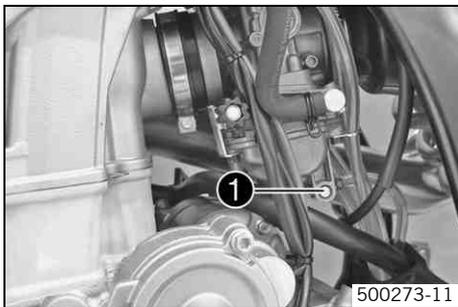

- Turn the handle ❶ of the fuel tap to the **OFF** position. (Figure 500178-10 ↗ p. 11)
- ✓ No more fuel flows from the tank to the carburetor.
- Guide the hose coming down behind the engine into a suitable container.



Info

Water in the float chamber results in malfunctioning.


- Undo the screw ❶ (turn it counterclockwise) a few turns and drain the fuel from the float chamber.
- Tighten screw ❶.

Checking engine oil level



Info

The engine oil level can be checked when the engine is cold or warm.

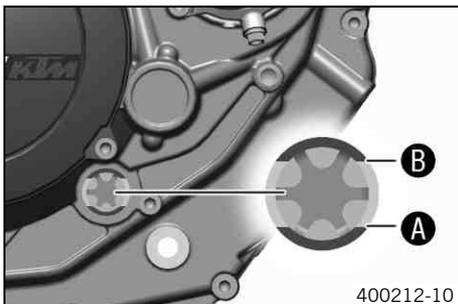

- Stand the motorcycle upright on a horizontal surface.

Condition

The engine is at normal operating temperature.

- Check the engine oil level.



Info

After switching off the engine, wait a minute and then check.

The engine oil level is up to the top edge of the level viewer ❷.

- » If the engine oil is not up to the top edge of the level viewer:
 - Top up the engine oil. (↗ p. 68)

Condition

Engine is cold.

- Check the engine oil level.

The engine oil level is up to the bottom edge ❸ of the level viewer.

- » If the engine oil is not up to the bottom edge of the level viewer:

- Top up the engine oil. (🔧 p. 68)

Changing engine oil and oil filter, cleaning oil screen 🛠️



- Drain the engine oil. 🛠️ (🔧 p. 66)
- Remove the oil filter. 🛠️ (🔧 p. 67)
- Install the oil filter. 🛠️ (🔧 p. 67)
- Fill up with engine oil. 🛠️ (🔧 p. 68)

Draining the engine oil 🛠️



Warning

Danger of scalding Engine oil and gear oil get very hot when the motorcycle is ridden.

- Wear appropriate protective clothing and safety gloves. In case of burns, rinse immediately with lukewarm water.



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

Drain the engine oil only when the engine is warm.

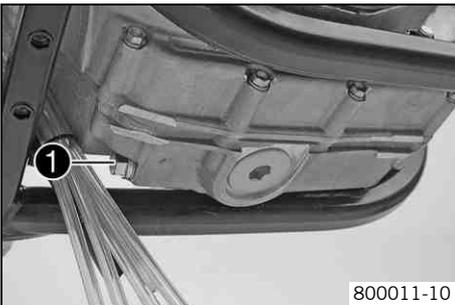

- Stand the motorcycle on its side stand on a horizontal surface.
- Place a suitable container under the engine.
- Remove oil drain plug ❶ with the seal ring.
- Completely drain the engine oil.
- Thoroughly clean the oil drain plug with the magnet.
- Clean the sealing surface on the engine.
- Mount and tighten oil drain plug ❶ with the seal ring.

Guideline

Oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)
----------------------------	---------	------------------------

- Clean the oil screen. 🛠️ (🔧 p. 66)

Cleaning the oil screen 🛠️



Warning

Danger of scalding Engine oil and gear oil get very hot when the motorcycle is ridden.

- Wear appropriate protective clothing and safety gloves. In case of burns, rinse immediately with lukewarm water.




Warning

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

- Place a suitable container under the engine.

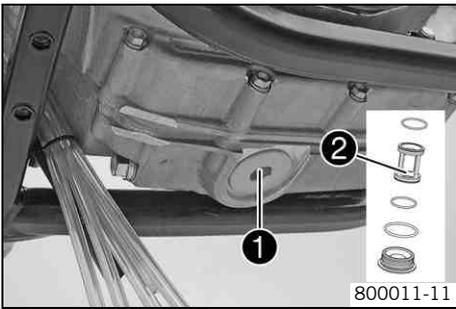

- Loosen screw plug ❶ by striking it lightly with a hammer a few times.
- Remove screw plug ❶ with oil screen ❷ and the O-rings.
- Drain the remaining engine oil.
- Thoroughly clean the parts and sealing surface.
- Mount and tighten screw plug ❶ with oil screen ❷ and the O-rings.

Guideline

Plug, oil screen	M32x1.5	30 Nm (22.1 lbf ft)
------------------	---------	------------------------

Removing the oil filter ↩



Warning

Danger of scalding Engine oil and gear oil get very hot when the motorcycle is ridden.


- Wear appropriate protective clothing and safety gloves. In case of burns, rinse immediately with lukewarm water.




Warning

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

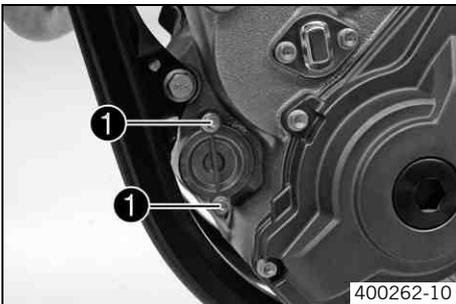

- Place a suitable container under the engine.
- Remove screws ❶. Remove oil filter cover with O-ring.

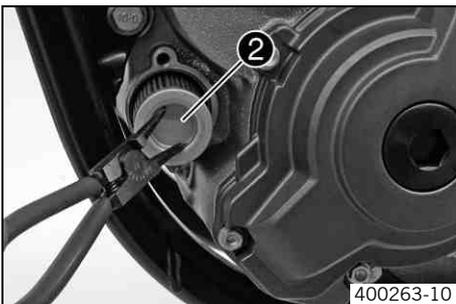


- Pull the oil filter insert ❷ out of the oil filter casing.

Circlip pliers reverse (51012011000)

- Completely drain the engine oil.
- Thoroughly clean parts and sealing area.

Installing the oil filter ↩

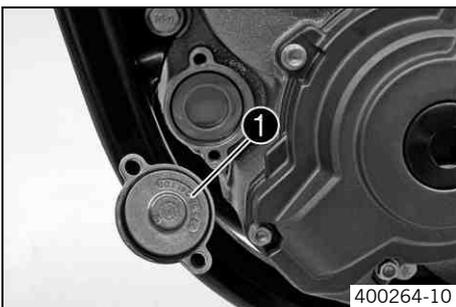

- Lay the motorcycle on its side and fill the oil filter housing to about 1/3 full with engine oil.
- Fill the oil filter with engine oil and place it in the oil filter container.
- Oil the O-ring of the oil filter cover and mount it with oil filter cover ❶.
- Mount and tighten the screws.

Guideline

Screw, oil filter cover	M5	10 Nm (7.4 lbf ft)
-------------------------	----	--------------------


- Stand the motorcycle upright.

Filling up with engine oil



Info

Too little engine oil or poor-quality engine oil results in premature wear to the engine.

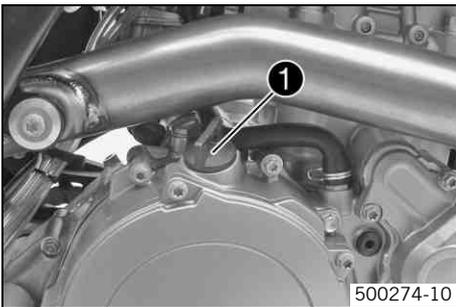

500274-10

- Remove the screw cap **1** on the clutch cover and fill up with engine oil.

Engine oil	1.35 l (1.43 qt.)	Engine oil (SAE 10W/50) ( p. 84)
------------	-------------------	--

- Mount and tighten screw cap **1**.



Danger

Danger of poisoning Exhaust gases are poisonous and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.


- Start the engine and check that it is oil-tight.
- Check the engine oil level. ( p. 65)

Topping up engine oil



Info

Too little engine oil or poor-quality engine oil results in premature wear to the engine.

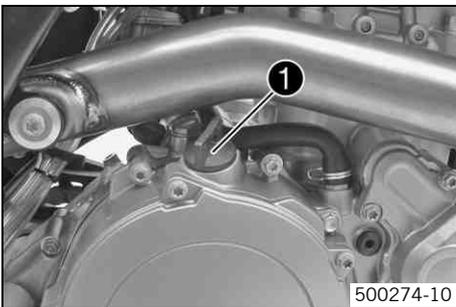

500274-10

- Remove the screw cap **1** on the clutch cover and fill up with engine oil.

Engine oil (SAE 10W/50) ( p. 84)
--

- Mount and tighten screw cap **1**.



Danger

Danger of poisoning Exhaust gases are poisonous and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

- Start the engine and check that it is oil-tight.

Faults	Possible cause	Action
The engine cannot be cranked (electric starter)	Operating error	– Go through the steps of starting the engine. (☛ p. 15)
	Battery discharged	– Recharge the battery. ☛ (☛ p. 51) – Check the charging voltage. ☛ – Check the stall current. ☛ – Check the alternator. ☛
	Fuse blown	– Remove the fuse. (☛ p. 52) – Install the fuse. (☛ p. 52)
	Low external temperature	– Use the battery supplied in the accessories package. Battery (YTX5L-BS) (☛ p. 77)
	Starter relay defective	– Check the starter relay. ☛
	Starter motor defective	– Check the starter motor. ☛
Engine turns but does not start	Operating error	– Go through the steps of starting the engine. (☛ p. 15)
	Motorcycle was out of use for a long time and there is old fuel in the float chamber	– Empty the carburetor float chamber. ☛ (☛ p. 65)
	Fuel feed interrupted	– Check the fuel tank breather. – Clean the fuel tap. – Check/adjust the carburetor components. ☛
	Engine flooded	– Clean and dry the spark plug or replace if necessary.
	Spark plug oily or wet	– Clean and dry the spark plug or replace if necessary.
	Electrode distance (plug gap) of spark plug too wide	– Adjust the plug gap. Guideline Spark plug electrode gap 0.7 mm (0.028 in)
	Fault in ignition system	– Check the ignition system. ☛
	Short-circuit cable in wiring harness frayed, short-circuit button defective	– Check the wiring harness. (visual check) – Check the electrical system.
	Plug connector of CDI control device, pulse generator or ignition coil oxidized.	– Clean the plug connector and treat it with contact spray.
Water in carburetor or jets clogged	– Check/adjust the carburetor components. ☛	
Engine has no idle	Idling jet clogged	– Check/adjust the carburetor components. ☛
	Adjusting screws on carburetor distorted	– Carburetor - adjust the idle speed. ☛ (☛ p. 64)
	Spark plug defective	– Change spark plug.
	Ignition system defective	– Check the ignition coil. ☛ – Check the CDI controller. ☛ – Check the spark plug connector. ☛ – Check the ignition pulse generator. ☛ – Check the alternator. ☛
Engine does not speed up	Carburetor running over because float needle dirty or worn	– Check/adjust the carburetor components. ☛
	Loose carburetor jets	– Check/adjust the carburetor components. ☛
	Ignition system defective	– Check the ignition coil. ☛ – Check the CDI controller. ☛ – Check the spark plug connector. ☛ – Check the ignition pulse generator. ☛ – Check the alternator. ☛

Faults	Possible cause	Action
Engine has a lack of power	Fuel feed interrupted	<ul style="list-style-type: none"> - Check the fuel tank breather. - Clean the fuel tap. - Check/adjust the carburetor components. 🛠️
	Air filter heavily contaminated	<ul style="list-style-type: none"> - Clean the air filter. 🛠️ (📖 p. 59)
	Exhaust system leaky, deformed or too little glass fiber yarn filling in main silencer	<ul style="list-style-type: none"> - Check exhaust system for damage. - Change glass fiber yarn filling of main silencer. 🛠️ (📖 p. 58)
	Valve clearance too little	<ul style="list-style-type: none"> - Set the valve clearance. 🛠️
	Ignition system defective	<ul style="list-style-type: none"> - Check the ignition coil. 🛠️ - Check the CDI controller. 🛠️ - Check the spark plug connector. 🛠️ - Check the ignition pulse generator. 🛠️ - Check the alternator. 🛠️
Engine stalls or pops back into the carburetor	Lack of fuel	<ul style="list-style-type: none"> - Turn the handle ❶ of the fuel tap to the ON position. (Figure 500178-10 📖 p. 11) - Refuel. (📖 p. 17)
	The intake system has an air leak	<ul style="list-style-type: none"> - Check rubber sleeves and carburetor for tightness.
Engine overheats	Too little coolant in cooling system	<ul style="list-style-type: none"> - Check the cooling system for leakage. - Check the coolant level. (📖 p. 56)
	Insufficient airflow	<ul style="list-style-type: none"> - Switch off engine when stationary.
	Radiator fins very dirty	<ul style="list-style-type: none"> - Clean radiator fins.
	Foam formation in cooling system	<ul style="list-style-type: none"> - Drain the coolant. 🛠️ (📖 p. 56) - Refill the coolant. 🛠️ (📖 p. 57)
	Bent radiator hose	<ul style="list-style-type: none"> - Change the radiator hose. 🛠️
High oil consumption	Engine vent hose bent	<ul style="list-style-type: none"> - Route the vent hose without bends or replace it if necessary.
	Engine oil level too high	<ul style="list-style-type: none"> - Check the engine oil level. (📖 p. 65)
	Engine oil too thin (low viscosity)	<ul style="list-style-type: none"> - Change the engine oil and oil filter, and clean the oil screen. 🛠️ (📖 p. 66)
	Piston and cylinder worn	<ul style="list-style-type: none"> - Piston/cylinder - determine the mounting clearance 🛠️
Battery discharged	Battery is not charged by generator	<ul style="list-style-type: none"> - Check the charging voltage. 🛠️ - Check the alternator. 🛠️
	Unwanted power consumer	<ul style="list-style-type: none"> - Check the stall current. 🛠️

Cleaning the motorcycle

Note

Material damage Damage and destruction of components by high-pressure cleaning equipment.

- Never clean the vehicle with high-pressure cleaning equipment or a strong water-jet. The excessive pressure can penetrate electrical components, socket connects, throttle cables, and bearings, etc., and can damage or destroy these parts.



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

If you clean the motorcycle regularly, its value and appearance are maintained over a long period. Avoid direct sunshine on the motorcycle during cleaning.

- Seal the exhaust system to keep water out.
- First remove coarse dirt particles with a gentle spray of water.
- Spray very dirty areas with a normal motorcycle cleaner and then clean with a brush.

Motorcycle cleaner (☛ p. 86)



Info

Use warm water containing normal motorcycle cleaner and a soft sponge.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Empty the carburetor float chamber. 🛠 (☛ p. 65)



Warning

Danger of accidents Reduced braking efficiency due to wet or dirty brakes.

- Clean or dry dirty or wet brakes by riding and braking gently.

- After cleaning, ride a short distance until the engine reaches operating temperature.



Info

The heat produced causes water at inaccessible locations in the engine and the brakes to evaporate.

- Push back the protection covers of the handlebar grips to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled off, oil or grease all moving parts and bearings.
- Clean the chain. (☛ p. 34)
- Treat bare metal parts (except for brake discs and exhaust system) with anti-corrosion materials.

Cleaning and preserving materials for metal, rubber and plastic (☛ p. 86)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Paint cleaner and polish for high-gloss and matte finishes, bare metal and plastic surfaces (☛ p. 87)

- To prevent electrical problems, treat electric contacts and switches with contact spray.

Contact spray (☛ p. 86)

Storage



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact between fuel and skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel. Store fuel in a suitable canister according to regulations and keep it out of the reach of children.



Info

If you want to garage the motorcycle for a longer period, take the following actions.

Before storing the motorcycle, check all parts for function and wear. If service, repairs or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

- Clean the motorcycle. (🔧 p. 71)
- Change the engine oil and oil filter, and clean the oil screen. 🛢️ (🔧 p. 66)
- Check the anti-freeze and coolant level. (🔧 p. 55)
- Drain the fuel from the tanks into a suitable container.
- Empty the carburetor float chamber. 🛢️ (🔧 p. 65)
- Check the tire air pressure. (🔧 p. 50)
- Remove the battery. 🛢️ (🔧 p. 50)
- Recharge the battery. 🛢️ (🔧 p. 51)

Guideline

Storage temperature of battery without direct sunlight.	0... 35 °C (32... 95 °F)
---	--------------------------

- Place the vehicle on a dry storage place that is not subject to large temperature variations.



Info

KTM recommends jacking up the motorcycle.

- Jack up the motorcycle. (🔧 p. 21)
- Cover the vehicle with an air-permeable cover or blanket.



Info

Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.

Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and exhaust system to rust.

Putting into operation after storage

- Remove the motorcycle from the work stand. (🔧 p. 21)
- Install the battery. 🛢️ (🔧 p. 51)
- Refuel. (🔧 p. 17)
- Make checks before putting into operation. (🔧 p. 15)
- Take a test ride.

Design	1-cylinder 4-stroke engine, water-cooled	
Displacement	449.3 cm ³ (27.418 cu in)	
Stroke	60.8 mm (2.394 in)	
Bore	97 mm (3.82 in)	
Compression ratio	12.5:1	
Idle speed	1,550... 1,650 rpm	
Control	DOHC, four valves controlled via cam lever, drive via helical gear pair and tooth-wheel chain	
Valve diameter, intake	40.4 mm (1.591 in)	
Valve diameter, exhaust	31.7 mm (1.248 in)	
Valve clearance, cold, intake	0.07... 0.13 mm (0.0028... 0.0051 in)	
Valve clearance, cold, exhaust	0.12... 0.18 mm (0.0047... 0.0071 in)	
Crankshaft bearing	2 cylinder roller bearing	
Conrod bearing	Needle bearing	
Piston pin bearing	Bronze bush	
Pistons	Forged light alloy	
Piston rings	1 compression ring, 1 oil scraper ring	
Engine lubrication	Pressure circulation lubrication with 3 rotor pumps	
Primary transmission	29:74	
Clutch	APTCTM Antihopping clutch in oil bath/hydraulically activated	
Transmission ratio		
1st gear	18:31	
2nd gear	20:29	
3rd gear	22:27	
4th gear	24:25	
5th gear	26:23	
Alternator	12 V, 42 W	
Ignition	Contactless controlled fully electronic ignition with digital ignition adjustment	
Spark plug	NGK CR 9 EKB	
Spark plug electrode gap	0.7 mm (0.028 in)	
Cooling	Water cooling, permanent circulation of coolant by water pump	
Starting aid	Electric starter	

Capacity - engine oil

Engine oil	1.35 l (1.43 qt.)	Engine oil (SAE 10W/50) (☛ p. 84)
------------	-------------------	-----------------------------------

Capacity - coolant

Coolant	1.2 l (1.3 qt.)	Coolant (☛ p. 84)
		Coolant (mixed ready to use) (☛ p. 84)

Jet, engine case breather	M4	On block	Loctite® 243™
Oil jet, cam lever lubrication	M4	6 Nm (4.4 lbf ft)	Loctite® 243™
Oil jet, piston cooling	M4	4 Nm (3 lbf ft)	Loctite® 243™
Locking screw for bearing	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, bearing bolt of oil pump idler shaft	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, camshaft bearing retaining bracket	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, clutch spring	M5	6.5 Nm (4.79 lbf ft)	–
Screw, ignition pulse generator	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, ignition pulse generator adapter	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, locking lever	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, oil filter cover	M5	10 Nm (7.4 lbf ft)	–
Screw, oil pump cover	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, stator bracket	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, stator cable holder	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, timing train axle retaining bracket	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Oil jet, clutch oil supply	M5x1	6 Nm (4.4 lbf ft)	Loctite® 243™
Nut, cylinder head	M6	10 Nm (7.4 lbf ft)	lubricated with engine oil
Nut, water-pump wheel	M6	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, alternator cover	M6	10 Nm (7.4 lbf ft)	–
Screw, clutch cover	M6	10 Nm (7.4 lbf ft)	–
Screw, clutch slave cylinder	M6	10 Nm (7.4 lbf ft)	–
Screw, engine case	M6	10 Nm (7.4 lbf ft)	–
Screw, exhaust flange	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, ignition pulse generator cable holder	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, oil pump casing	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, shift drum locating	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, shift lever	M6	14 Nm (10.3 lbf ft)	Loctite® 243™
Screw, starter motor	M6	10 Nm (7.4 lbf ft)	–
Screw, valve cover	M6	8 Nm (5.9 lbf ft)	–
Screw, water pump cover	M6	10 Nm (7.4 lbf ft)	–
Stud, cylinder head	M6	10 Nm (7.4 lbf ft)	–
Oil jet, timing chain tensioner	M6x0.6	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, camshaft bearing bridge	M7x1	14 Nm (10.3 lbf ft)	lubricated with engine oil
Screw, clutch cover	M7x1	14 Nm (10.3 lbf ft)	–
Screw, engine case	M7x1	14 Nm (10.3 lbf ft)	–
Plug, crankshaft location	M8	20 Nm (14.8 lbf ft)	–
Screw, engine sprocket	M10	60 Nm (44.3 lbf ft)	Loctite® 243™
Spark plug	M10	10... 12 Nm (7.4... 8.9 lbf ft)	–
Plug, cam lever axle	M10x1	10 Nm (7.4 lbf ft)	–
Plug, oil channel	M10x1	10 Nm (7.4 lbf ft)	–
Screw, camshaft gear	M10x1	50 Nm (36.9 lbf ft)	lubricated with engine oil
Screw, rotor	M10x1	80 Nm (59 lbf ft)	lubricated with engine oil
Screw, unlocking of timing chain tensioner	M10x1	10 Nm (7.4 lbf ft)	–

Nut, cylinder head	M10x1.25	Tightening sequence: Tighten in diagonal sequence. Tightening stage 1 10 Nm (7.4 lbf ft) Tightening stage 2 30 Nm (22.1 lbf ft) Tightening stage 3 50°	lubricated with engine oil
Stud, cylinder head	M10x1.25	20 Nm (14.8 lbf ft)	–
Oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)	–
Screw-in studs for clutch cover	M12x1.5	20 Nm (14.8 lbf ft)	–
Axle guide rail for timing chain	M14x1	15 Nm (11.1 lbf ft)	–
Axle tension rail for timing chain	M14x1	15 Nm (11.1 lbf ft)	–
Nut, compensating sprocket	M14x1	20 Nm (14.8 lbf ft)	Loctite® 243™
Oil suction pipe	M14x1	15 Nm (11.1 lbf ft)	Loctite® 243™
Oil pressure regulator valve plug	M14x1.5	18 Nm (13.3 lbf ft)	–
Nut, inner clutch hub	M18x1.5	80 Nm (59 lbf ft)	Loctite® 243™
Plug, timing chain tensioner	M24x1.5	25 Nm (18.4 lbf ft)	–
Nut, freewheel hub	M27x1	80 Nm (59 lbf ft)	Loctite® 243™
Nut, primary gear	M27x1	80 Nm (59 lbf ft)	Loctite® 243™
Plug, oil screen	M32x1.5	30 Nm (22.1 lbf ft)	–

Carburetor type	KEIHIN FCR-MX 41
Carburetor identification number	4125M
Needle position	6th position from top
Idle mixture adjusting screw	
Open	1.5 turns
Pump membrane stop	2.15 mm (0.0846 in)
Hot start button	
Diameter of bore in carburetor body	2.5 mm (0.098 in)
Main jet	185
Jet needle	OBDTQ
Idling jet	42
Idle air jet	100
Cold start jet	85

Frame	Central tube frame made of chrome molybdenum steel tubing
Fork	WP Suspension Up Side Down 4860 MXMA CC
Suspension travel	
Front	280 mm (11.02 in)
Rear	310 mm (12.2 in)
Fork offset	
Front marking	14 mm (0.55 in)
Rear marking	16 mm (0.63 in)
Shock absorber	WP Suspension PDS 5018 DCC
Brake system	
Front	Single disc brake with radially screwed four-piston fixed caliper, floating brake disc
Rear	Single disc brake with single-piston floating caliper, fixed brake disc
Brake discs - diameter	
Front	310 mm (12.2 in)
Rear	220 mm (8.66 in)
Brake discs - wear limit	
Front	4.5 mm (0.177 in)
Rear	3.5 mm (0.138 in)
Tire air pressure	
Front	1.6 bar (23 psi)
Rear	1.6 bar (23 psi)
Final drive	14:48
Chain	5/8 x 1/4"
Rear sprockets available	38, 40, 42, 45, 48, 49, 50, 51, 52
Steering head angle	63.5°
Wheelbase	1,475±10 mm (58.07±0.39 in)
Seat height unloaded	920 mm (36.22 in)
Ground clearance unloaded	300 mm (11.81 in)
Weight without fuel, approx.	111.5 kg (245.8 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)
Maximum permissible overall weight	335 kg (739 lb.)

3Ah battery	YTX4L-BS	Battery voltage: 12 V Nominal capacity: 3 Ah maintenance-free
Battery	YTX5L-BS	Battery voltage: 12 V Nominal capacity: 4 Ah Maintenance-free

Front tire	Rear tire
125/80 R 420 TL Dunlop KR106	170/55 R 17 TL Dunlop KR108
Additional information is available in the Service section under: http://www.ktm.com	

Capacity - fuel

Total fuel tank capacity, approx.	8.2 l (2.17 US gal)	Super unleaded (ROZ 95 / RON 95 / PON 91) (☛ p. 85)
-----------------------------------	---------------------	---

Fork part number	14.18.7J.18
Fork	WP Suspension Up Side Down 4860 MXMA CC
Compression damping	
Standard	12 clicks
Rebound damping	
Standard	12 clicks
Spring length with preload spacer(s)	482 mm (18.98 in)
Spring rate	
Weight of rider: 75... 85 kg (165... 187 lb.)	4.6 N/mm (26.3 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	4.8 N/mm (27.4 lb/in)
Gas pressure	1.2 bar (17 psi)
Fork length	920 mm (36.22 in)

Capacity - fork oil

Oil capacity per cartridge	195 ml (6.59 fl. oz.)	Fork oil (SAE 5) (☛ p. 84)
Oil capacity fork leg without cartridge	400 ml (13.52 fl. oz.)	Fork oil (SAE 5) (☛ p. 84)

Shock absorber part number	12.18.7J.15
Shock absorber	WP Suspension PDS 5018 DCC
Compression damping, low-speed	
Standard	10 clicks
Compression damping, high-speed	
Standard	1.5 turns
Rebound damping	
Standard	20 clicks
Spring preload	11 mm (0.43 in)
Spring rate	
Weight of rider: 75... 85 kg (165... 187 lb.)	76 N/mm (434 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	80 N/mm (457 lb/in)
Spring length	250 mm (9.84 in)
Gas pressure	10 bar (145 psi)
Static sag	15... 20 mm (0.59... 0.79 in)
Riding sag	80... 90 mm (3.15... 3.54 in)
Fitted length	403 mm (15.87 in)
Damper oil	Shock absorber oil (SAE 2,5) (50180342S1) (☛ p. 85)

Spoke nipple, front wheel	M4.5	5... 6 Nm (3.7... 4.4 lbf ft)	–
Spoke nipple, rear wheel	M5	5... 6 Nm (3.7... 4.4 lbf ft)	–
Remaining nuts, chassis	M6	15 Nm (11.1 lbf ft)	–
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)	–
Screw, ball joint of push rod on foot brake cylinder	M6	10 Nm (7.4 lbf ft)	–
Screw, front brake disc	M6	14 Nm (10.3 lbf ft)	–
Screw, rear brake disc	M6	14 Nm (10.3 lbf ft)	–
Screw, shock absorber adjusting ring	M6	5 Nm (3.7 lbf ft)	–
Nut, rear sprocket screw	M8	35 Nm (25.8 lbf ft)	Loctite® 243™
Nut, rim lock	M8	10 Nm (7.4 lbf ft)	–
Remaining nuts, chassis	M8	30 Nm (22.1 lbf ft)	–
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)	–
Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)	–
Screw, engine brace	M8	33 Nm (24.3 lbf ft)	–
Screw, fork stub	M8	15 Nm (11.1 lbf ft)	–
Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)	–
Screw, subframe	M8	35 Nm (25.8 lbf ft)	Loctite® 243™
Screw, top steering stem	M8	17 Nm (12.5 lbf ft)	Loctite® 243™
Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)	–
Engine attachment bolt	M10	60 Nm (44.3 lbf ft)	–
Remaining nuts, chassis	M10	50 Nm (36.9 lbf ft)	–
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)	–
Screw, handlebar support	M10	40 Nm (29.5 lbf ft)	Loctite® 243™
Screw, front brake caliper	M10x1.25	40 Nm (29.5 lbf ft)	Loctite® 243™
Screw, bottom shock absorber	M12	80 Nm (59 lbf ft)	Loctite® 243™
Screw, top shock absorber	M12	80 Nm (59 lbf ft)	Loctite® 243™
Nut, seat fixing	M12x1	20 Nm (14.8 lbf ft)	–
Nut, swingarm pivot	M16x1.5	100 Nm (73.8 lbf ft)	–
Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)	–
Screw, bottom steering head	M20x1.5	60 Nm (44.3 lbf ft)	Loctite® 243™
Screw, top steering head	M20x1.5	10 Nm (7.4 lbf ft)	–
Screw-in nozzles, cooling system	M20x1.5	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, front wheel spindle	M24x1.5	45 Nm (33.2 lbf ft)	–

Components

1	Battery
2	Generator
3	Ignition coil
4	Pulse generator
5	Voltage regulator/rectifier
6	Electric starter button
7	Starter relay
8	Starter motor
9	Short circuit button
10	Throttle position sensor
11	Ignition curve plug connection
12	CDI controller

Cable colors

black	Black
black-white	Black-white
brown	Brown
brown-white	Brown-white
blue	Blue
blue-white	Blue-white
green	Green
grey	Gray
grey-black	Gray-black
red	Red
red-white	Red-white
white	White
yellow	Yellow
yellow-black	Yellow-black

Brake fluid DOT 4 / DOT 5.1

According to

- DOT

Guideline

- Use only brake fluid that complies with the specified standards (see specifications on the container) and that possesses the corresponding properties. KTM recommends **Castrol** and **Motorex®** products.

Supplier

Castrol

- **RESPONSE BRAKE FLUID SUPER DOT 4**

Motorex®

- **Brake Fluid DOT 5.1**

Coolant

Guideline

- Use only suitable coolant (also in countries with high temperatures). Use of low-quality antifreeze can lead to corrosion and foaming. KTM recommends **Motorex®** products.

Mixture ratio

Antifreeze protection: -25... -45 °C (-13... -49 °F)	50 % corrosion inhibitor/antifreeze 50 % distilled water
--	---

Coolant (mixed ready to use)

Antifreeze	-40 °C (-40 °F)
------------	-----------------

Supplier

Motorex®

- **Anti Freeze**

Engine oil (SAE 10W/50)

According to

- JASO T903 MA (☞ p. 88)
- SAE (☞ p. 88) (SAE 10W/50)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties. KTM recommends **Motorex®** products.

Synthetic engine oil

Supplier

Motorex®

- **Cross Power 4T**

Fork oil (SAE 5)

According to

- SAE (☞ p. 88) (SAE 5)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties. KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Racing Fork Oil**

Hydraulic fluid (15)

According to

- ISO VG (15)

Guideline

- Use only hydraulic fluid that complies with the specified standards (see specifications on the container) and that possesses the corresponding properties. KTM recommends **Motorex®** products.

Supplier**Motorex®**

- Hydraulic Fluid 75

Shock absorber oil (SAE 2,5) (50180342S1)**According to**

- SAE (p. 88) (SAE 2,5)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that possesses the corresponding properties.

Super unleaded (ROZ 95 / RON 95 / PON 91)**According to**

- DIN EN 228 (ROZ 95 / RON 95 / PON 91)

Air filter cleaner

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Twin Air Dirt Bio Remover**

Air filter oil

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Air Filter Oil Spray 655**

Chain cleaner

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Chain Clean 611**

Cleaning and preserving materials for metal, rubber and plastic

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Protect & Shine 645**

Contact spray

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Accu Contact**

Long-life grease

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Fett 2000**

Motorcycle cleaner

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Moto Clean 900**

Off-road chain spray

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Chain Lube 622**

Paint cleaner and polish for high-gloss and matte finishes, bare metal and plastic surfaces

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Clean & Polish**

Universal oil spray

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Joker 440 Universal**

JASO T903 MA

Different technical development directions required a new specification for 4-stroke motorcycles – the JASO T903 MA Standard. Earlier, engine oils from the automobile industry were used for 4-stroke motorcycles because there was no separate motorcycle specification. Whereas long service intervals are demanded for automobile engines, high performance at high engine speeds are in the foreground for motorcycle engines. With most motorcycles, the gearbox and the clutch are lubricated with the same oil as the engine. The JASO MA Standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

A		
Accessories	5	
Air filter		
cleaning	59	
installing	59	
removing	59	
Air filter box lid		
installing	59	
removing	58	
Anti-freeze		
checking	55	
Antihopping clutch		
adjusting	61	
B		
Basic suspension setting		
checking with rider's weight	21	
Battery		
Installing	51	
recharging	51	
removing	50	
Brake discs		
checking	38	
Brake fluid		
front brake, adding	39	
rear brake, adding	44	
Brake fluid level		
front brake, checking	39	
rear brake, checking	43	
Brake linings		
front brake, changing	42	
front brake, checking	40	
front brake, installing	41	
front brake, removing	40	
rear brake, changing	46	
rear brake, checking	44	
rear brake, installing	45	
rear brake, removing	45	
C		
Carburetor		
adjusting idle	64	
emptying the float chamber	65	
idle	64	
Chain		
cleaning	34	
Chain guide		
adjusting	38	
Chain tension		
adjusting	36	
checking	34	
Chain wear		
checking	35	
Chassis number		9
Choke		11
Cleaning		71
Clutch		60
adjusting	61	
fluid level, checking	62	
fluid, changing	62	
Clutch lever		10
basic position, adjusting	60	
Compression damping		
fork, adjusting	25	
Compression damping, high-speed		
shock absorber, adjusting	21	
Compression damping, low-speed		
shock absorber, adjusting	22	
Coolant		
draining	56	
refilling	57	
Coolant level		
checking	55-56	
Cooling system		55
E		
Electric starter button		10
Engine		
running-in	14	
Engine number		9
Engine oil		
changing	66	
draining	66	
refilling	68	
topping up	68	
Engine oil level		
checking	65	
Environment		6
F		
Filler cap		
closing	11	
opening	11	
Filling up		
fuel	17	
Foot brake lever		12
basic position, adjusting	43	
free travel, checking	43	
Fork		
basic setting, checking	25	
Fork legs		
bleeding	26	
dust boots, cleaning	27	
installing	29	
removing	29	
Fork offset		28
adjusting	29	
Fork protection		
installing	27	
Fork protector		
removing	27	
Front fender		
installing	31	
removing	31	

Front wheel
installing 47
removing 46

Fuel tank
installing 54
removing 53

Fuel tap 11

Fuel, oils, etc. 5

Fuse
installing 52
removing 52

H

Hand brake lever 10
basic position, adjusting 39
free travel, checking 38

Handlebar position 32
adjusting 32

Hot start lever 10

I

Ignition curve
changing 53
plug connection 53

L

Lower triple clamp
installing 30
removing 30

M

Main silencer
changing glass fiber yarn filling 58
glass fiber yarn filling, installing 58
glass fiber yarn filling, removing 58
installing 57
removing 57

Maintenance 5

Motorcycle
cleaning 71

O

Oil filter
changing 66
installing 67
removing 67

Oil screen
cleaning 66

Owner's manual 6

P

Play in throttle cable
adjusting 33
checking 33

Plug-in stand 12

Putting into operation
advice on first use 13
after storage 72
checks before putting into operation 15

R

Rear sprocket / engine sprocket
checking for wear 35

Rear wheel
installing 48
removing 48

Rebound damping
fork, adjusting 26
shock absorber, adjusting 22

Riding sag
adjusting 24

S

Seat
mounting 53
removing 53

Service schedule 18-20

Shift lever 12
basic position, adjusting 63
basic position, checking 63

Shock absorber
installing 25
removing 25
riding sag, checking 23
static sag, checking 23

Short circuit button 10

Spare parts 5

Spoke tension
checking 50

Spring preload
shock absorber, adjusting 24

Start number plate
dismounting 32
installing 32

Starting 15

Steering head bearing
greasing 31

Steering head bearing play
adjusting 28
checking 27

Storage 72

T

Technical data
carburetor 76
chassis 77-78
chassis tightening torques 81
engine 73
engine tightening torques 74-75
fork 79
shock absorber 80

Throttle cable route
checking 33

Tire air pressure
checking 50

Tire condition
checking 49

Transport	5
Troubleshooting	69-70
Type label	9
U	
Use definition	5
W	
Warranty	5
Wiring diagram	82-83
Work rules	5



3211516en



©2009 Photo: Mitterbauer



KTM-Sportmotorcycle AG
5230 Mattighofen/Austria
<http://www.ktm.com>